ACTIVE DIFFERENTIAL PROBES INSTRUCTION MANUAL TT-SI 8000 SERIES











Safety Summary

To avoid personal injury and/or product damage, review and comply with the following safety precautions. These precautions apply to both operating and maintenance personnel and must be followed during all phases of operation, service, and repair of this probe.



A **WARNING** statement calls attention to an operating procedure, practice, or condition, which, if not followed correctly, could result in injury or death to personnel.



A **CAUTION** statement calls attention to an operating procedure, practice, or condition, which, if not followed correctly, could result in damage to or destruction of parts or the entire product.

Do Not Work Alone

Do not work alone when working with high voltages.

Inspect the Probe

Inspect the probe and accessories for cracks and frayed or broken leads before each use. If defects or damages are noted, DO NOT USE the probe.

Dry Conditions

Hands, shoes, floor, and work bench must be dry. Avoid making measurements under humidity, dampness, or other environmental conditions that might affect safety.

Do Not Remove the Probe's Casing

Removal of the probe's casing may expose you to electric shock. If necessary, disconnect the inputs and outputs of the probe before opening the case.

Hazardous Contact

To avoid injury, remove jewelry such as rings, watches, and other metallic objects. Do not touch exposed connections and components when power is present.

Unexpected Charges

Hazardous voltages may be present in unexpected locations in circuitry being tested when a fault condition in the circuit exists.

Capacitors inside the instrument may retain a charge even if the instrument is disconnected from its source of supply.

Use Only in Office-Type Indoor Setting

The probe is designed to be used in office-type indoor environments.

Do not operate the probe:

- In the presence of noxious, corrosive, flammable fumes, gases, vapors, chemicals, or finely-divided particulates.
- In environments where there is a danger of any liquid spilled on the probe.
- In air temperatures exceeding the specified operating temperatures.
- In atmospheric pressures outside the specified altitude limits or where the surrounding gas is not air.

www.testec.de

Man 8000 1022



Not for Critical Applications

This probe is not authorized for use in contact with the human body or for use as a component in a life-support device or system.

Do Not Substitute Parts

Do not install substitute parts or perform any unauthorized modification to the instrument.

Only Qualified Personnel

Only qualified personnel should use this probe. This differential voltage probe is designed to be used by personnel who are trained, experienced, or otherwise qualified to recognize hazardous situations and who are trained in the safety precautions necessary to avoid possible injury when using such a device.

Observe Maximum Working Voltage

Do not use any probe above its maximum working voltage ranges. See specifications on page 7.

Use Proper Power Source

Do not operate this probe from a power source that applies more than the voltage specified.

Must be Grounded

This probe is grounded by the shell of the BNC connector through the grounding conductor of the power cord of the measurement instrument. Before making connections to the input leads of this probe, ensure that the output BNC connector is attached to the BNC connector of the measurement instrument, and that the measurement instrument is properly grounded. Whenever it is likely that the ground protection is impaired, you must make the instrument inoperative and secure it against any unintended operation.

Terms and Symbols

The following symbols appear on the product or in its documentation:

=== Direct voltage

Both direct and alternating voltage

Caution, possibility of electric shock

Caution, see documentation for details

Earth Ground





Definitions

Measurement Category II (CAT II)

refers to local-level electrical distribution, such as that provided by a standard wall outlet or plug-connected equipment. Examples of CAT II measurements would be household appliances, portable tools, and similar modules.

Measurement Category III (CAT III)

refers to measurements on hard-wired equipment in fixed installations, distribution boards, and circuit breakers that form part of a building wiring installation. Other examples are wiring, including cables, bus bars, junction boxes, switches, socket outlets in the fixed installation, and stationary motors with permanent connections to fixed installations

Pollution Degree 2

refers to an operation environment where normally only dry, non-conductive pollution occurs. Temporary conductivity caused by condensation can be expected.

Working CAT rating is equal to that of the lowest rated element within the test set-up.

Compliance Statements

EC Declaration of Conformity

The product conforms to the applicable European Union requirements per IEC 61010-031:2015 Safety requirements

for electrical equipment for measurement, control and laboratory use. Part 31: Safety requirements for hand-held probe assemblies for electrical measurement and test.

EU RoHS Compliance

The probe and accessories conform to the 2011/65/EU RoHS2 Directive.

Disposal of Old Electrical & Electronic Equipment



(Applicable in the European Union and other European countries with separate collection systems). This product is subject to Directive 2012/19/EU of the European Parliament and the Council of the European Union on waste electrical and electronic equipment (WEEE), and in jurisdictions adopting that Directive, is marked as being put on the market after August 13, 2005, and should not be disposed of as unsorted municipal waste. Please utilize your local WEEE collection facilities in the disposition of this product and

otherwise observe all applicable requirements.

This probe is in compliance with IEC 61010-031:2015 CAT III, Pollution Degree 2.

Tél. 01 47 95 99 45 Fax. 01 47 01 16 22

www.testec.de

Man 8000 1022



1 Introduction

Overview

The TT-SI 8000 differential probe series allows safe, accurate measurement between two voltage points where neither point is referenced to ground. The probes are designed for high sensitivity measurements up to 200 MHz bandwidth and up to 7000V differential voltage. The probes are compatible with oscilloscopes from all major manufacturers.

Features

- Meets IEC 61010-1:2015 safety standard
- Selectable attenuation settings
- Offset setting function
- 5 MHz bandwidth limit function to remove noise and interferences.
- Overrange sound & light alarm
- High accuracy (±2%)
- Powered through USB or USB to mains adapter
- Over range indicator LED

Initial Inspection

This unit is tested prior to shipment. It is therefore ready for immediate use upon receipt. An initial physical inspection should be made to ensure that no damage has been sustained during shipment. After the inspection, verify the contents of the shipment.

Delivery Content

- 1 x differential probe TT-SI 8000 series
- 2 x pincer clips, black & red TT-SI GR82
- 2 x hook clips, black & red TT-SI GR81
- 2 x alligator clips, black & red TT-SI CR81 (not TT-SI 8010A & B)
- 2 x alligator clips, black & red TT-SI CR82 (TT-SI 8010A & B only)
- 2 x 4mm test leads, black & red TT-SI TL8
- 1 x insulated BNC cable, 100 cm TT-SI BN8
- 1 x USB power cable, 150cm TT-SI USB8
- 1 x USB power adapter 5V/1A EU version TT-SI NT8
- 1 x User manual

www.testec.de



Model Overview

Model	Max. Input Differential Voltage	Bandwidth	Attenuation
TT-SI 8071	700V	100MHz	x10/x100
TT-SI 8050	1500V	70MHz	x50/x500
TT-SI 8051	1500V	100MHz	x50/x500
TT-SI 8052	1500V	200MHz	x50/x500
TT-SI 8110	2800V	100MHz	x100/x1000
TT-SI 8010A	7000V	70MHz	x100/x1000
TT-SI 8010B	7000V	100MHz	x100/x1000

2 Using the Probe



WARNING

At the time of powering on the probe, the input leads must not be connected to an item to be tested. Never operate the probe with the case open.

CALITION



This probe is used to carry out differential measurements between two points on the circuit under test. This probe is not designed for electrically insulating the circuit under test or the measuring instrument.

Getting Started

- 1. Connect the BNC output connector to the vertical input of a general purposed oscilloscope. The oscilloscope must have a ground referenced.
- 2. Connect power through USB or USB-adapter.
- 3. LED's will turn on.
- 4. The default factory setting is high attenuation ratio, FULL bandwidth and audible alarm is on. The probe has an automatic memory function, so it saves the state before power off.


Test Procedure

Man 8000 1022

- 1. Connect the BNC output connector to the vertical input of the oscilloscope.
- 2. Set the attenuation setting on the oscilloscope to match the probe setting.
- 3. Connect the input of probe to a function generator. Then select a square-wave output of 10 V amplitude and 100 kHz frequency.
- 4. The square-wave will be displayed on the screen of the oscilloscope. The oscilloscope should show the same voltage and frequency as the function generator. This indicates the probe is working properly.



3 Product Overview

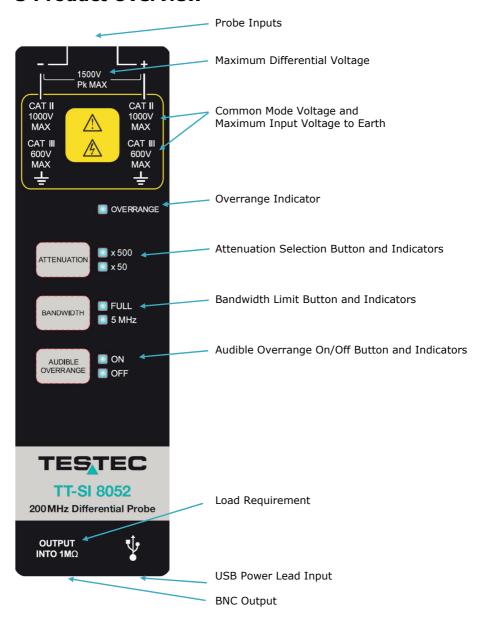

Man 8000 1022



www.testec.de



4 Specifications

		TT-9	SI 8071			TT-S	I 8110			
Bandwidth (-3dB)				TT-SI 8050	70MHz			TT-SI 8010A	70MHz	
		100MHz		TT-SI 8051	100MHz	100MHz				
				TT-SI 8052	200MHz			TT-SI 8010B	100MHz	
								TT 67 00104	45	
				TT-SI 8050	≤5ns	├		TT-SI 8010A	≤5ns	
Rise Time		≤5ns		TT-SI-8051	≤3,5ns	≤3.5ns		TT-SI 8010B	≤3,5ns	
				TT-SI 8052	≤1,75ns					
DC-Accuracy	DC-Accuracy		±2%	±2%		±2%		±2%		
Attenuation Rat	Attenuation Ratio		0/x100	x50/x500		x100/x1000		x100/x1000		
Maximum Input	Voltage	x10	±70V	x50	±150V	x100	±280V	x100	±700V	
Differential Mod (DC+Peak AC)	le	×100	±700V	x500	±1500V	×1000	±2800V	×1000	±7000V	
Maximum Input Voltage Common Mode		±700V		±150	±1500V		800V	±7000V		
(DC+Peak AC) Maximum Input Voltage each Side to Ground (Vrms)				600V CA 1000V C		600V CAT III 1000V CAT II		1000V CAT III 2300V		
Input	Single- Ended to Ground	2	.5ΜΩ	5MΩ	Σ	5ΜΩ		20ΜΩ		
Impedance Between Inputs		5ΜΩ		10ΜΩ		10ΜΩ		40ΜΩ		
Input Capacitance	Single- Ended to Ground	<4pF		<4pF		<4pF		<5pF		
Capacitance	Between Inputs	<2pF		<2pF		<2pF		<2.5pF		
DC		>80dB		>80dB		>80dB		>80dB		
CMRR	100kHz	>	60dB	>60dB		>60dB		>60dB		
	1MHz	>	50dB	>500	dΒ	>50dB		>50dB		
		70V	<20mV	150V	<50mV	280V	<100mV	700V	<200mV	
Input referred I	Noise	700V	<120mV	1500V	<300mV	2800V	<600mV	7000V	<1.2V	
Differential Ove	rvoltage	x10	≥70V	x50	≥150V	x100	≥280V	x100	≥700V	
Detection Level		x100	≥700V	x500	≥1500V	x1000	≥2800V	x1000	≥7000V	
Propagation	Probe	approx. 9ns								
Delay	BNC Cable	approx. 5ns								
Bandwidth Limi	t Filters	≥-3dB@5MHz								
Weight		230g								
Input Lead Leng	gth	28cm (17cm for TT—SI 8052)								
Automatic Save		Yes								
Offset Setting Function			Yes (when set in test mode)							
Termination Load		≥100kΩ								
Power Supply			USB 5V/1A and 220V Adapter							
Safety standard		EN61010-031: 2015								

Specifications are subject to change without notice. All specifications apply to the unit after a temperature stabilization time of 20 minutes over an ambient range of 25° C \pm 5° C.




Man_8000_1022






5 Voltage Derating Curve

Derating Curve TT-SI 8071

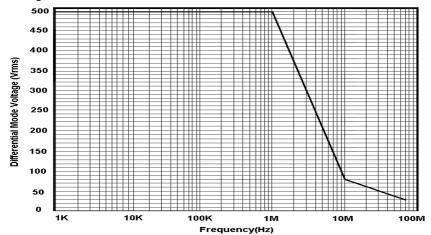


Derating Curve TT-SI 8050, 8051, 8052

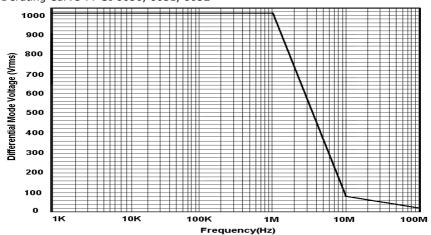




Derating Curve TT-SI 8110

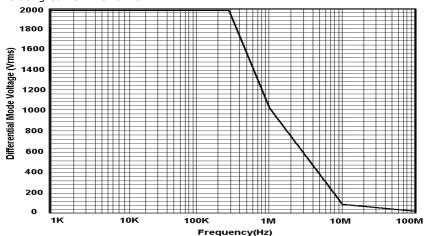

Derating Curve TT-SI 8010A, 8010B

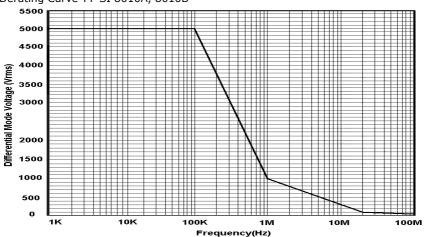




6 Accessories Description




TT-SI CR81 - Alligator Clips one pair black and red 1000V CAT III / 600V CAT IV




TT-SI CR82 - Alligator Clips one pair black and red 1000V CAT III / 600V CAT IV

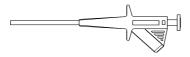


TT-SI GR82 - Pincer Clips one pair black and red 1000V CAT III

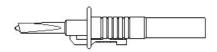

TT-SI GR81 - Hook Clips one pair black and red 1000V CAT III

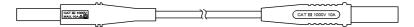


TT-SI TL8 - Extension Test Leads Leads 4mm, one pair black and red 1000V CAT III, $100\,\mathrm{cm}$

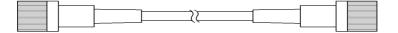

TT-SI BN8 - BNC Output Lead, 100cm



TT-SI USB8 - USB Power Lead, 150cm

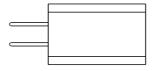

TT-SI NT8 - USB Mains Adapter 5V/1A - EU version

www.testec.de

Man_8000_1022



7 Cleaning

This probe does not require any particular cleaning. If necessary, clean the case with a soft cloth.



WARNING

Dry the probe thoroughly before attempting to make voltage measurements.



CAUTION

Avoid immersing or using abrasive cleaners or solvents containing Benzene (or similar solvents) on the probe as these can cause deterioration of the probe body and cables.



8 Service & Warranty Information

Limited One-Year Warranty

Testec Elektronik GmbH warrants these products to be free from defective material or workmanship for a period of 1 year from the date of original purchase. Under this warranty, Testec Elektronik GmbH is limited to repairing the defective device when returned to the factory, shipping charges prepaid, within the warranty period.

Units returned to Testec Elektronik GmbH that have been subject to abuse, misuse, damage, or accident, or have been connected, installed, or adjusted contrary to the instructions furnished by Testec Elektronik GmbH, or that have been repaired by unauthorized persons, will not be covered by this warranty.

Testec Elektronik GmbH reserves the right to discontinue models, change specifications, price, or design of this device at any time without notice and without incurring any obligation whatsoever.

The purchaser agrees to assume all liabilities for any damages and/or bodily injury which may result from the use or misuse of this device by the purchaser, his employees, or agents.

This warranty is in lieu of all other representations or warranties expressed or implied and no agent or representative of Testec Elektronik GmbH is authorized to assume any other obligation in connection with the sale and purchase of this device.

Service

If you have a need for repair services, technical, or sales support, please contact us:

Testec Elektronik GmbH Voltastr. 8-10 63303 Dreieich / Germany

Tel.: +49 (0) 69 - 9433350 E-Mail: service@testec.de

www.testec.de



Aktive Differential-Tastköpfe Übersicht Overview

Тур	Attenuation Ratio	Bandwidth	DC-Accuracy	max. Input Voltage Differential Range (DC + Peak AC)
Series 7000				
TT-SI 7002	x20/x50/x200	25MHz	2%	±70V/±175V/±700V
TT-SI 7005	x1/x5/x10	60MHz	2%	±3,5V/±18V/±35V
Series 8000				
TT-SI 8071	x10/x100	100 MHz	2%	±70V/±700V
TT-SI 8050	x50/x500	70MHz	2%	±150V/±1500V
TT-SI 8051	x50/x500	100 MHz	2%	±150V/±1500V
TT-SI 8052	x50/x500	200 MHz	2%	±150V/±1500V
TT-SI 8110	x100/x1000	100 MHz	2%	±280V/±2800V
TT-SI 8010A	x100/x1000	70MHz	2%	±700V/±7000V
TT-SI 8010B	x100/x1000	100 MHz	2%	±700V/±7000V
Series 9000				
TT-SX 9001	x10/x100	30MHz	2%	±70V/±700V
TT-SX 9002	x20/x200	30MHz	2%	±140V/±1400V
Series SX				
TT-SX 200	x10	200 MHz	2%	±60V

Technische Änderungen vorbehalten | All specifications and characteristics are subject to change without notice





TT-SI 8XXX Differential Probe User's Manual

© 2022 TESTEC Elektronik GmbH. All rights reserved.

Unauthorized duplication of TESTEC documentation materials is strictly prohibited. Customers are permitted to duplicate and distribute TESTEC documentations for internal educational purposes