

USB Type-C Display

Specifications



A line drawing showing the bottom of the oven. A red line points from a red circle with the number '1' to a small, rectangular button located between two circular holes on the bottom panel.

1. USB Type-C Connector
2. OSD Button

[illegible]