


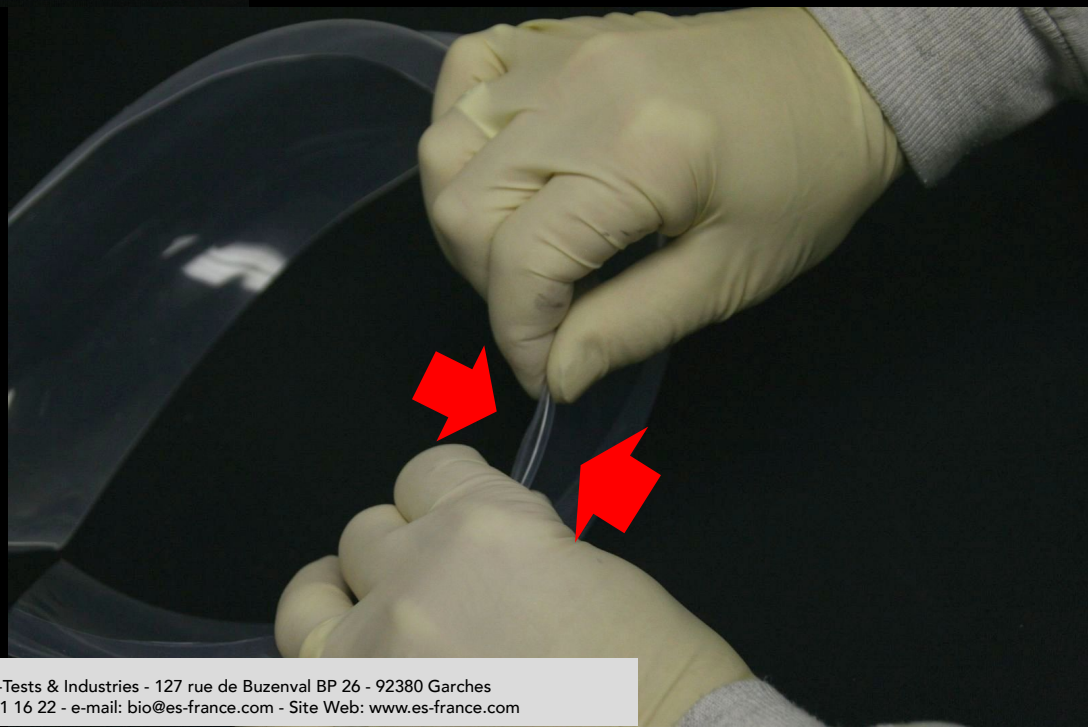


Grasp liner and crease well insert edge.




1

Insert liner into upper housing with opening of liner toward the front of the system.

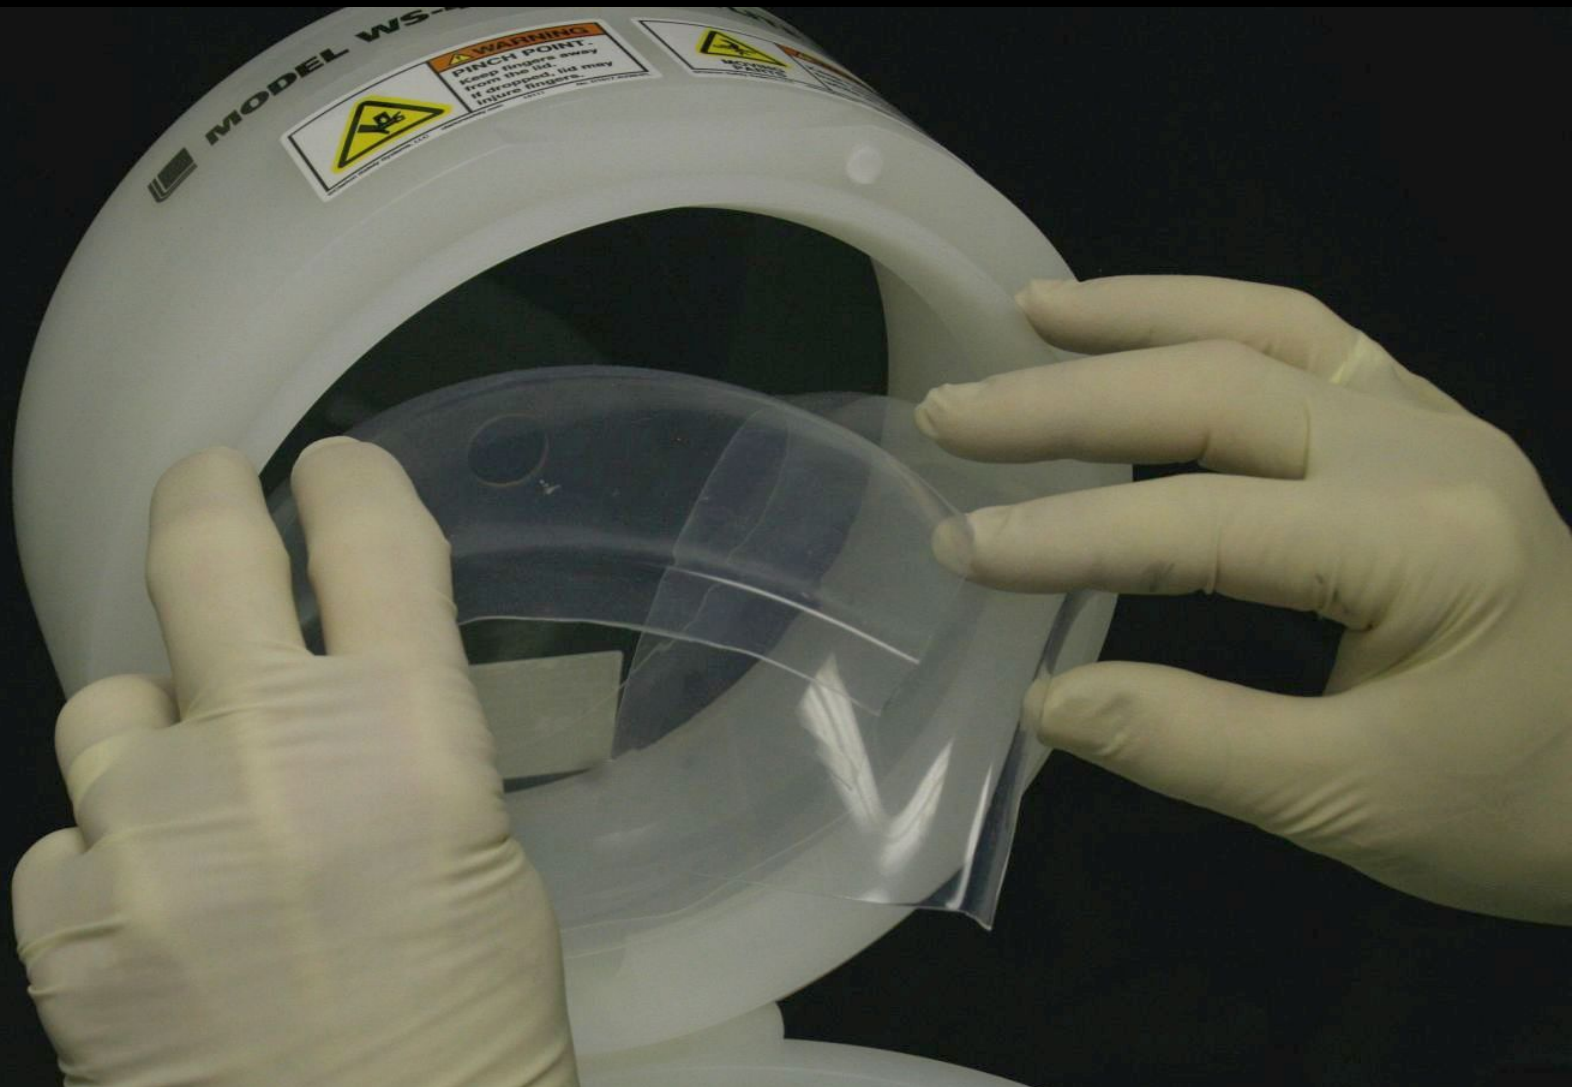


2

Press liner into well area, working around toward the front of the system.

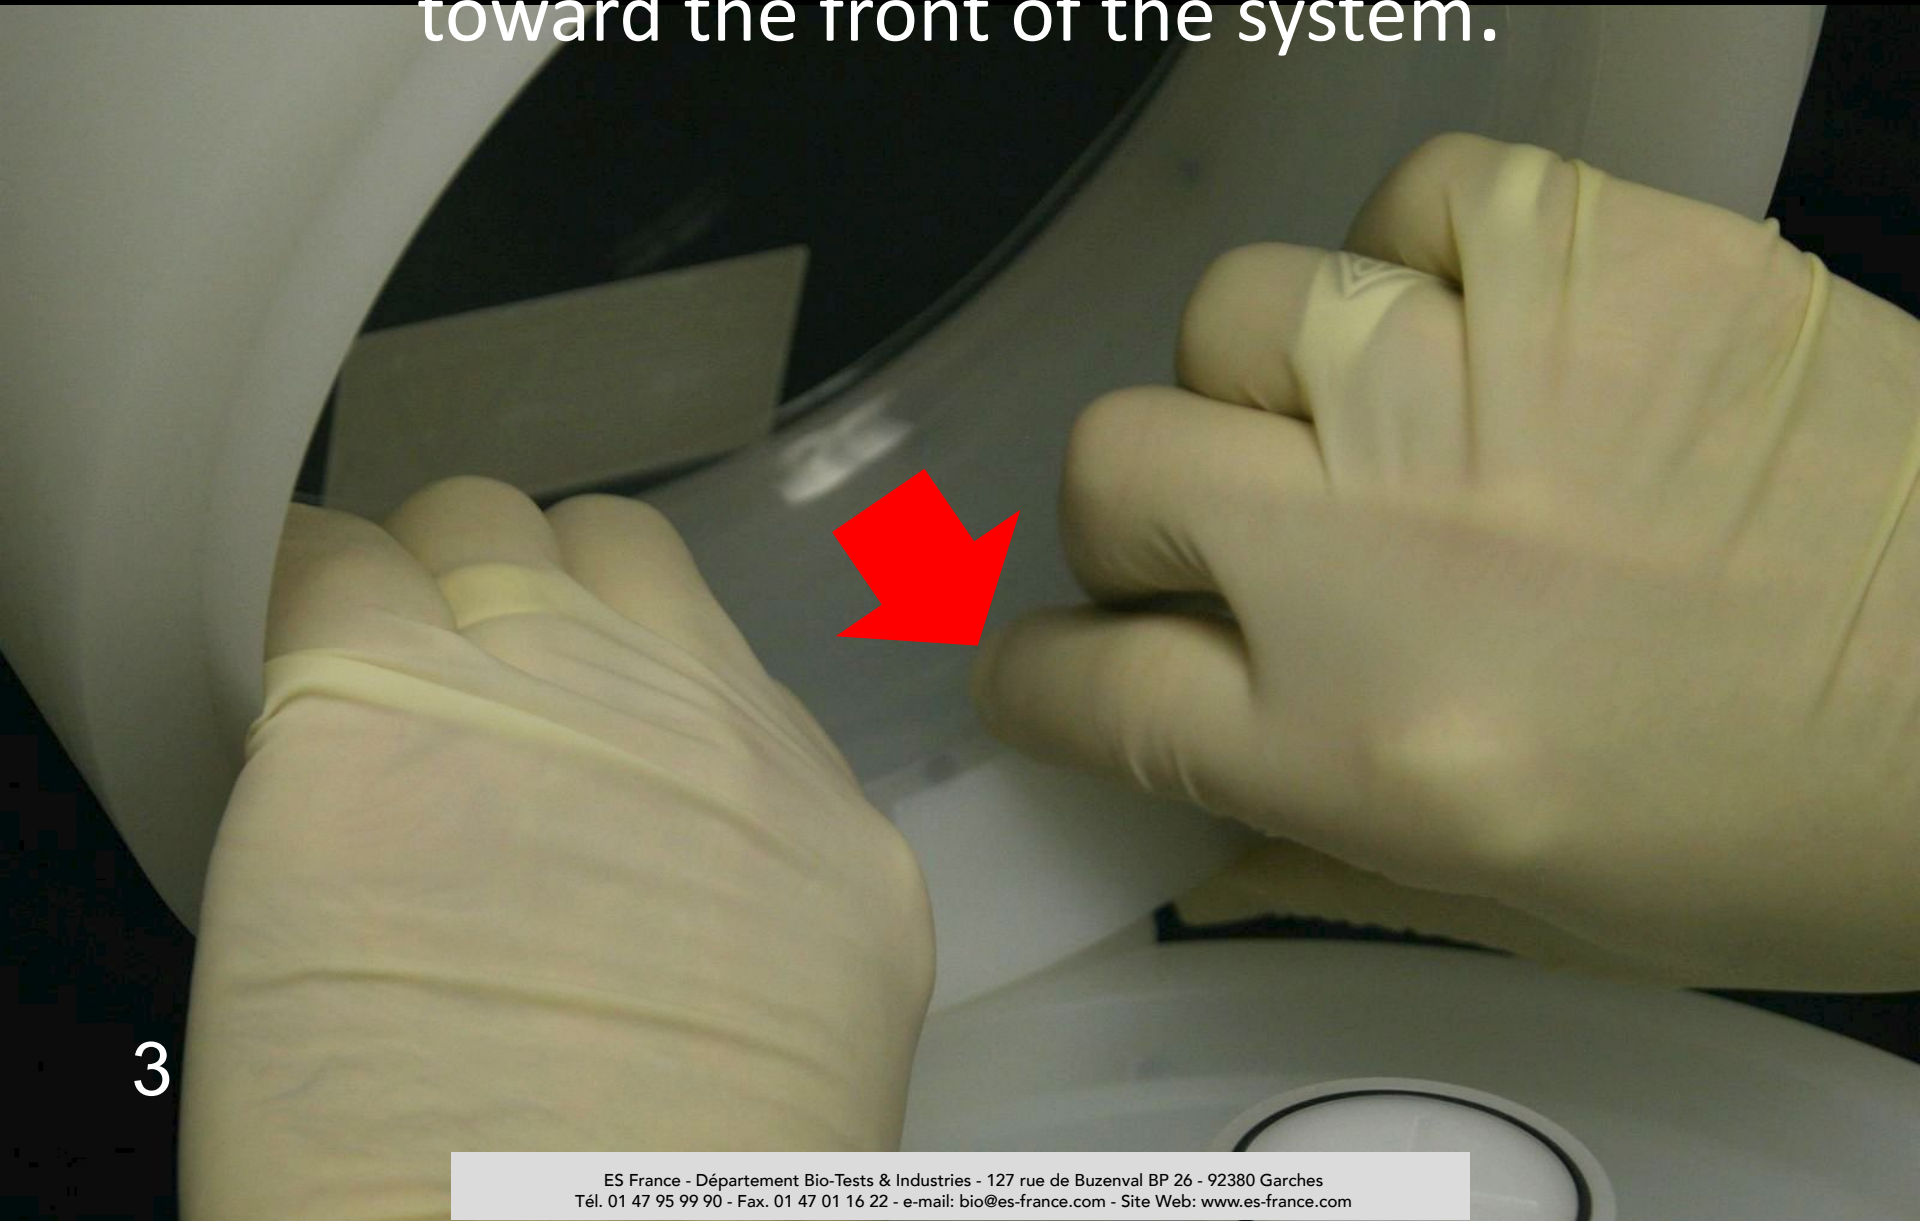


3

Liner should cover the entire upper housing sides and well area.

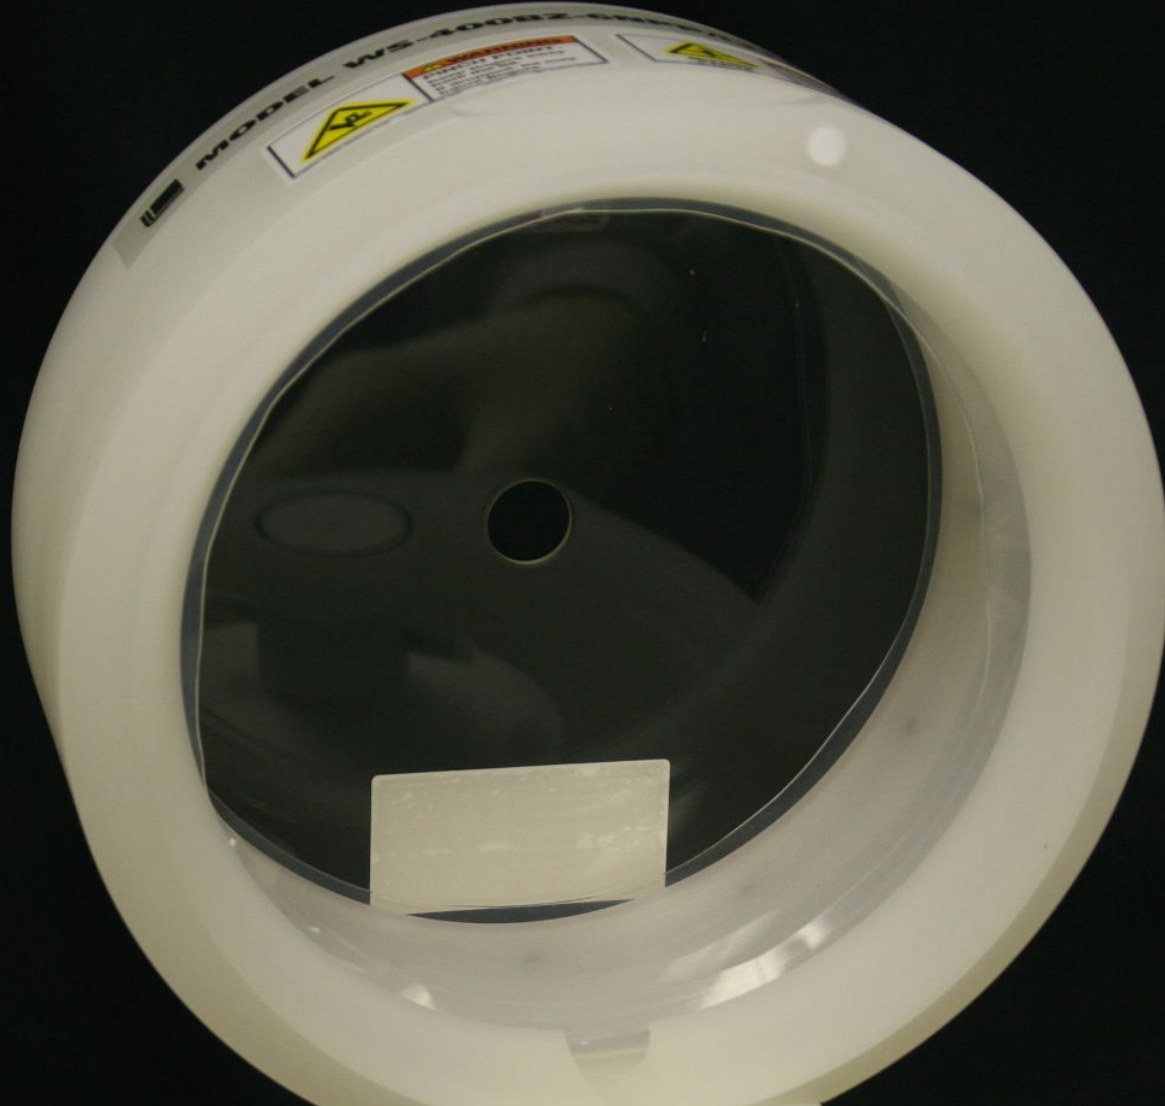

To remove, lift front edge and pull liner from well area.

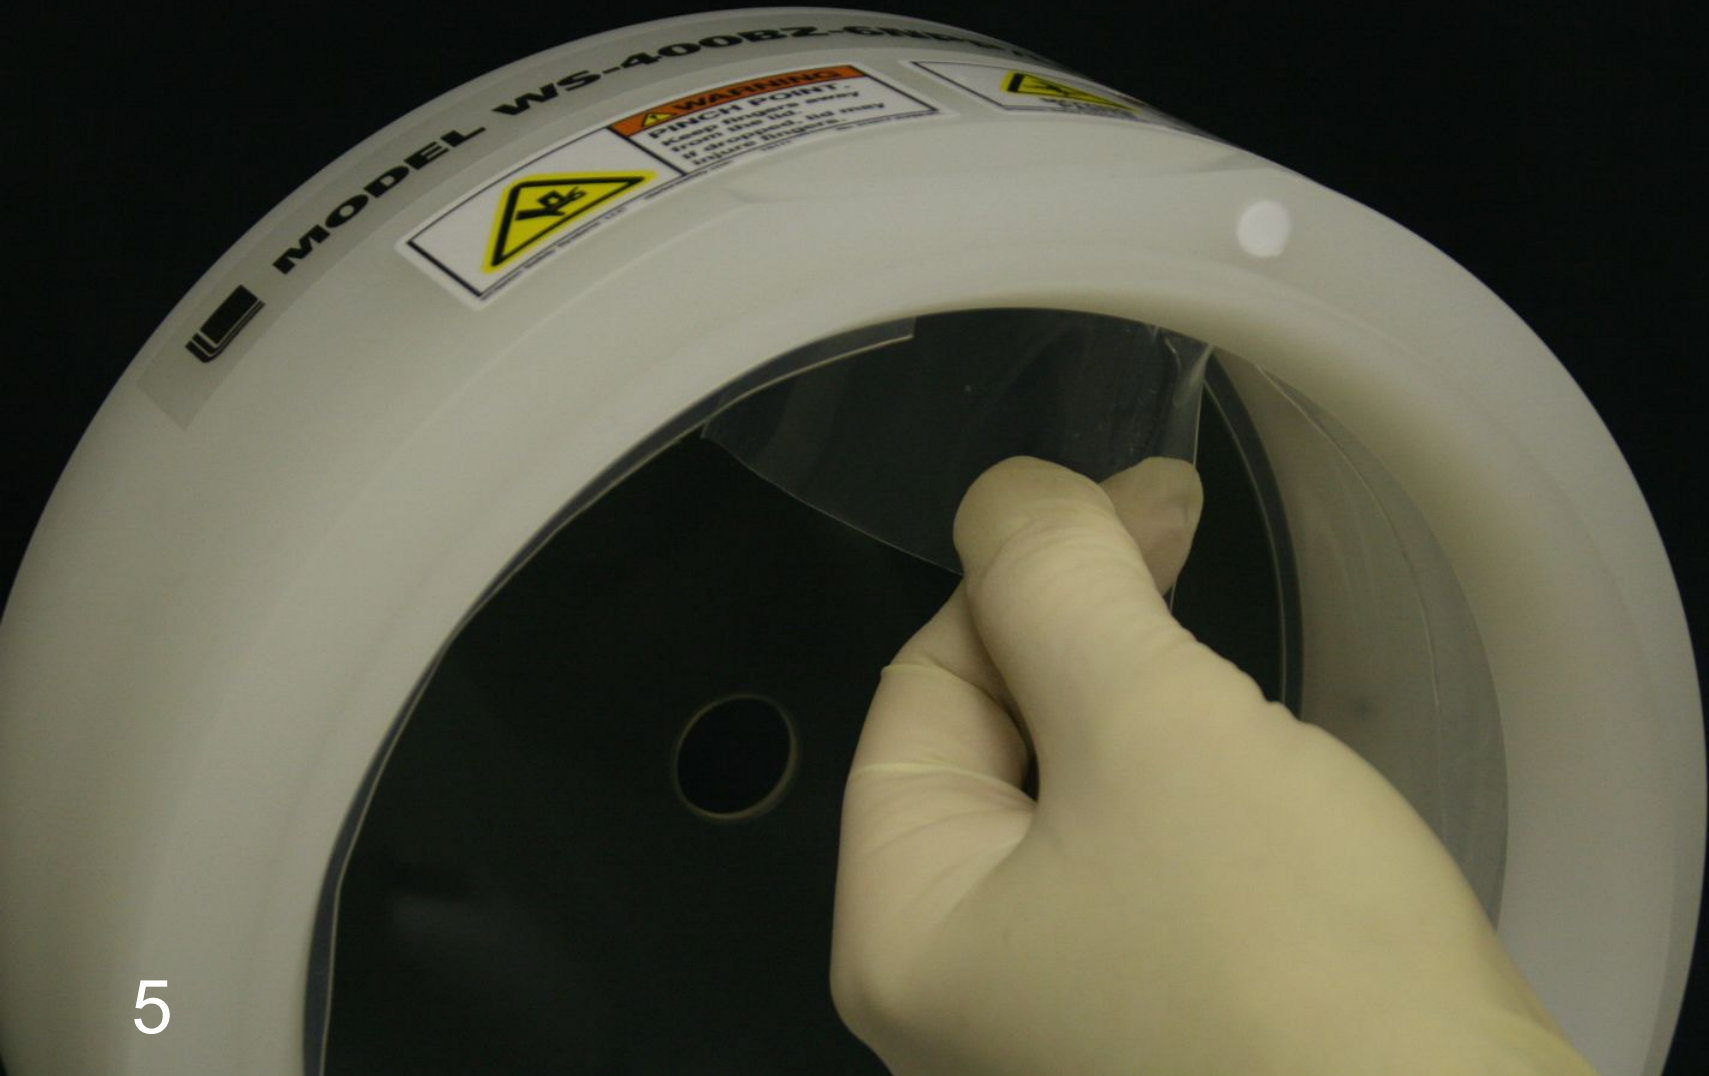

5

Wipe out liner after use and repeat
installation instructions

