


Schéma de montage de la serrure mécanique dans le tiroir

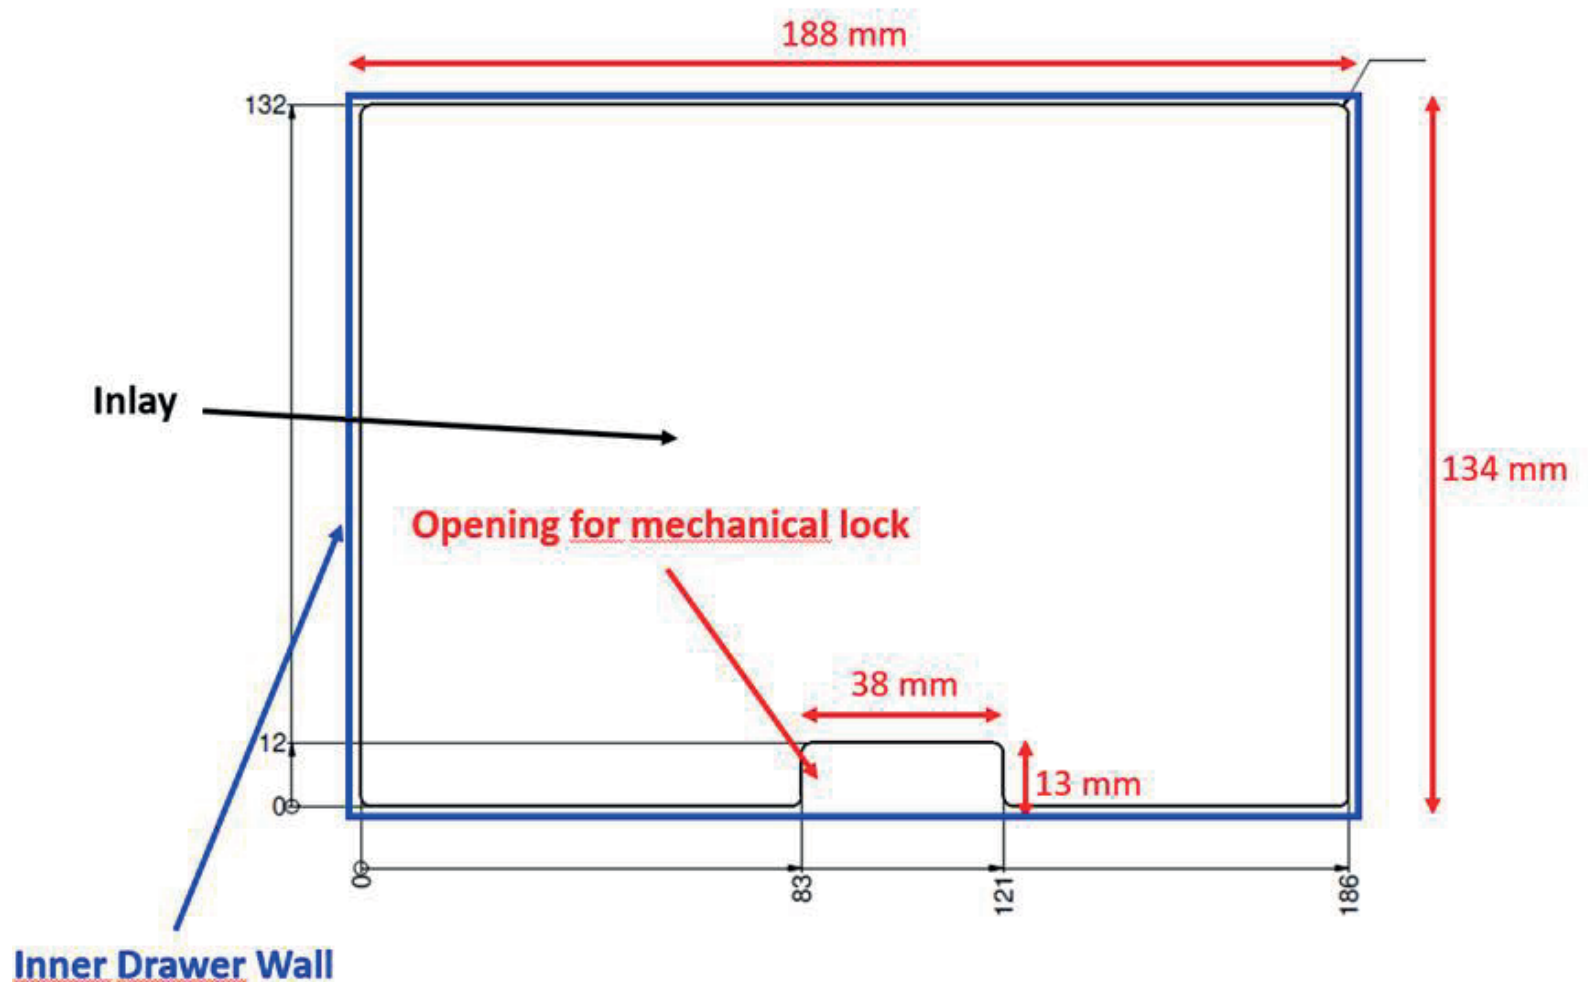

In this drawing, the outer blue frame refers to the inner drawer dimensions.

The black frame refers to an inlay that can be optionally placed into the drawer to achieve a flat surface.

The breakout at the front refers to the space needed to allow operation of the mechanical drawer.

