

Specifications 技术参数

Ratings & Features Applications 电气参数/功能应用领域:

- ✧ Volts电压: 500Vdc;
- ✧ Amps电流: 35-800A;
- ✧ Interrupting Capacity 分断;
 - Rated Breaking Capacity: 50kA 500Vdc (or less) ;
 - Time Constant: 2.5+0.5 ms;
 - Class of Operation: **aR**
- Design For Dc Applications 直流应用设计;
- Excellent Dc Performance 卓越的直流分断能力;
- Low arc voltage and low energy let-through(I2t) 焦耳积分放通量小;
- Superior cycling capability 可循环利用率高
- Low Watt Losses 低功率损耗;
- Electrical Energy Storage 电能/储能;
- DC Drives 直流驱动保护;
- Power converters/rectifiers 电源转换/整流保护;
- Battery pack protection 动力电池包保护;
- Backup Protection For Dc Relay 直流继电器保护;

Dc Power Fuses
North American Style



Standards / Approvals 认证/标准:

- ✧ Refer To UL248.13 or IEC60269.4;
性能参考 UL248.13 or IEC60269.4;
- ✧ Approvals: UL (File: **E533379**) , CE;
- ✧ RoHS Compliant.
符合RoHS。

Features & benefits 产品特性:

Higher voltage rating provides overall system efficiency using smaller, more economical conductors while meeting the needs of higher voltage. Up to ten times faster opening under high fault current conditions helps assure reliable protection of circuits and components. Can be applied in parallel to realize greater ampacity within sizing guidelines, Excellent power of resisting voltaic impingement and environment temperature tolerance, Excellent resistance to mechanical vibration and impact resistance.

满足高电压、小体积、更经济的提升整体系统效率，同时满足更高电压的需求。在大的故障电流条件下，断开速度更快，确保电路和部件的可靠保护。可以并行应用，实现尺寸范围内更大的载流量。良好的抗电流冲击能力以及冷、热环境温度耐受能力，具有优越的抗机械振动与冲击能力。

Product Model 产品型号说明:

HC	HV	E	500	:	630	A	:	51R
HC: Company Code EV: Electric Vehicle HV: High Speed F: Fiberglass T: Ceramics Rated Voltage: 500: 500V Rated Current: 630: 630A X: Connect A Type Series Code: 20R, 26R, 31R, 38R, 51R								




Fuse Ratings 额定参数

Rated Current		Catalog no.	Average @50KA/500Vdc		Power Loss W	Approvals
			Melting A²S	Clearing A²S		UL
20 mm diameter case						
35	35A	HCHVF500-35A-20R	49	509	8	●
40	40A	HCHVF500-40A-20R	111	1085	8	●
50	50A	HCHVF500-50A-20R	231	2624	10	●
60	60A	HCHVF500-60A-20R	305	3053	12	●
26 mm diameter case						
70	70A	HCHVF500-70A-26R	392	2194	14	●
80	80A	HCHVF500-80A-26R	571	3413	16	●
90	90A	HCHVF500-90A-26R	673	3901	16	●
100	100A	HCHVF500-100A-26R	889	4876	20	●
125	125A	HCHVF500-125A-26R	1764	10051	25	●
150	150A	HCHVF500-150A-26R	2412	12075	28	●
31 mm diameter case						
125	125A	HCHVF500-125A-31R	1498	6122	22	●
150	150A	HCHVF500-150A-31R	2059	8045	26	●
175	175A	HCHVF500-175A-31R	2714	10844	34	●
200	200A	HCHVF500-200A-31R	4050	14867	40	●
225	225A	HCHVF500-225A-31R	8650	33908	45	●
250	250A	HCHVF500-250A-31R	9094	51610	52	●
38 mm diameter case						
225	225A	HCHVF500-225A-38R	5549	30873	42	●
250	250A	HCHVF500-250A-38R	7862	44372	48	●
275	275A	HCHVF500-275A-38R	9859	55533	54	●
300	300A	HCHVF500-300A-38R	12230	68624	58	●
325	325A	HCHVF500-325A-38R	17098	87916	60	●
350	350A	HCHVF500-350A-38R	18096	100456	65	●
400	400A	HCHVF500-400A-38R	23962	133253	70	●
450	450A	HCHVF500-450A-38R	33000	189670	78	●
51 mm diameter case						
450	450A	HCHVF500-450A-51R	25688	134620	70	●
500	500A	HCHVF500-500A-51R	42515	205322	88	●
550	550A	HCHVF500-550A-51R	53450	249650	95	●
600	600A	HCHVF500-600A-51R	60133	283868	110	●
630	630A	HCHVF500-630A-51R	73815	319280	120	●
700	700A	HCHVF500-700A-51R	145880	515450	135	●
800	800A	HCHVF500-800A-51R	161840	565500	150	●

●: UL: E533379 (35-800A) ; Time Constant: 2.5+0.5 ms




Dimensions (mm) 尺寸

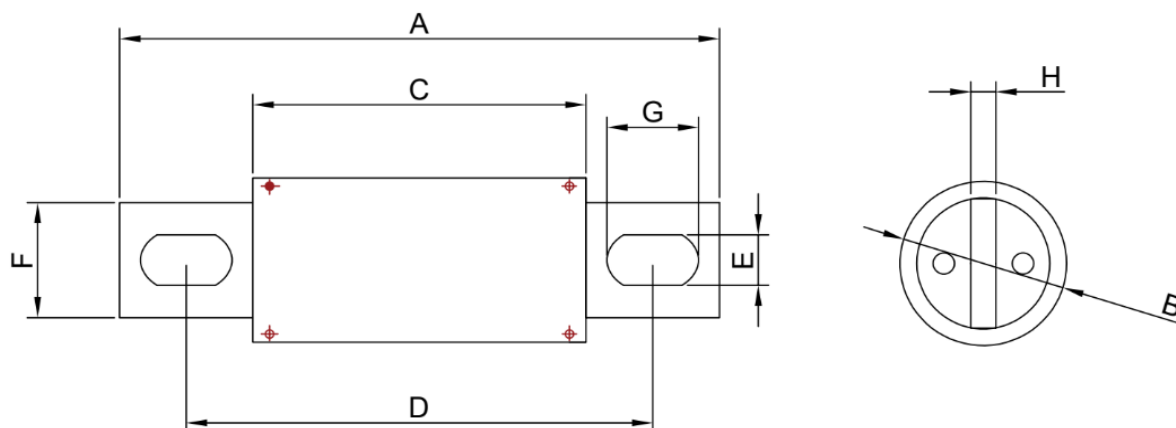


S.	电流范围	A±1.5	B±1	C±1	D±1.5	E±0.5	F±0.5	H±1	G±0.5
20R	35-60A	81	20	40	60.5	8.5	15	3	13
26R	70-150A	92	26	44	68.5	8.5	20	3	13
31R	125-250A	92	31	46	72.5	8.5	25	6	12.5
38R	225-450A	110	38	53	81.5	10.5	25	6	20
51R	450-800A	110	51	53	81.5	10.5	40	6	20


Time-Current Curve 时间电流曲线图 35-250A


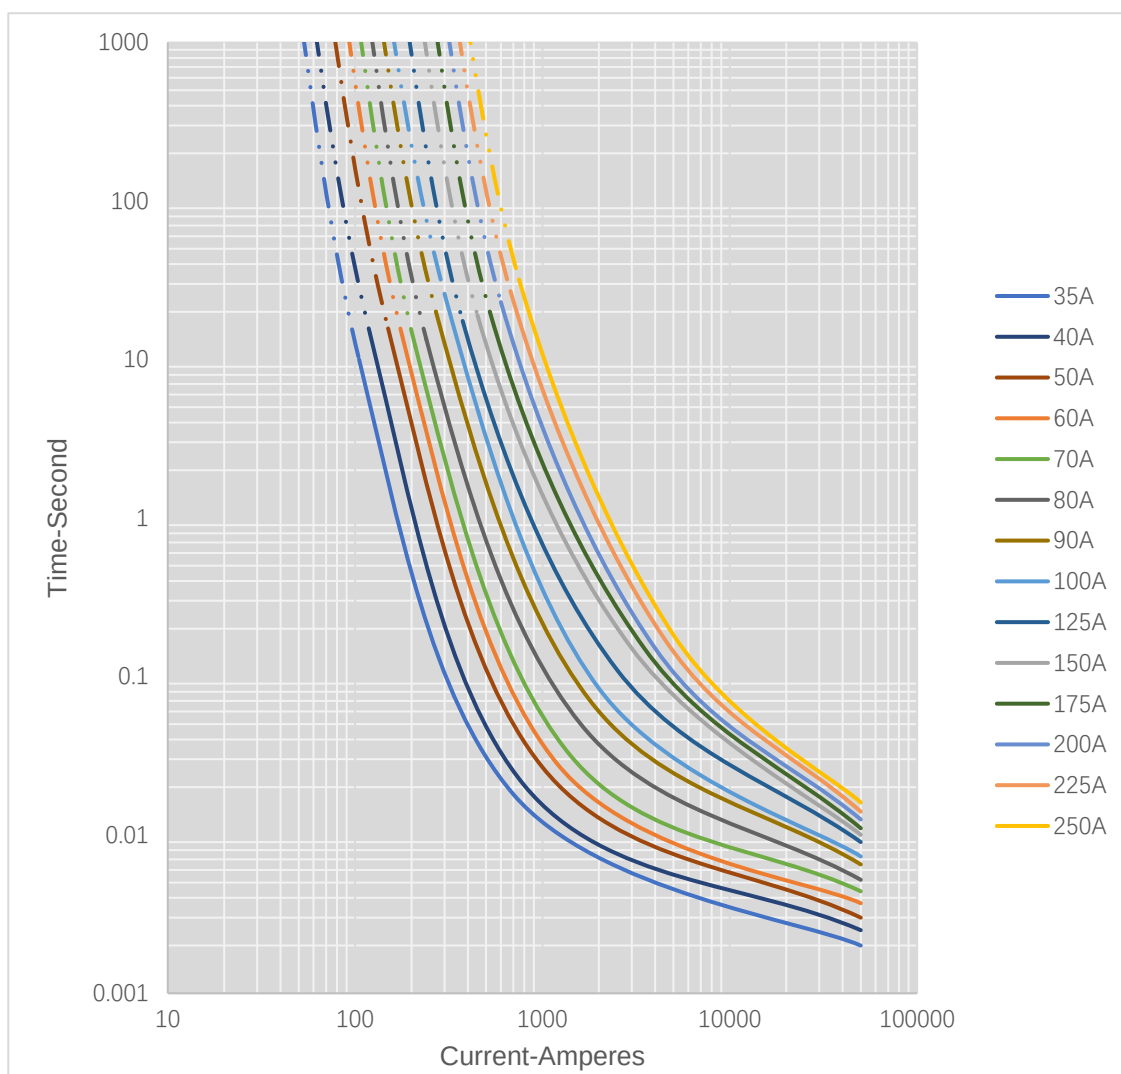


Time-Current Curve 时间电流曲线图 275-800A

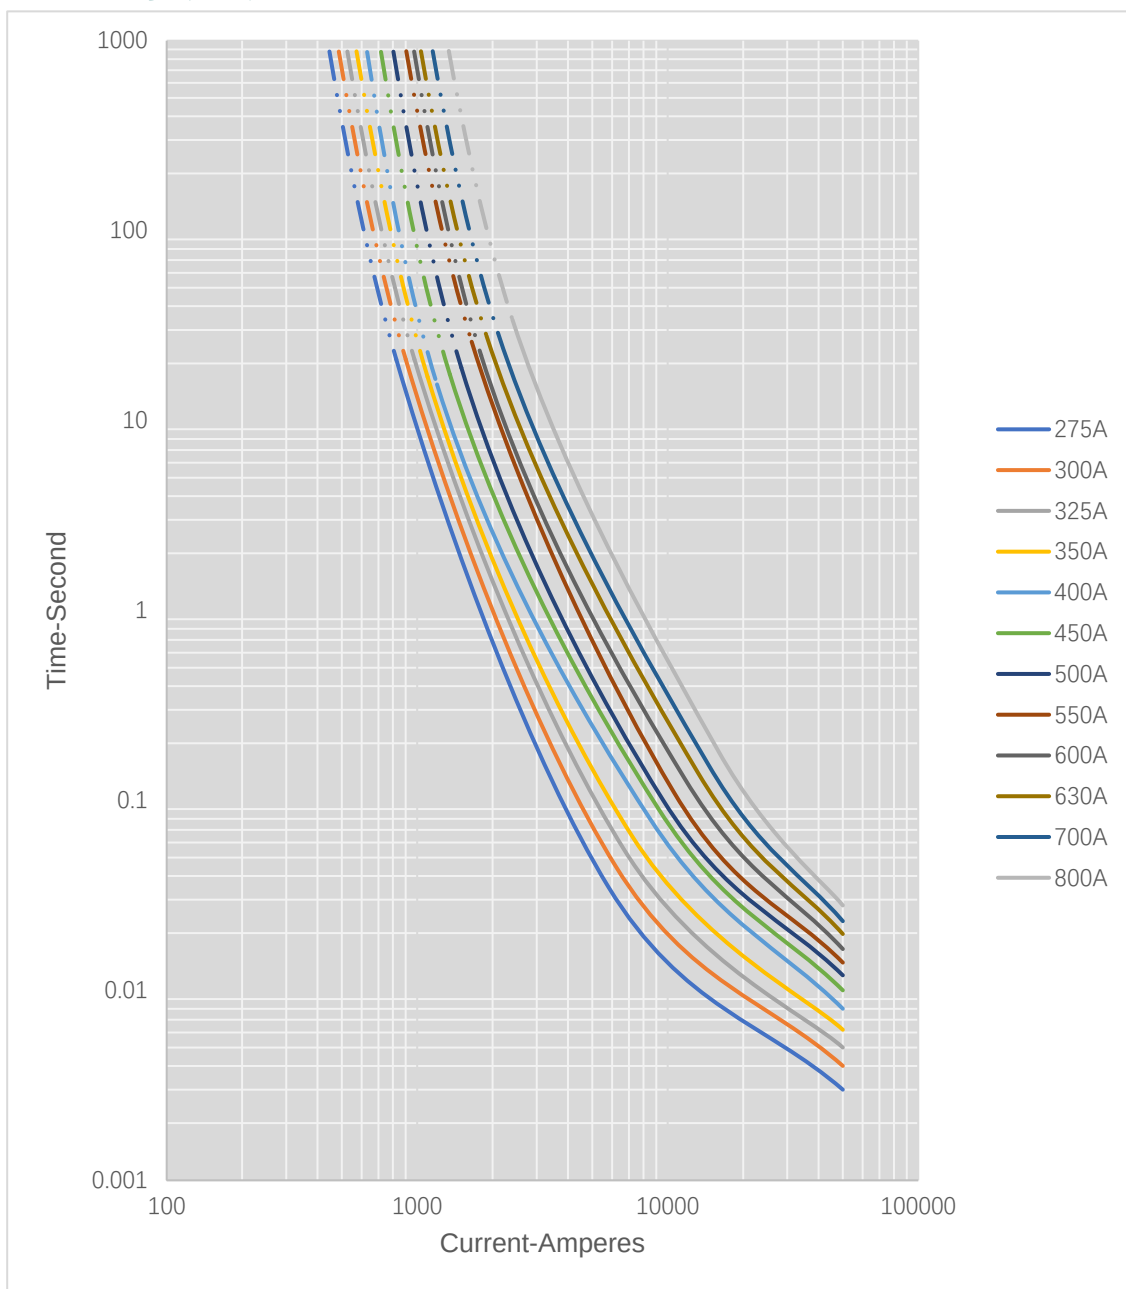

Cut-off curve 截断电流特性曲线

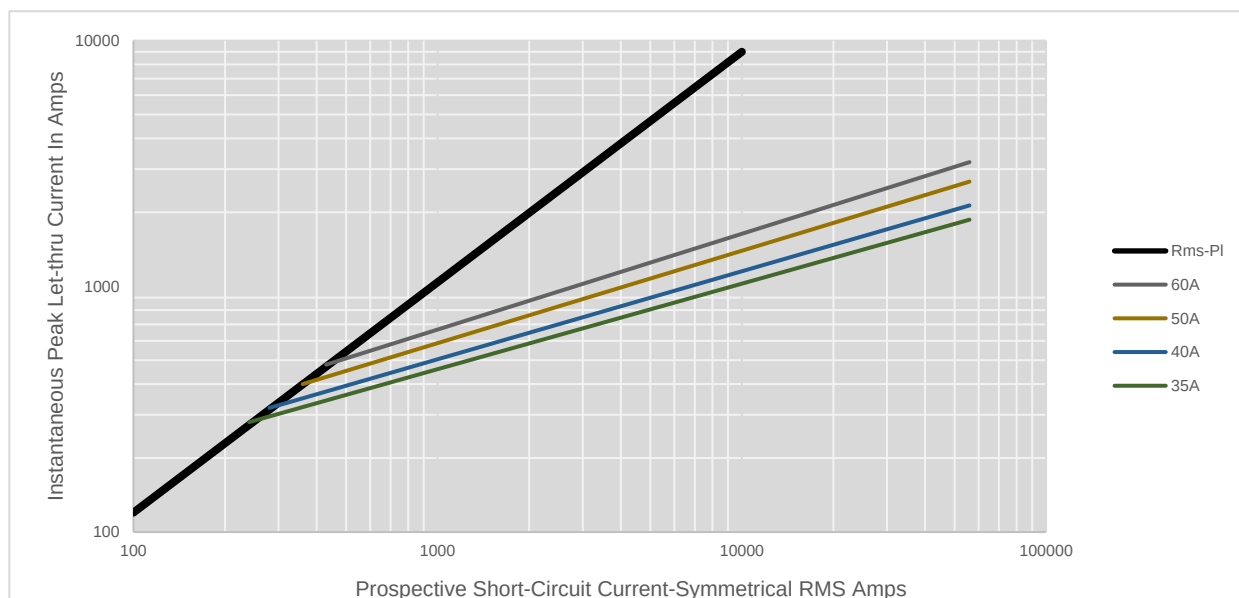

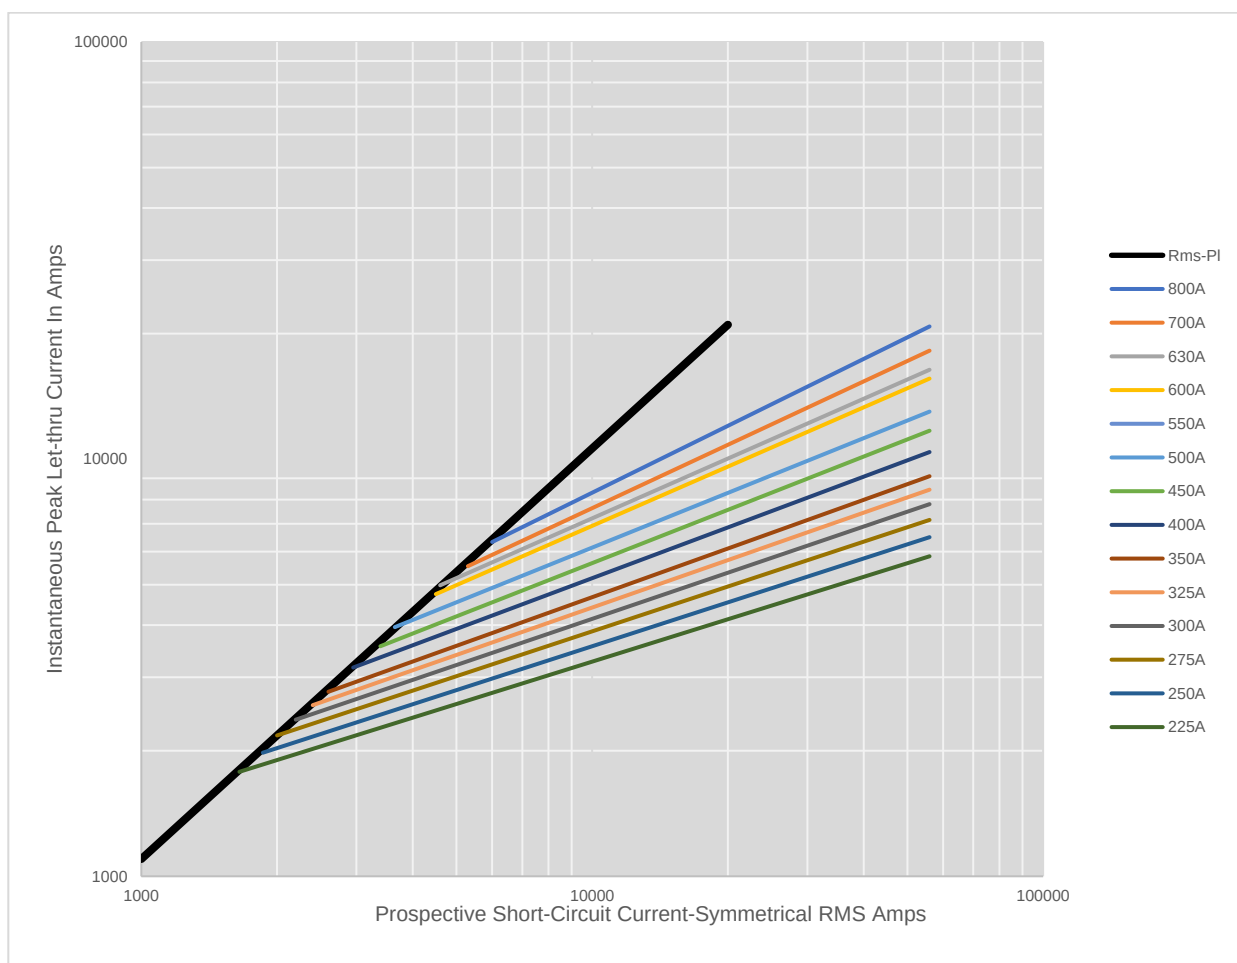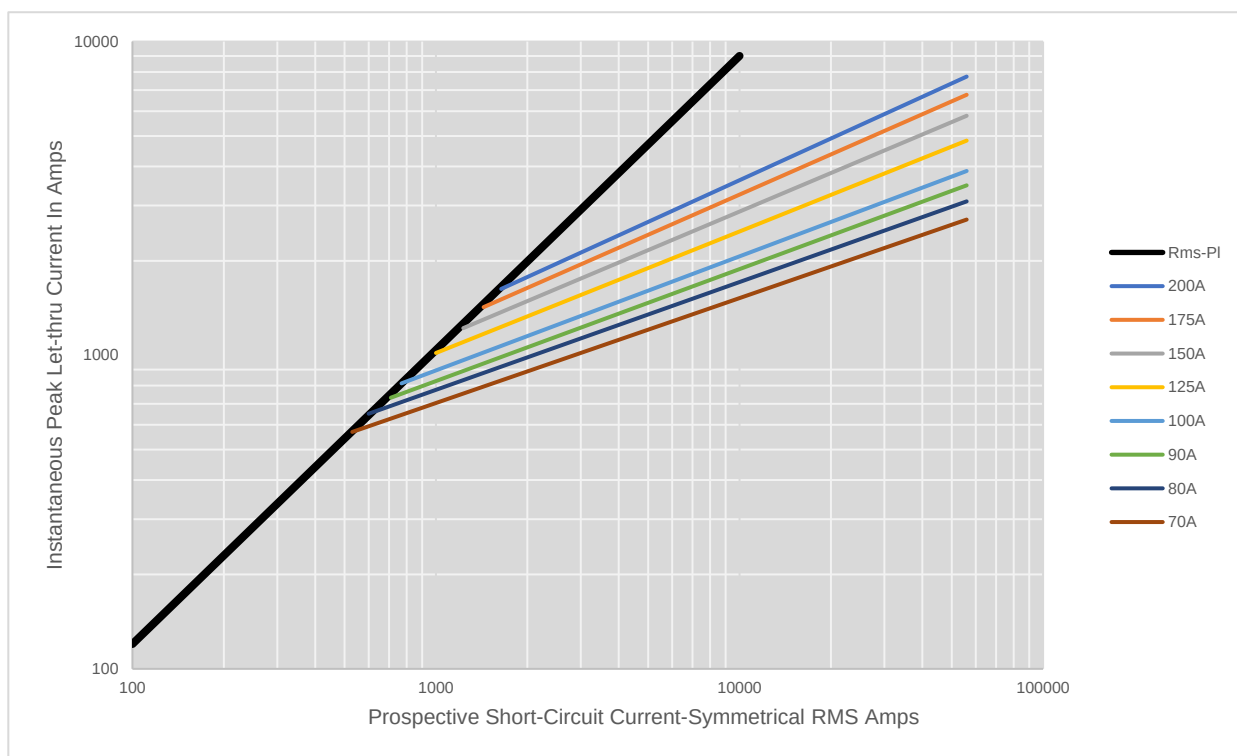

Operating conditions 使用条件

储存

Storage

- ✧ Product storage Temperature: -40°C~120°C;
产品存储温度: -40°C~120°C, 在40°C时相对湿度不大于70%;
- ✧ Product storage Humidity: T=40°C RH≤70%, T≤30°C RH≤80%, T≤20°C RH≤90%;
在30°C以下, 产品相对湿度不大于80, 在20°C以下, 相对湿度不大于90%;
- ✧ Package storage Temperature: -40°C~80°C(-40°F~176°F);
包装存储温度: -40°C~80°C;

正常使用条件及参数修正


Normal usage conditions and parameter corrections

- ✧ Fuses can perform regularly under the flowing conditions without corrections;
熔断器在下述的正常使用条件下工作, 不需要额外的修正;
- ✧ Regular current flow should $\leq 75\%$ of recommended rated current;
推荐长期通流的电流值不大于额定电流的75%;

周围空气温度 Kt

Ambient air temperature Kt

- ✧ Operating temperature: -5°C ~ 40°C ;
正常使用条件: -5°C ~ 40°C;
- ✧ Allowable operating temperature: -40°C ~ 85°C ;
允许使用条件: -40°C ~ 85°C;
- ✧ Temperature correction factors: when below -5°C, low overload (L.O.) pre-arcing time will slightly extend, rated current will slightly increase;
周围空气温度变化的参数修正: 在低于-5°C下工作, 熔断器的低倍过载电流的弧前时间略有延长, 额定电流略有增大, 一般不参考增加熔断器额定电流;
- ✧ If operating above 40°C (104°F) , rated current need extra corrections, factors: -Kt.
熔断器在40°C以上工作, 额定电流需要额外的修正, 修正系数为-Kt。
- ✧ *Note: Kt value has already considered the safety current allowance under regular operating scenarios.
- ✧ *注1: Kt的取值已考虑熔断器在正常工作条件下的额定电流安全余量的影响。

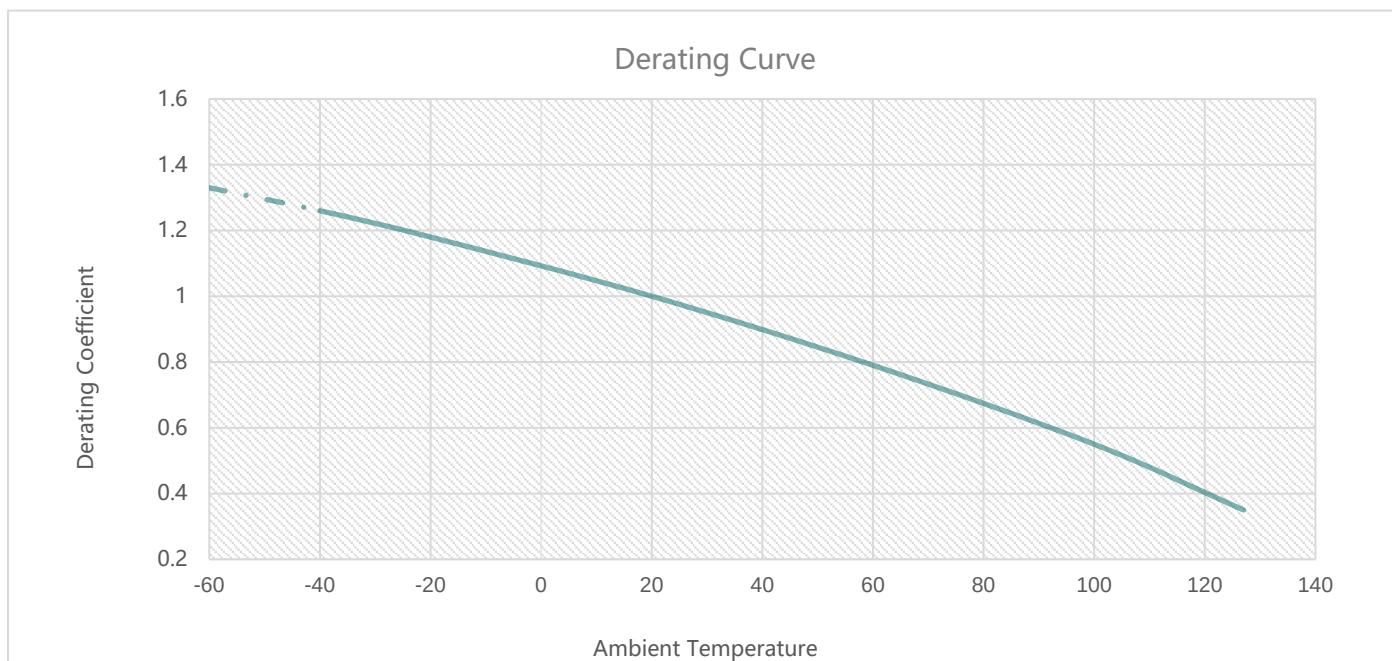

海拔 Ka

Altitude Ka

正常使用条件 **Normal usage conditions**

海拔不超过2000m。 The altitude does not exceed 2000m.

允许使用条件 **Allowed use conditions**

2000-4500m。

✧ 海拔高度变化的参数修正：较高海拔主要带来绝缘劣化，散热条件劣化，气压力变化。

Parameter correction for altitude changes: Higher altitude brings insulation degradation, deterioration of heat dissipation conditions, and changes in air pressure.

✧ 海拔每升高100米，熔断器的温升上升0.1-0.5k。

For every 100 meters of altitude increase, the temperature rise of the fuse increases by 0.1-0.5k.

✧ 海拔每升高100米，环境温度平均降低0.5k左右。

For every 100 meters of altitude increase, the ambient temperature decreases by about 0.5k on average.

✧ 一般情况下，在开放环境使用的熔断器，可忽略海拔高度对额定电流的影响，仍然按照标准条件选用。

Generally, for fuses used in open environments, the effect of altitude on the rated current can be ignored, and they are still selected according to standard conditions.

✧ 在封闭环境使用的熔断器，如果其箱体的环境空气温度或箱体内部的温度并不随海拔升高而明显下降，仍然可以达到40°C以上，则需要对额定电流降容。海拔每升高1000米，额定电流降容2%-5%。

For fuses used in closed environments, if the ambient air temperature of the box or the temperature inside the box does not drop significantly as the altitude increases, and can still reach above 40°C, the rated current needs to be derated. For every 1000 meters of altitude increase, the rated current should derate by 2%-5%.

注：同一尺寸系列中，最大额定电流采用较高的降容比例，较小的额定电流采用较低的降容比例。

Note: In the same size series, the maximum rated current adopts a higher derating ratio, and the lower rated current adopts a lower derating ratio.

海拔高度空气绝缘强度（击穿强度）的影响。

Effect of altitude air insulation strength (breakdown strength).

✧ 海拔升高，则空气绝缘强度下降。2000-4500米内，海拔每升高1000米，绝缘强度降低12-15%。

As the altitude increases, the air insulation strength decreases. Within 2000-4500 meters, the insulation strength decreases by 12-15% for every 1000 meters of altitude increase.

✧ 参见 GB/T16935.1,应对绝缘间隙进行相应修正。

Refer to GB/T16935.1, the insulation gap should be corrected accordingly.

✧ 熔断器端子间的绝缘距离一般远大于GB/T16935.1,表A1, A2标准要求的绝缘间隙，除个别体积较小的熔断体外，无需校核绝缘间隙。

The insulation distance between fuse terminals is generally much greater than the insulation gap required by standards of GB/T16935.1, Table A1, and A2. Except for a few small fuse links, there is no need to check the insulation gap.

熔断器带与其它带电结构间,以及对地的绝缘间隙，需要由用户考虑海拔高度的影响。


The insulation gap between the fuse and other live structures, as well as the ground, needs to be considered by the user due to the influence of altitude.

✧ When fuses are used at high altitudes, the current rating should be corrected, the correction factor is shown in the Following table: $K_a = 1 - (H - 2000) / 100 * (0.5 / 100)$

✧ Under these conditions, moderate condensation may occasionally occur due to variation in temperature. For operation condition other than above, please contact manufacturer.



Correction factor for rated current at corresponding altitude

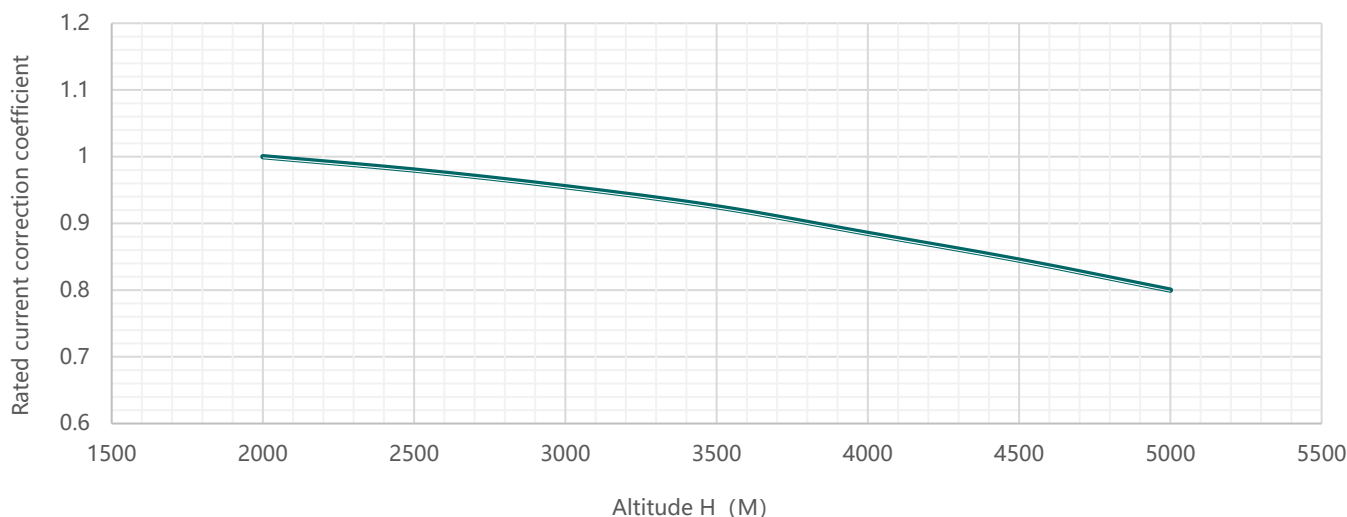

连接器件热传导条件 Ke

Thermal conduction conditions of connecting devices Ke

Ke: 标准连接铜导线截面积 (电流为长期持续有效值的标定)

Ke: cross-sectional area of standard connecting copper wire (The current is a long-term continuous effective value)

电流 A	截面积 mm ²	电流 A	截面积 mm ²	电流 A	截面积 mm ²
2、4、6	1	80	25	400、425	240
8、10、12	1.5	100	35	450、500	300
16、20	2.5	125	50	630	370
25	4	160	70	800	480
32	6	200、225	95	1000	600
40、50	10	250、280	120	1250	800
63	16	300、315、350	185	-	-

* > 1250A以上的电流指标商定

The index of current above 1250A

*1 电流1250A~2000A, 过电流密度取1.0~1.4A/mm²


When the current is 1250A~2000A, and the overcurrent density is 1.0~1.4A/mm²

*2 电流2000A~3000A, 过电流密度取0.9~1.0A/mm²

When the current is 2000A~3000A, the overcurrent density is 0.9~1.0A/mm²

Connecting conductor cross-section/standard cross-section

连接导线截面/标准截面

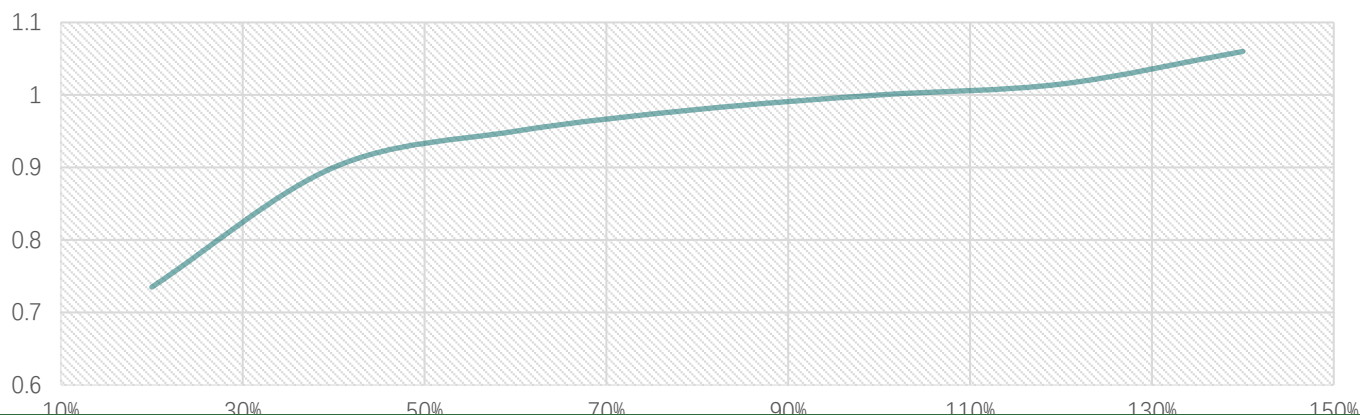

强制风冷 Kv

Forced air cooling Kv

- ✧ 熔断器单独安装在无通风的自然空气中，除连接导线外，1m范围内无其他发热部件或散热部件。

The fuse is installed separately in the natural air without ventilation. Except for the connecting conductor, there are no other heating parts or heat-dissipating parts within 1m.

- ✧ 熔断器连接端子应保证电接触稳定可靠。接触电阻不应明显影响熔断器工作。

The fuse connection terminal should ensure stable and reliable electrical contact. Contact resistance should not significantly affect fuse operation.


- ✧ 熔断器可垂直、水平或倾斜安装。如果是依靠弹簧压力保证电连接熔断器，安装时，宜选择合适位置，避免重力和振动对电连接的不良影响。

Fuses can be installed vertically, horizontally, or at an angle. If it relies on spring pressure to ensure the electrical connection of the fuse, a suitable location should be chosen during installation to avoid the adverse effects of gravity and vibration on the electrical connection.

强制风冷 Forced air cooling

采用强制风冷可以增加熔断器的散热，可以增加熔断器的额定电流。风速和额定电流的修正系数—Kv。

The use of forced air cooling can increase the heat dissipation of the fuse and increase the rated current of the fuse. Correction factor for wind speed and rated current—Kv.

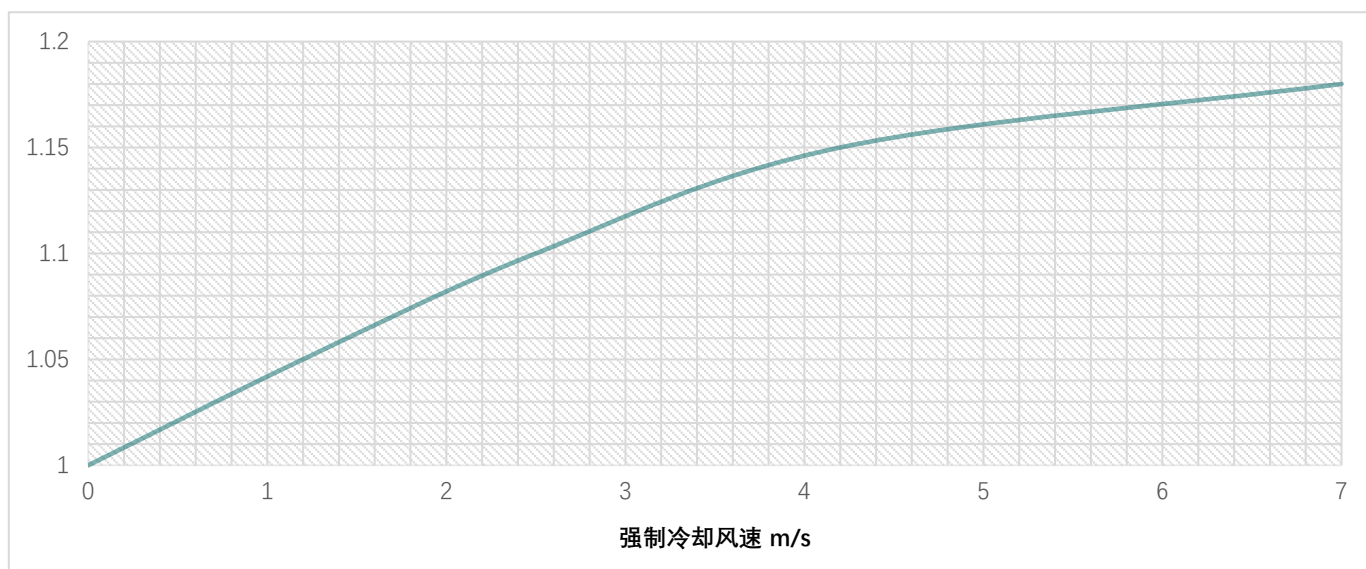

Forced cooling wind speed m/s

大气条件

Atmospheric conditions

- ✧ 正常工作条件

Normal working conditions

空气是干净的，它的相对湿度在最高温度为40°C时不超过50%。

The air is clean and its relative humidity does not exceed 50% at a maximum temperature of 40°C.

- ✧ 在较低温度下可以有较高的相对湿度，例如，在20°C下，相对湿度可以达90%。

There can be higher relative humidity at lower temperatures, for example, at 20°C, the relative humidity can reach 90%.

在这些条件下，由于温度的变化，中等的凝露可能偶然发生。

There can be higher relative humidity at lower temperatures, for example, at 20°C, the relative humidity can reach 90%.

- ✧ 允许工作条件 Permissible working conditions

无明显凝露情况下，相对湿度可达95% Without obvious condensation, the relative humidity can reach 95%



震动**Shock vibration**

- ✧ High frequency vibration resistance: $\geq 20g$;
本系列熔断器有良好的抗振动和冲击的耐受能力, 可承受20g以上的加速度;
- ✧ Intense vibration and shocking conditions need more tests.
振动较为强烈的应用环境, 可商议进行对应测试, 一般要经过较长的周期。
- ✧ Replacing fuses if damaging facilities;
对有机机械损伤的熔断器必须进行更换;
- ✧ DO NOT change fuses while loading unless MUST.
除非使用要求允许, 如熔断器式负荷开关, 否则请勿带负载更换熔断器。

安全使用和维护保养**Safe use and maintenance**

- ✧ 熔断器安装时, 相邻两个熔断器带电零件的最小间隙满足绝缘要求, 必要的话在熔断器之间装绝缘隔板, 以防止带电更换熔断器时引起相间短路。

When installing fuses, the minimum gap between the live parts of two adjacent fuses meets the insulation requirements. If necessary, install an insulating partition between the fuses to prevent phase short circuits when replacing the fuses while the fuses are live.

- ✧ 结合电气设备定期检修, 进行检查和维护保养, 清除尘埃、接触导电部位的氧化层等。

Combined with regular inspection of electrical equipment, carry out inspection and maintenance, remove dust, oxide layers on contact conductive parts, etc.

- ✧ 对有机机械损伤的熔断器必须进行更换。

Mechanically damaged fuses must be replaced.

- ✧ 除非使用要求允许, 如熔断器式负荷开关, 否则请勿带负载更换熔断器。

Unless the application requirements allow it, such as a fuse-type load switch, do not replace the fuse with the load.

- ✧ 产品寿命期间无任何废气、粉尘、噪音等影响环境因素的产生。

During the life of the product, there will be no waste gas, dust, noise or other factors that affect the environment.

- ✧ 产品寿命终结后金属件可回收, 非金属件粉碎后可作为一般工业垃圾处置, 对环境不会造成二次污染。

The metal parts can be recycled after the end of the product's life, and the non-metal parts can be disposed of as general industrial waste after being crushed, without causing secondary pollution to the environment.

