


EIT[®] UV PowerMAP[®] II EIT[®] LEDMAP[™] EIT[®] UV PowerView Software[®] III

The EIT PowerMAP II and LEDMAP are Profiling Radiometers that provides the irradiance (W/cm²), energy density (J/cm²), irradiance profile (Watts/cm² as a function of time) and temperature profile (°C as a function of time). The compact, one-piece instruments are 60% smaller than the original EIT PowerMAP and have a larger memory for increased data gathering. Both instruments utilize EIT's UV PowerView Software III for detailed visual and numerical analysis of the sources.



EIT UV PowerMAP II


The EIT PowerMAP is designed to measure UV broadband sources in four (UVA, UVB, UVC, UVV) EIT spectral regions. The image shows the difference in performance for a focused lamp (in blue and orange) and an out -of-focus lamp (in red and green) with the temperature profiles in light purple.

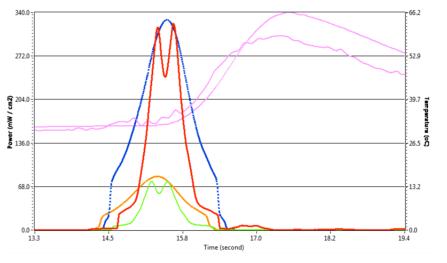



EIT LEDMAP

The EIT LEDMAP is designed to measure LED sources in high speed applications with EIT's patented LED L-Bands. The image shows 34 individual LED peaks collected over 30 second interval at a speed of 400 fpm on a high speed digital printer. The sample rate was 2130.5 Hz.

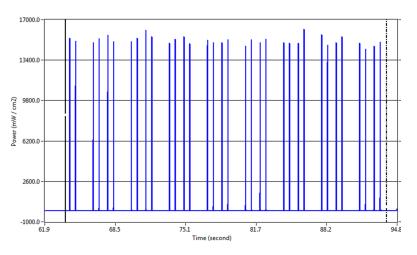

Time is shown on the X-axis, UV irradiance on the left Y-axis and temperature on the right Y-axis if applicable

<u>UV PowerMAP[®] II / LEDMAP™ Profiling Radiometers</u>

The EIT PowerMAP II and LEDMAP provide an extensive "picture" of the UV source(s) and how the UV is delivered to the cure surface. The irradiance (W/cm²), energy density (J/cm²), irradiance profile (Watts/cm² as a function of time) and the temperature profile (°C as a function of time) are available when the data is transferred to the computer. Profiling radiometers quickly and easily identify and track:


- The number of lamps/arrays and their individual performance
- Focus conditions, bulb/array uniformity, speed/exposure time
- · System changes over time with the comparison to stored files
- Maintenance needs <u>before</u> they impact product quality

PowerMAP II/LEDMAP Features:

- Size: Compact size of 5.5" x 2.1" x 0.55" (13.8 cm x 5.3 cm x 1.27 cm), allows use on molding lines and chill drums
- Sample Rate: User adjustable from 128-2048 (Hz) samples per second
- Memory Capacity: Supports 65 minutes of data collection at 2048 Hz.
- *Temperature Measurement:* J-type thermocouple included, samples at 32 Hz
- *Battery:* Typical battery life is 100 minutes. Rechargeable in +/- 90 minutes with included smart charger. May also charge via a computer USB port.
- Pause Mode: Allows the user to 'pause' the instrument up to eight different times to collect data prior to transfer to UV PowerView Software III.



Different modes (Stop, Run, Pause) are indicated by the color of the LED

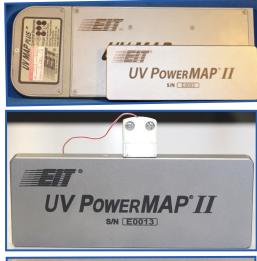



Top: Size comparison Middle: Instrument with thermocouple Bottom: Optics side


UVA, UVB, UVC, UVV Transmission scan


PowerMAP II Responsivity & Ranges

- Four-band instrument designed for measurement of broadband (mercury) sources
- UVA (320-390nm), UVB (280-320nm), UVC (250-260nm) and UVV (395-445nm)
- Two dynamic ranges: 10 W/cm² or 100 mW/cm²

LEDMAP Responsivity & Ranges

- Single or four-band instruments designed for measurement of UV LEDs
- Patented EIT L-Band with all optics included in the instrument response
- L365 (340-392 nm), L385 (360-412 nm), L395 (370-422 nm) and/or L405 (380-432 nm)
- Dynamic range of 40 W/cm²

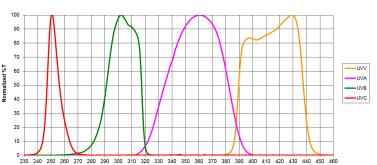

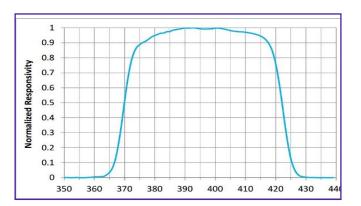

wave length


UV PowerView Software[®] III Features

EIT's UV PowerView Software III is designed to work with the PowerMAP II, LEDMAP & Profiler versions of the Power Puck[®] II, UviCure Plus[®] II and LEDCure[®]. UV PowerView Software III is a National Instruments LabVIEW based program designed to work on Windows 7-10. Collected data is stored in LabVIEW based *.tdms file format.

Instrument /Software Features

- USB Download
- LabView (*.tdms) file format
- Multiple right click options
- Files are easy to share and export to Excel
- Easily capture and share screen shots, add process notes to files in the enhanced notes section

Graph by File: Display two files with four UV bands and temperature

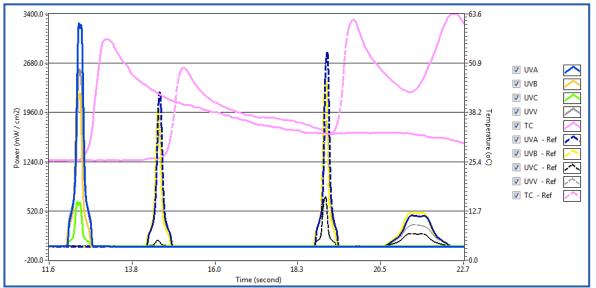

Summary By Table	-				
	Sample File	Reference File	Difference	%	
UVA- Power (mW/cm2)	3266.950	2837.660	429.291	15.1	
UVB- Power (mW/cm2)	2271.329	2419.520	-148.191	-6.1	
UVC- Power (mW/cm2)	651.502	720.282	-68.780	-9.5	
UVV- Power (mW/cm2)	2592.923	1835.324	757.599	41.3	
TC_Peak(oC)	57.100	63.600	-6.500	-10.2	
UVA- Energy (mJ/cm2)	836.688	1465.192	-628.503	-42.9	
UVB- Energy (mJ/cm2)	563.862	1344.463	-780.601	-58.1	
UVC- Energy (mJ/cm2)	147.622	310.246	-162.624	-52.4	
UVV- Energy (mJ/cm2)	701.967	1106.244	-404.277	-36.5	
TC_Mean(oC)	31.202	34.050	-2.848	-8.4	
Enable cursors	OFF				
Time	0.00				
Time - Ref	28.84				

Sample Information & Notes - 20180320_1	
Model: PowerMap2 Board Temperature: 30 Battery Voltage: 1.47 Firmware Version: 1.46 Serial Number: 13 Calibration Date: CalEIT	
Actual Sample Rate: 2130.5 Date & Time: 3/20/2018 11:40:36 AM	-

Left:

Table by File with data displayed by units. The data can also be displayed by UV Bands

Bottom Left:

<u>Sample Information</u> screen with data transfer time and sample information. User notes can also be added in this area of the software

Below:

Summary/Cursor section of the software allows analysis of the file

hannel Display O	Option			
All Channel		Channel Selection		
Single Cha	nnel	UVA	•	
Summary:				
Power (mW/cm2)	Power - Ref	% Power	Enable Curr	
3266.950	2837.660	15.100	Smoothing	
Energy (mJ/cm2)	Energy - Ref	% Energy		
513.639	807.129	-36.400	Sync Plots O	
Cursor Values:				
Time	Time - Ref	Delta Time	Threshold	
12.36	19.05	-6.69	(mW/cm2)	
			0.000	
Power (mW/cm2)	Power - Ref	Delta Power		

ES France - Département Bio-Tests & Industries - 127 rue de Buzenval BP 26 - 92380 Garches Tél. 01 47 95 99 90 - Fax. 01 47 01 16 22 - e-mail: bio@es-france.com - Site Web: www.es-france.com

EIT[®] PowerMAP[®] II / LEDMAP[™] / UV PowerView Software[®] III Product Specifications Specifications are subject to change without notice

Shared Physical Characteristics: PowerMAP II & LEDMAP

5.5" x 2.1" x 0.55" / 13.8 x 5.3 x 1.27 cm (LWH)		
Aluminum & Stainless Steel		
7.3 ounces (207 grams)		
Supplied with carrying case, cut polyurethane foam interior, scuff resistant nylon exterior cover, USB cable and l drive with PowerView III software/manual		
2 minutes from Standby Mode (Red Flashing LED) with no button activity		
Rechargeable Smart charger provided with unit recharges in fast mode (+/- 90 minutes). Charge speed on USB ports varies depending on the computer USB port. Battery life: 100 minutes typical		
65 minutes of data collection time		
User adjustable from 128-2048 Hz (128-256-512-1024-2048)		
0-75°C Internal temperature; withstands high external temperatures for short periods (Audible alarm indicates with temperature has exceeded upper limit)		
Supplied with J type Thermocouple, effective sample rate of 32 Hz		
Approximately Cosine "Lambertian"		
Supplied with NIST traceable calibration certificate		

PowerMAP II Optics & Performance

Powerwap ii Oplics & Pe	nomance		
Spectral Response	UVA: 320-390nm UVB: 280-320nm UBC: 250-260nm UVV: 395-445nm		
Dynamic Ranges	10 W/cm ² High Range 100 mW/cm ² Low Range		
Suggested Operating Ranges	High: UVA, UVB, UVV: 100mW/cm² to 10W/cm² /UVC - 10mW/cm² to 1W/cm² Low: UVA, UVB, UVC, UVV: 1 mW/cm² to 100 mW/cm²		
Accuracy	+/- 10%; +/- 5% typical plus ±0.2% of full scale Typical ±5% or better		
Repeatability	± 2-5% typical; Dependent on source and equipment (conveyor) stability, unit alone better than 2.0%		
LEDMAP Optics & Perfor	mance		
Spectral Response	L365: 340-392 nm; ±2 nm (FWHM, 52 nm); 4 OD Blocking L385: 360-412 nm; ±2 nm (FWHM, 52 nm); 4 OD Blocking L395: 370-422 nm; ±2 nm (FWHM, 52 nm); 4 OD Blocking L405: 380-432 nm; ±2 nm (FWHM, 52 nm); 4 OD Blocking		
Dynamic Range	40W/cm ²		
Suggested Operating Range	400 mW/cm ² -40 W/cm2; 0-250 J/cm ²		
Accuracy	Typically ±2% or better; ± 10% of reading plus ± 0.2% of full scale		
Repeatability	Typically better than 0.2% (unit alone); ≤ 1% max		

National Instruments LabVIEW based programming designed for Windows 7-10. Collected data stored in LabVIEW based *.tdms files **PowerView Software III**

Designed and manufactured in the USA

This equipment is in conformity with the following standards and therefore bears CE marking: IEC 61326-1:2005, EN55011: 1998, EN61000-4-2: 1995, A1: 1998, A2: 2001; EN 61000-4-3: 2002, A1: 2002, following the provisions of the applicable directives: 98/34/EEC and amendments, 89/336/EEC and amendments.

For more information contact EIT or:

P/N IM-0102 Rev C PowerMAP II/LEDMAP Brochure March 2021

CE

ES France - Département Bio-Tests & Industries - 127 rue de Buzenval BP 26 - 92380 Garches Tél. 01 47 95 99 90 - Fax. 01 47 01 16 22 - e-mail: bio@es-france.com - Site Web: www.es-france.com