


ASR-2000 / ASR-3000 Series Programmable AC/DC Power Source

Utilize ASR-2000/3000 AC/DC power source for LV124 & LV148

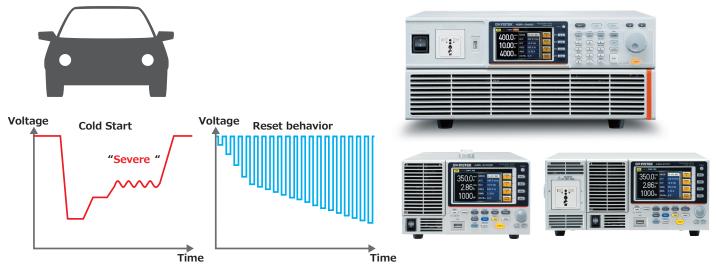

LV 124 Electric and Electronic Components in Motor Vehicles up to 3.5t with a 12 V electric system - General Requirements Test Conditions and Tests

LV 148 Electric and Electronic Components for Vehicles with a 48V Electrical System Test Conditions and Tests

1.1.1 Tolerances

| Standa | Standard tolerances LV 124 LV 148 | | Stand | ard values | LV 124 | LV 148 | |
|--------|-----------------------------------|------------|------------|------------|------------------------------|---|--|
| | Parameter | Tolerance | | Param | neter | Tolerance | |
| f | Frequencies | ±1% | ±1% | TRT | Room temperature | 23℃±5℃ | 23℃ ± 5 ℃ |
| Т | Temperature | ± 2℃ | ± 2℃ | Frel | Humidity | 25 % to 75 % rel. humidity | 25 % (+5 to 0 %) up to 75 % |
| Frel | Humidity | ± 5 % | ± 5 % | | | | (-5 to 0 %) rel. humidity |
| t | Times | + 5 %; 0 % | + 5 %; 0 % | Ttest | Test temperature | TRT room temperature | TRT room temperature |
| U | Voltages | ± 2 % | ± 0.5 % | UB | Operating voltage (for test) | UB = 14 V | U48x |
| I | Current | ± 2 % | ± 2 % | Ri | Source impedance | ${ m Ri} \leq 100~{ m m}\Omega$ (E6) | $10 \text{ m}\Omega \leq \text{Ri} \leq 100 \text{ m}\Omega$ |
| | | | , | | | Ri < 30 m Ω / 100 m Ω (E15) | |


1.1.2 Operating voltage range LV 124 / LV 148

| | | | - |
|------|-------|-------|--|
| Code | Ubmin | Ubmax | Function / description LV 124 |
| а | 6 V | 16 V | For functions that must retain their |
| | | | performance during starting of the engine |
| b | 8 V | 16 V | For functions that do not have to retain their |
| | | | performance during starting of the engine |
| | | | This encoding must only be used if the |
| | | | component cannot be classified in the |
| | | | encoding a, c or d. |
| С | 9 V | 16 V | For functions that must retain their |
| | | | performance when the engine is not |
| | | | running |
| d | 9.8 V | 16 V | For functions that must retain their |
| | | | performance when the engine is running |

| Shortcut | Terms LV 148 | Values |
|---------------------|---|--------|
| U48r,dyn | Lower voltage limit of the dynamic overvoltage range | 60V |
| U48r | Lower voltage limit of the 2 V tolerance to the dynamic | 58 V |
| | overvoltage range | |
| U48max,high,limited | Max. voltage of the upper operating range with functional | 54 V |
| | restriction | |
| U48max,unlimited | Max. voltage of the operating range without functional | 52 V |
| | restriction | |
| U48n | BN48- nominal voltage | 48 V |
| U48min,unlimited | Min. voltage of the operating range without functional | 24 V |
| | restriction | |
| U48min,low,limited | Min. voltage of the lower operating range with functional | 20 V |
| | restriction | |
| U48stoprotect | Accumulator protected voltage | |
| U48pp | Peak – peak- voltage | |
| U48rms | Effektive value of a voltage | |
| U48max | Maximum voltage that may occur during a test | |
| U48min | Minimum voltage that may occur during a test | |
| U48test | BN48- test voltage | |





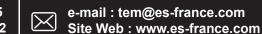


LV 124 LV148 Automotive Testing

LV 124 & LV 148 Automotive Testing



ASR-2000/2000R Series Programmable AC/DC Power Source

Need an AC+DC waveform power source?

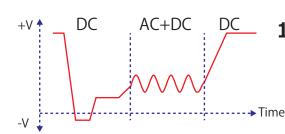

500VA ASR-2050R 1000VA ASR-2100R





500VA ASR-2050



Features

- Output Capacity: 500VA/500W ASR-2050(R), 1000VA/1000W ASR-2100(R)
- Output Rating: AC; 0 350 Vrms(@200V range), DC, AC+DC; 0 ± 500 V(@200V range)

• Output mode: AC+DC-INT, AC-INT, DC-INT, AC+DC-EXT, AC-EXT, AC+DC-ADD, AC-ADD, AC+DC-SYNC, AC-SYNC

- Output Frequency: AC+DC mode; DC, 1Hz to 999.9 Hz, AC mode; 40Hz to 999.9Hz
- DC Output (100% of Rated Power): 0 \pm 500 V
- Measurement Items: Vrms, Vavg, Vpeak, Irms, IpkH, Iavg, Ipeak, P, S, Q, PF, CF, Voltage and Current Harmonic Analysis: THDv, THDi
- Remote Sensing
- Protection: OVP, OCP, OPP, OTP, AC Fail Detection and Fan Fail Alarm.
- Arbitrary Waveform Function: 16-bit, 4096 words, 16 ARB waveform memories
- Output On/Off Phase Angle control: 0.0 $^\circ$ to 359.9 $^\circ$, variable (setting resolution 0.1 $^\circ$)
- Sequence Function: up to 999 steps, , up to 10 memories, Mode; DC-INT, AC-INT, and AC+DC-INT
- Simulation Function: 6 steps(Init, Normal1, Trans1, Abnormal, Trans2, Normal2, Init), up to 10 memories, Mode; AC+DC-INT
- Interface: USB Device and , LAN as standard, RS-232+GPIB as optional
- External Control I/O: Input; Sequence control (Start, Stop, Hold, branch 1/2,

Output; Power source on/off, Output on/off, Software busy, Sequence sync output 0/1

• External Signal Input: SYNC mode; Synchronizing the output frequency with this external input signal

EXT and ADD mode: Outputting the amplified external input signal with input signal.

Built-in Output Relay Control

| Model | | | ASR-2050 / ASR-2050R | | ASR-2100 / ASR-2100 | ASR-2100 / ASR-2100R | | | |
|----------------|--------------------|--------------------|--|------------------|---------------------|----------------------|--|--|--|
| Output Ratin | ig for AC Mode | | | | | | | | |
| Range | | | 100 V | 200 V | 100 V | 200 V | | | |
| Voltage | | Setting Range | 0.0 V to 175.0 V, | 0.0 V to 350.0 V | 0.0 V to 175.0 V | 0.0 V to 350.0 V | | | |
| | | Setting Resolution | 0.1V | | | | | | |
| | | Accuracy*2 | ±(0.5 % of set + 0.6 V / | 1.2 V) | | | | | |
| Output phase | | | Single phase, Two-wire | | | | | | |
| Maximum cur | rent*3 | | 5 A | 2.5 A | 10 A | 5 A | | | |
| Maximum pea | ak current*4 | | 20 A | 10 A | 40 A | 20 A | | | |
| Power capacity | | | 500 VA | · | 1000 VA | 1000 VA | | | |
| Frequency | Setting range | AC Mode: | 40.00 Hz to 999.9 Hz | | | | | | |
| | | AC+DC Mode: | 1.00 Hz to 999.9 Hz | | | | | | |
| | Setting resolution | | 0.01 Hz (1.00 to 99.99 Hz), 0.1 Hz (100.0 to 999.9 Hz) | | | | | | |
| Output on ph | ase | | 0.0° to 359.9° variable (setting resolution 0.1°) | | | | | | |
| DC offset*6 | | | Within \pm 20 mV (TYP) | | | | | | |
| Output Ratin | ig for DC Mode | | | | | | | | |
| Range | | | 100 V | 200 V | 100 V | 200 V | | | |
| Voltage | | Setting Range | -250 V to +250 V | -500 V to +500 V | -250 V to +250 V | -500 V to +500 V | | | |
| | | Setting Resolution | 0.1V | | | | | | |
| | | Accuracy*2 | ±(0.5 % of set + 0.6 V | / 1.2 V) | | | | | |
| Maximum cu | ırrent*3 | | 5 A | 2.5 A | 10 A | 5 A | | | |







ASR-3000 Series Programmable AC/DC Power Source

| 2000VA | ASR-3200 |
|--------|----------|
| 3000VA | ASR-3300 |
| 4000VA | ASR-3400 |



Features

- Output Capacity: 2000VA/2000W ASR-3200, 3000VA/3000W ASR-3300
- Output Rating: AC 0 400 Vrms, DC 0 ± 570 V @ 200V range
- Output mode: AC+DC-INT, AC-INT, DC-INT, AC+DC-EXT, AC-EXT, AC+DC-ADD, AC-ADD, AC+DC-SYNC, AC-SYNC
- Output Frequency: AC+DC mode; DC, 1Hz to 999.9 Hz, AC mode; 40Hz to 999.9Hz
- DC Output: (100% of Rated Power): 0 ± 570 V
- Measurement Items: Vrms, Vavg, Vpeak, Irms, IpkH, Iavg, Ipeak, P, S, Q, PF, CF, Voltage and Current Harmonic Analysis(THDv, THDi)
- Remote Sensing
- Protection: OCP, OPP, OTP, AC Fail Detection and Fan Fail Alarm.
- Arbitrary Waveform Function: 16-bit, 4096 words, 16 ARB waveform memories
- Output On/Off Phase Angle control: 0.0° to 359.9°, variable (setting resolution 0.1°)
- Sequence Function: up to 999 steps, , up to 10 memories, Mode; DC-INT, AC-INT, and AC+DC-INT
- Simulation Function: 6 steps(Init, Normal1, Trans1, Abnormal, Trans2, Normal2, Init), up to 10 memories, Mode; AC+DC-INT
- Interface(std): USB, LAN, RS-232, GPIB
- External Control I/O: Input; Sequence control (Start, Stop, Hold, branch 1/2,

Output; Power source on/off, Output on/off, Software busy, Sequence sync output 0/1

External Signal Input: SYNC mode; Synchronizing the output frequency with this external input signal

EXT and ADD mode: Outputting the amplified external input signal with input signal.

- Built-in Output Relay Control
- Built-in Web Server

| | | ASR-3200 | | ASR-3300 | | ASR-3400 | | | | | |
|---|--|---|---|--|--|--|---|--|--|--|--|
| ating for AC Mod | de | | | | | | | | | | |
| | | 100 V | 200 V | 100 V | 200 V | 100 V | 200 V | | | | |
| Voltage Setting Range Setting Resolution Accuracy*2 | | 0.0 V to 200.0 V | 0.0 V to 400.0 V | 0.0 V to 200.0 V | 0.0 V to 400.0 V | 0.0 V to 200.0 V | 0.0 V to 400.0 V | | | | |
| | | 0.1V | | | | | | | | | |
| | | \pm (0.5 % of set + 0 | .6 V / 1.2 V) | | | | | | | | |
| ase | | Single phase, Two | -wire | | | | | | | | |
| current*3 | | 20A | 10 A | 30 A | 15 A | 40 A | 20 A | | | | |
| Maximum peak current*4 | | | 60 A | 180 A | 90 A | 240 A | 120 A | | | | |
| Power capacity | | | - · | 3000 VA | | 4000 VA | | | | | |
| Setting range | AC Mode: | 40.00 Hz to 999.9 H | 40.00 Hz to 999.9 Hz | | | | | | | | |
| | AC+DC Mode: | 1.00 Hz to 999.9 Hz | | | | | | | | | |
| Setting resolution | on | 0.01 Hz (1.00 to 99 | .99 Hz), 0.1 Hz (100.0 |) to 999.9 Hz) | | | | | | | |
| phase | | $0.0^\circ~$ to 359.9° $~$ variable (setting resolution $0.1^\circ~)$ | | | | | | | | | |
| б | | Within \pm 20 mV (TYP) | | | | | | | | | |
| ating for DC Mod | de | | | | | | | | | | |
| | | 100 V | 200 V | 100 V | 200 V | 100 V | 200 V | | | | |
| | Setting Range | -285V to +285 V | -570 V to +570 V | -285V to +285 V | -570 V to +570 V | -285V to +285 V | -570 V to +570 | | | | |
| | Setting Resolution | 0.1V | | | 1 | | | | | | |
| | Accuracy*2 | $\pm (0.5\% \text{ of set} + 0.5\% \text{ of set})$ | 0.6 V / 1.2 V) | | | | | | | | |
| Maximum current*3 | | 20 A | 10 A | 30 A | 15 A | 40 A | 20 A | | | | |
| | ase current*3 peak current*4 acity Setting range Setting resolution phase 5 | Setting Resolution Accuracy*2 ase current*3 peak current*4 acity Setting range AC Mode: AC+DC Mode: Setting resolution phase Setting for DC Mode Setting Range Setting Range Setting Resolution | ating for AC Mode 100 V Setting Range 0.0 V to 200.0 V Setting Resolution 0.1 V Accuracy*2 ±(0.5 % of set + 0) ase Single phase, Two current*3 20A peak current*4 120 A acity 2000 VA Setting range AC Mode: 40.00 Hz to 999.9 H Setting resolution 0.01 Hz (1.00 to 99 9 phase 0.0° to 359.9° va 6 Within ± 20 mV (100 to 100 | Atting for AC Mode 100 V 200 V Setting Range 0.0 V to 200.0 V 0.0 V to 400.0 V Setting Resolution 0.1V Accuracy*2 ± (0.5 % of set + 0.6 V / 1.2 V) ase Single phase, Two-wire Single phase, Two-wire current*3 200 V 60 A peak current*4 120 A 60 A acity 2000 VA Setting range AC Mode: 40.00 Hz to 999.9 Hz AC+DC Mode: 1.00 Hz to 999.9 Hz, 0.1 Hz (100.00 P) phase 0.0° to 359.9° variable (setting resolution phase 0.0° to 359.9° variable (setting resolution phase 0.0° to 359.9° variable (setting resolution phase for DC Mode 100 V 200 V Setting Range -285V to +285 V -570 V to +570 V Setting Resolution 0.1V -200 V | Atting for AC Mode 100 V 200 V 100 V Setting Range 0.0 V to 200.0 V 0.0 V to 400.0 V 0.0 V to 200.0 V Setting Resolution 0.1V Setting Resolution 0.1V Accuracy*2 ±(0.5 % of set + 0.6 V / 1.2 V) Setting resolution 30 A peak current*3 200 V 100 A 30 A peak current*4 120 A 60 A 180 A actry 2000 VA 2000 VA 3000 VA Setting range AC Mode: 40.00 Hz to 999.9 Hz 3000 VA Setting resolutior 0.01 Hz (1.00 to 99.9 Hz), 0.1 Hz (100.0 to 999.9 Hz) 999.9 Hz) phase 0.0° to 359.9° variable (setting resolution 0.1°) Within ± 20 mV (TYP) atting for DC Mode 100 V 200 V 100 V Setting Range -285V to +285 V -570 V to +570 V -285V to +285 V | Activation Notestime setting for AC Mode 100 V 200 V 100 V 200 V Setting Range 0.0 V to 200.0 V 0.0 V to 400.0 V 0.0 V to 200.0 V 0.0 V to 400.0 V Setting Resolution 0.1V Accuracy*2 ±(0.5 % of set + 0.6 V / 1.2 V) 0.0 V to 400.0 V 0.0 V to 400.0 V accuracy*2 ±(0.5 % of set + 0.6 V / 1.2 V) setting Range 200 N 10 A 30 A 15 A current*3 Z000 VA 10 A 30 A 15 A 90 A actry 2000 VA 60 A 180 A 90 A actry 2000 VA 3000 VA Setting range AC Mode: 40.00 Hz to 999.9 Hz 3000 VA Setting range AC Mode: 1.00 Hz to 999.9 Hz 0.1 Hz (100.0 to 99.9 Hz) U Setting resolution 0.1° V phase 0.0° to 359.9° variable (setting resolution 0.1°) V V V 200 V sting for DC Mode: 100 V 200 V 100 V 200 V -570 V to +570 V -570 V to +570 V -570 V to +570 V <td< td=""><td>Activity for AC Mode Note of the section of the section</td></td<> | Activity for AC Mode Note of the section | | | | |





The ASR series have a powerful sequence function that can create complex output waveforms.

The sequence feature works in DC-INT, AC-INT, and AC+DC-INT modes and includes DC, sine, square, triangle, and 16 arbitrary waveforms.

The sequence function consists of a total of 1000 steps (0 to 999 step).

Available parameters and waveforms depend on the selected output mode.


Each step can set the waveform, Voltage, and duration Time and select the behavior (constant/hold/sweep) for each step.

It also has a branch function to a specified step during sequence operation. All sequence data can save 10 internal sequence memories (SEQ0 to SEQ9) or external USB sticks.

Since the sequence function can control Start, Stop, Hold, and Branch from the External Control I/O, it can be used in combination with an external device.

PC Software of ASR Sequence screen

| | C 11 | | uonco (| ····· | 4 | | | | | | | | | System Set | ing |
|-------|-----------|----------|-------------|-----------|---------|-------|-----------|-----------|------------|---------|---------|-------------|------|--------------|-----|
| ISIC | Controlle | er Sec | uence g | simula | ite | | | | | | | | | system set | ing |
| Ċ | | | | NV, | | | | | | | | | | | |
| utput | t Mode A | CDC-INT | | Range | (LO) 1 | L00 | V | | | | | | | | |
| | E | dit 🤇 | Contr | ol | | | | | | | | | 1 | Add Step | |
| | Time | ACV | ACV Behavio | DCV | DCV Beh | avior | Frequency | Frequency | Behvior | Wavefo | orm | Termination | ם ב | Incort | |
| 0 | 1.00 | 00 0.0 | CONST | 0.0 | CONST | ~ | 60.00 | CON | IST | SIN [Vr | ms] (| CONTINUE | | Insert | |
| 1 | 1.00 | 0.0 0.0 | CONST | 11.0 | CONS | т | 60.00 | CON | IST | SIN [Vr | ms] | CONTINUE | | Delete | |
| 2 | 0.00 | 10 0.0 | CONST | 3.2 | SWEE | P | 60.00 | CON | IST | SIN [Vr | ms] | CONTINUE | | Delete | |
| 3 | 0.01 | 90 0.0 | CONST | 3.2 | CONS | т | 60.00 | CON | IST | SIN [Vr | ms] 🛛 | CONTINUE | | | |
| 4 | 0.00 | 10 0.0 | CONST | 5.0 | SWEE | P | 60.00 | CON | IST | SIN (Vr | ms] | CONTINUE | | \uparrow | |
| 5 | 0.32 | 90 0.0 | CONST | 5.0 | KEEF | • | 60.00 | CON | IST | SIN (Vr | ms] | CONTINUE | | | |
| 6 | 0.05 | | CONST | 6.0 | SWEE | | 60.00 | CON | | SIN [Vr | | CONTINUE | | \checkmark | |
| 7 | 10.00 | 00 0.7 | CONST | 7.0 | CONS | ST | 2.00 | CON | IST | SIN [Vr | ms] (| CONTINUE | ~ | | |
| | On Phase | On Phase | Off Phase | Off Phase | Jump-To | Jump | Jump Cnt | Branch1 | Branch1 | Branch2 | Branch2 | Code | | | ^ |
| 0 | 0.0 | OFF | 0.0 | OFF | 0 | | 0 | 0 | | 0 | | u | | | |
| 1 | 0.0 | OFF | 0.0 | OFF | 0 | OFF | 0 | 0 | OFF | 0 | OFF | ш | | | |
| 2 | 0.0 | OFF | 0.0 | OFF | 0 | OFF | 0 | 0 | OFF | 0 | OFF | LL | | | |
| 3 | 0.0 | OFF | 0.0 | OFF | 0 | OFF | 0 | 0 | OFF | 0 | OFF | ш | | | |
| 4 | 0.0 | OFF | 0.0 | OFF | 0 | OFF | 0 | 0 | OFF | 0 | OFF | u. | | | |
| 5 | 270.0 | ON ON | 0.0 | OFF | 0 | OFF | 0 | 0 | OFF OFF | 0 | OFF | u u | | | |
| 7 | 270.0 | ON | 0.0 | OFF | 0 | OFF | 0 | | OFF | 0 | OFF | ш | | | ~ |
| ' | 270.0 | ON | 0.0 | OFF | U | orr | U | U | OFF | 0 | OFP | ш | | | |
| OV | OC RM | s o | H Sho | | C PK | FA | | al | OP | | | | Bran | ch Outpu | It |
| | | | | | | IA | | d | | | | | Dian | | |

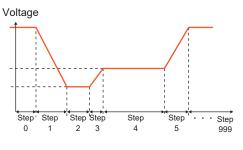

[Output parameters]

- Time: 0.0001 ~ 999.9999s,resolution 0.0001s
- AC voltage*1: 0.0 350.0V (Range 200V) , 0.0 175.0V (Range 100V)
- DC voltage*1: 0.0 ±500.0V (Range 200V), 0.0 ±250.0V (Range 100V)
- Frequency: 1.00 999.9Hz (AC+DC-INT) , 40.00 999.9(AC-INT)
- Waveform: SIN / SQU / TRI / ARB1 to ARB16 (AC-DC-INT/AC-INT)
- On / OFF Phase: Free, Fixed (0.0 ~ 359.9°)
- Sync Code*2: Sequence sync output 0(L)/1(H) via External I/O connector

[Step operation types]

ACV/DCV Behaivior

- CONST: the step immediately to setting values.
- KEEP : Keep the value of the previous step.
- SWEEP: Linearly increases or decreases the values from the end of the previous step to the end of the current step.
- *: Maximum output voltage: ASR-2000; 500Vpp = DC+ACpp, ASR-3000; 570Vpp=DC+ACpp

| Number of sequences: | Retained for each operation mode (DC-INT, AC-INT and AC+DC-INT) and output voltage range (100 V/200 V). |
|-------------------------|---|
| Number of steps: | 1 to 999 (per sequence) , Step 0 is assigned as a "Standby" step |
| Step time: | 0.1 ms to 999.9999 s (resolution 0.1 ms or 0.0001 s) |
| Operations within step: | CT(Constant), KP(Keep), or SP(Linear Sweep) |
| Parameter: | DC voltage, AC voltage, frequency, waveform, phase (start, end), step synchronized output (2 bits) |
| Jump times: | 1 to 999 or infinite |
| | |


ES France - Département Puissance Energie 127 rue de Buzenval BP 26 - 92380 Garches ☆ Tél. 01 47 95 99 45
 ☆ Fax. 01 47 01 16 22

e-mail : tem@es-france.com Site Web : www.es-fr<u>ance.com</u>

E-01 Long-term over voltages

The component's resistance to long-term overvoltage is tested. A generator control

fault during driving operation is simulated.

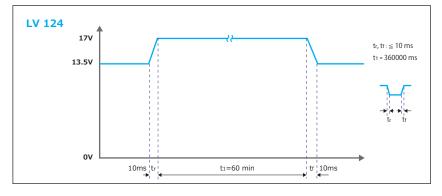

LV 124


Repeat

| Mode: DC- | INT | | tr | | t1 | tr | t2 | | |
|--------------|----------|----------|----------|----------|----------|----------|----------|--|--|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | | |
| Time[ms] | 0.0100 | 0.0100 | 0.0100 | 600.00 | 600.00 | 0.0100 | 0.6000 | | |
| DCV [V] | 13.5 | 13.5 | 17.0 | 17.0 | 17.0 | 13.5 | 13.5 | | |
| DCV Behavior | CONST | CONST | SWEEP | KEEP | KEEP | SWEEP | END | | |
| Termination | CONTINUE | | |
| Jump-To | 0 | 0 | 0 | 0 | 3 | 0 | 0 | | |
| Jump | | OFF | OFF | OFF | ON | OFF | ON | | |
| Jump Cnt | 0 | 0 | 0 | 0 | 2 | 0 | 0 | | |
| Branch 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | |
| Branch 1 | | OFF | OFF | OFF | OFF | OFF | OFF | | |
| Branch 2 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | |
| Branch 2 | | OFF | OFF | OFF | OFF | OFF | OFF | | |
| Code | LL | | |

Note: This waveform changed 600 min to 0.6 s.





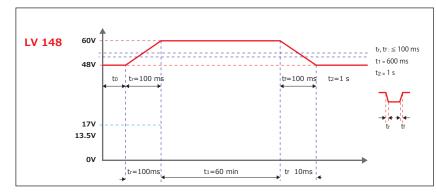

LV 148

 \bigcirc

Repeat

| Mode: DC- | INI | | tr | t | 1 | tf | t2 |
|--------------|----------|----------|----------|----------|----------|----------|----------|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 |
| Time[ms] | 0.0100 | 0.0100 | 0.1000 | 600.00 | 600.00 | 0.1000 | 1.0000 |
| DCV [V] | 48.0 | 48.0 | 60.0 | 60.0 | 60.0 | 48.0 | 48.0 |
| DCV Behavior | CONST | CONST | SWEEP | KEEP | KEEP | SWEEP | END |
| Termination | CONTINUE |
| Jump-To | 0 | 0 | 0 | 0 | 3 | 0 | 0 |
| Jump | | OFF | OFF | OFF | ON | OFF | ON |
| Jump Cnt | 0 | 0 | 0 | 0 | 2 | 0 | 0 |
| Branch 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | | OFF | OFF | OFF | OFF | OFF | OFF |
| Branch 2 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 2 | | OFF | OFF | OFF | OFF | OFF | OFF |
| Code | LL |




Note: This waveform changed 600 s to 6.0 s.


ES France - Département Puissance Energie 127 rue de Buzenval BP 26 - 92380 Garches Tél. 01 Fax. 0



E02 Transiente overvoltages


Transient overvoltages may occur in the electric system due to the switching off of loads and due to short accelerator tip-ins. These overvoltages are simulated by means of this.

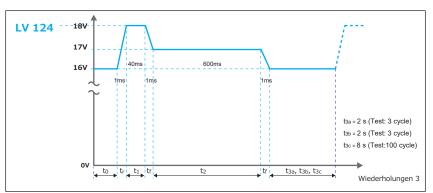


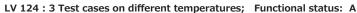

LV 124


| Mode: DC- | | Repeat | | | | | | | |
|--------------|----------|----------|----------|----------|----------|----------|----------|----------|--|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | |
| Time[ms] | 0.0100 | 0.0010 | 0.0400 | 0.0010 | 0.600 | 0.1000 | 0.6000 | 0.6000 | |
| DCV [V] | 16.0 | 18.0 | 18.0 | 17.0 | 17.0 | 16.0 | 16.0 | 16.0 | |
| DCV Behavior | CONST | SWEEP | KEEP | SWEEP | KEEP | SWEEP | KEEP | END | |
| Termination | CONTINUE | |
| Jump-To | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | |
| Jump | | OFF | OFF | OFF | OFF | OFF | ON | OFF | |
| Jump Cnt | 0 | 0 | 0 | 0 | 0 | 0 | 3 | 0 | |
| Branch 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | |
| Branch 1 | | OFF | |
| Branch 2 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | |
| Branch 2 | | OFF | |
| Code | LL | |

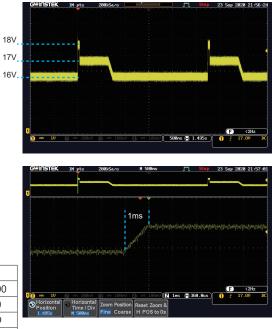

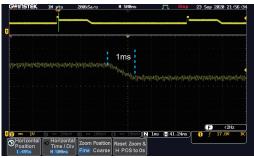

LV 148

(O)

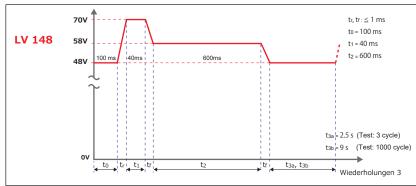

LV 148: 2 tests, short test 3x, long duration test 1000x, Ri: 10 m $\Omega \le$ Ri \le 100 m Ω Functional status: A

| Mode: DC- | INT | Repeat | | | | | | | | |
|--------------|----------|----------|----------|----------|----------|----------|----------|----------|--|--|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | | |
| Time[ms] | 0.1000 | 0.0010 | 0.0400 | 0.0010 | 0.600 | 0.1000 | 2.5000 | 2.0000 | | |
| DCV [V] | 48.0 | 70.0 | 70.0 | 58.0 | 58.0 | 48.0 | 48.0 | 48.0 | | |
| DCV Behavior | CONST | SWEEP | KEEP | SWEEP | KEEP | SWEEP | KEEP | END | | |
| Termination | CONTINUE | | |
| Jump-To | 0 | 0 | 0 | 0 | 0 | 0 | 1 | 0 | | |
| Jump | | OFF | OFF | OFF | OFF | OFF | ON | OFF | | |
| Jump Cnt | 0 | 0 | 0 | 0 | 0 | 0 | 3 | 0 | | |
| Branch 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | |
| Branch 1 | | OFF | | |
| Branch 2 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | | |
| Duamah 2 | | | OFF | | | | | | | |



ES France - Département Puissance Energie 127 rue de Buzenval BP 26 - 92380 Garches



Tél. 01 47 95 99 45 Fax. 01 47 01 16 22

 $\begin{bmatrix} 5\\22 \end{bmatrix}$


e-mail : tem@es-france.com Site Web : www.es-france.com

E-03, E48-03


Transiente Undervoltages

Transient undervoltages in the electric system may occur due to switching on of loads.

These undervoltages are simulated by means of this test.

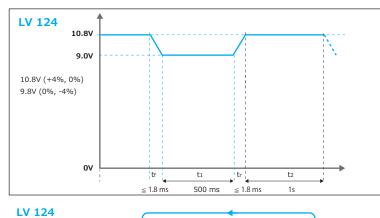

Mode: DC-INT Repeat Step No. 0 2 3 4 5 1 Time[ms] 0.1000 0.0180 0.5000 0.0180 1.000 1.0000 DCV [V] 10.8 10.8 9.0 10.8 10.8 9.0 SWEEP DCV Behavior CONST SWEEP KEEP KEEP KEEP Termination CONTINUE CONTINUE CONTINUE CONTINUE END 0 0 0 Jump-To 0 0 1 OFF OFF OFF ON OFF Jump 0 Jump Cnt 0 0 0 0 2 Branch 1 0 0 0 0 0 0 Branch 1 OFF OFF OFF OFF OFF Branch 2 0 0 0 0 0 0 OFF OFF OFF OFF OFF Branch 2 LL LL LL LL LL LL Code

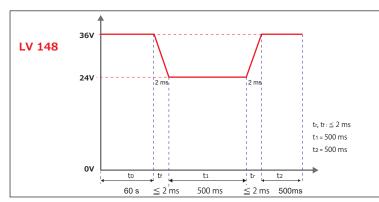


LV 148


(O)

Mode: DC-INT


| - | | to | τf | t 1 | tr | t 2 |
|--------------|----------|----------|----------|------------|----------|------------|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 |
| Time[ms] | 0.0100 | 60.000 | 0.0020 | 0.5000 | 0.0020 | 0.5000 |
| DCV [V] | 0.0 | 36.0 | 24.0 | 24.0 | 36.0 | 48.0 |
| DCV Behavior | CONST | CONST | SWEEP | KEEP | SWEEP | SWEEP |
| Termination | CONTINUE | CONTINUE | CONTINUE | CONTINUE | CONTINUE | END |
| Jump-To | 0 | 0 | 0 | 0 | 0 | 0 |
| Jump | | OFF | OFF | OFF | OFF | OFF |
| Jump Cnt | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | | OFF | OFF | OFF | OFF | OFF |
| Branch 2 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 2 | | OFF | OFF | OFF | OFF | OFF |



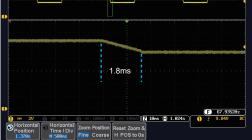

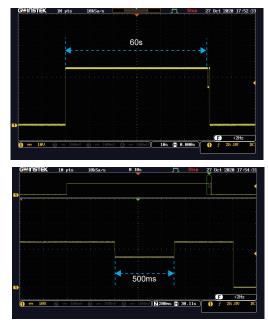



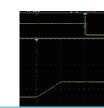



ES France - Département Puissance Energie 127 rue de Buzenval BP 26 - 92380 Garches Tél. 01 47 95 99 45 Fax. 01 47 01 16 22 e-mail : tem@es-france.com Site Web : www.es-france.com

E-04, E

Jumpstart, resp. Recuperation


Jump starting of the vehicle is simulated. The maximum test voltage results from commercial vehicle systems and their elevated electric system voltages. LV 148: Longer recuperation is simulated.

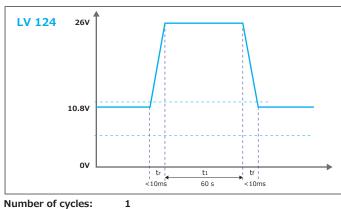

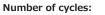

LV 124 Mode: DC-INT


| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 |
|--------------|----------|----------|----------|----------|----------|----------|----------|
| Time[ms] | 0.0100 | 20.000 | 0.0100 | 60.00 | 0.0100 | 0.0100 | 0.6000 |
| DCV [V] | 0.0 | 10.8 | 26.0 | 26.0 | 10.8 | 13.5 | 13.5 |
| DCV Behavior | CONST | CONST | SWEEP | KEEP | SWEEP | KEEP | END |
| Termination | CONTINUE |
| Jump-To | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Jump | | OFF | OFF | OFF | OFF | OFF | ON |
| Jump Cnt | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | | OFF | OFF | OFF | OFF | OFF | OFF |
| Branch 2 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 2 | | OFF | OFF | OFF | OFF | OFF | OFF |
| Code | LL |

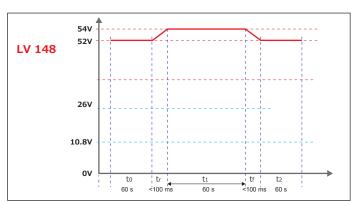


Number of cycles: LV 148 Mode: DC-INT

1

| Mode: DC- | INT | | | | | | 6 |
|--------------|----------|----------|----------|----------|----------|----------|-----------------|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 0.0100 |
| Time[ms] | 0.0100 | 60.000 | 0.1000 | 60.00 | 0.1000 | 60.0000 | 0.0 |
| DCV [V] | 0.0 | 52.0 | 54.0 | 54.0 | 52.0 | 52.0 | END CONTINUE |
| DCV Behavior | CONST | CONST | SWEEP | KEEP | SWEEP | KEEP | CONTINUE |
| Termination | CONTINUE | CONTINUE | CONTINUE | CONTINUE | CONTINUE | CONTINUE | |
| Jump-To | 0 | 0 | 0 | 0 | 0 | 0 | ON 0 |
| Jump | | OFF | OFF | OFF | OFF | OFF | 0 |
| Jump Cnt | 0 | 0 | 0 | 0 | 0 | 0 | OFF |
| Branch 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | | OFF | OFF | OFF | OFF | OFF | OFF |
| Branch 2 | 0 | 0 | 0 | 0 | 0 | 0 | UFF |

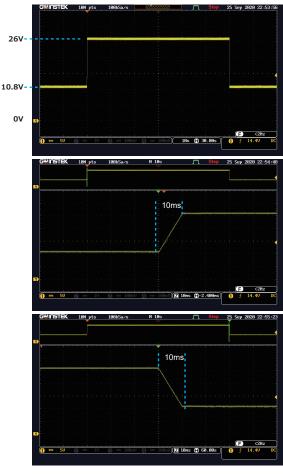

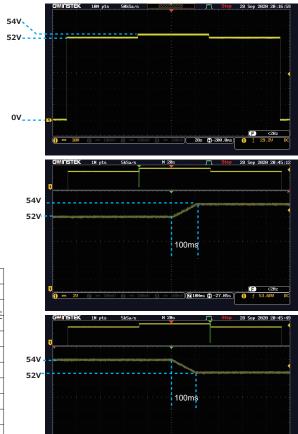

ES France - Département Puissance Energie 127 rue de Buzenval BP 26 - 92380 Garches




Tél. 01 47 95 99 45 Fax. 01 47 01 16 22

e-mail : tem@es-france.com \boxtimes Site Web : www.es-france.com




E-07 Slow decrease and increase of the supply voltage

The slow decrease and increase of the supply voltage is simulated as it occurs during the slow discharging and charging procedure of the vehicle battery.

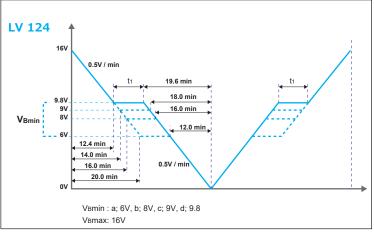

The maximum Step time for Sequence mode is 999.9999 seconds. If you want to set a time that exceeds the maximum step time, you can set it by combining steps.

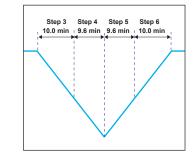


Number of cycles: 1

t1/t2: Holding time at V1/V2 until event memory has been completely read out

LV 124

| Mode: DC- | INT | VBmin | =9.8V | 8V 19.6 min 19.6 min | | | | | |
|--------------|----------|----------|----------|----------------------|----------|----------|----------|----------|----------|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Time[ms] | 0.0100 | 744.0000 | 10.0000 | 600.0000 | 576.0000 | 576.0000 | 600.0000 | 10.0000 | 744.0000 |
| DCV [V] | 16.0 | 9.8 | 9.8 | 4.8 | 0 | 4.8 | 9.8 | 9.8 | 16.0 |
| DCV Behavior | CONST | SWEEP | KEEP | SWEEP | SWEEP | SWEEP | SWEEP | KEEP | SWEEP |
| Termination | CONTINUE | CONTINUE | CONTINUE | CONTINUE | CONTINUE | CONTINUE | CONTINUE | CONTINUE | END |
| Jump-To | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Jump | | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| Jump Cnt | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| Branch 2 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 2 | | OFF | OFF | OFF | OFF | OFF | OFF | OFF | OFF |
| Code | LL | LL | LL | LL | LL | LL | LL | LL | LL |

In the figure below, the steps time changed so that the overall image is easy to understand.

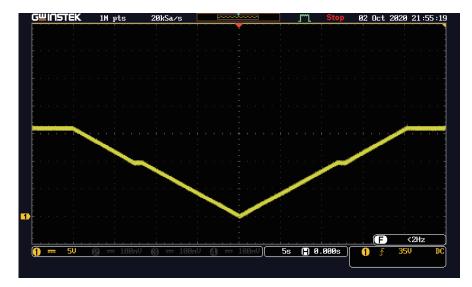

 \bigcirc





Tél. 01 47 95 99 45 Fax. 0<u>1 47 01 16 22</u>




E48-06a Slow decrease and increase of the supply voltage

The slow decrease and increase of the supply voltage is simulated as it occurs during the slow discharging andcharging procedure of the vehicle battery.The maximum Step time for Sequence mode is 999.9999 seconds.

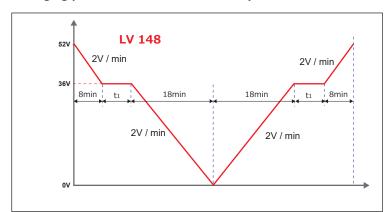

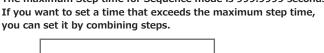

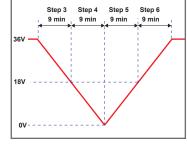


Number of cycles: 1

t1/t2: Holding time at V1/V2 until event memory has been completely read out

Number of cycles: 1 Functional status: depends on voltage range

| LV 148 | | | | 18 | min | 18 r | nin | I | |
|--------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| Mode: DC- | INT | | | 9 min | 9 min | 9 min | 9 min | | |
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| Time[ms] | 0.0100 | 540.0000 | 10.0000 | 540.0000 | 540.0000 | 540.0000 | 540.0000 | 10.0000 | 540.0000 |
| DCV [V] | 52.0 | 36.0 | 36.0 | 18.0 | 0 | 18.0 | 36.0 | 36.0 | 52.0 |
| DCV Behavior | CONST | SWEEP | KEEP | SWEEP | SWEEP | SWEEP | SWEEP | KEEP | SWEEP |
| Termination | CONTINUE |
| Jump-To | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Jump | | OFF |
| Jump Cnt | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | | OFF |
| Branch 2 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 2 | | OFF |
| Code | LL |

In the figure below, the steps time changed so that the overall image is easy to understand.

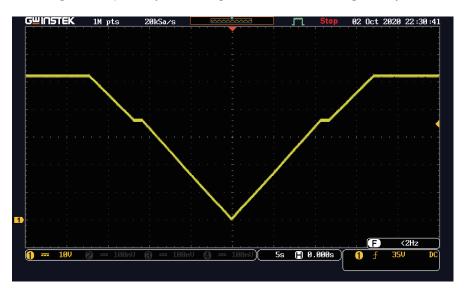

 \bigcirc






E-08, E48-07 Slow decrease, fast increase in the supply voltage

LV 124 This test simulates the slow decrease of the battery voltage to 0 V and the sudden reapplication of the battery voltage, e.g., by applying a jump start source.

LV 148 This test simulates the slow decrease of the vehicle system voltage to the energy storage protection voltage followed by shutdown to 0V and the sudden reconnect the system voltage by a charged or new energy storage battery.

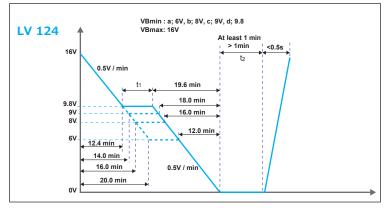

Number of cycles: 1 per operating mode II.a / II.c

t1: Holding time at V1 until event memory has been completely read out

t2: At least 1 min; however, as long as internal capacity is completely discharged

19.6 min

LV 124

| Mode: DC- | INT V | Bmin = 9. 8 | 3V | 4 19.0 | • • • • • • | • | |
|--------------|----------|--------------------|----------|----------|-------------|----------|--------|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 |
| Time[ms] | 0.0100 | 744.0000 | 10.0000 | 600.0000 | 576.0000 | 60.0000 | 0.5000 |
| DCV [V] | 16.0 | 9.8 | 9.8 | 4.8 | 0 | 0.0 | 16.0 |
| DCV Behavior | CONST | SWEEP | KEEP | SWEEP | SWEEP | KEEP | SWEEP |
| Termination | CONTINUE | CONTINUE | CONTINUE | CONTINUE | CONTINUE | CONTINUE | END |
| Jump-To | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Jump | | OFF | OFF | OFF | OFF | OFF | OFF |
| Jump Cnt | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 1 | | OFF | OFF | OFF | OFF | OFF | OFF |
| Branch 2 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| Branch 2 | | OFF | OFF | OFF | OFF | OFF | OFF |
| Code | LL | LL | LL | LL | LL | LL | LL |

In the figure below, the steps time changed so that the overall image is easy to understand.










E-09, E48-08 Reset behavior

The reset behavior of a component in its environment is simulated and tested. Test boundary conditions (e.g., assembly, terminal, system) must be described in detail. During operation, an arbitrary sequence of repeated switching-on/off procedures occurs; this must not lead to an undefined behavior of the component. The reset behavior is represented by a voltage variance and a time variance. Two different test sequences are required to simulate different switch-off times. A component must always undergo both sequences.

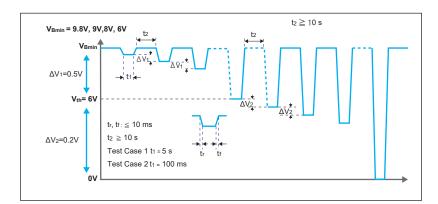

Jump-To 0 Jump OFF Jump Cnt 0 Branch 1 0 Branch 1 OFF Branch 2 0 Branch 2 OFF Code LL

Number of cycles:

Functional status:

LV 124

ΔV1=0.5V

| Mode: DC- | INT 9.8v | ←── | | ΔV1= | 0.50 | | | | | | | → 6.0V |
|--------------|----------|----------|----------|----------|----------|----------|----------|---|----------|----------|----------|----------|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | _ | 27 | 28 | 29 | 30 |
| Time[ms] | 10.0000 | 0.0100 | 5.0000 | 0.0100 | 10.0000 | 0.0100 | 5.0000 | | 0.0100 | 10.0000 | 0.0100 | 5.0000 |
| DCV [V] | 9.8 | 9.3 | 9.3 | 9.8 | 9.8 | 8.8 | 8.8 | | 9.8 | 9.8 | 6.0 | 6.0 |
| DCV Behavior | CONST | SWEEP | KEEP | SWEEP | KEEP | SWEEP | KEEP | | SWEEP | KEEP | SWEEP | KEEP |
| Termination | CONTINUE | | CONTINUE | CONTINUE | CONTINUE | CONTINUE |

ΔV1=0.2V 5.8V 🔶

1 per operating mode II.a / II.c


Detection when A exits for the first time.

→ 0.0V

| | | | ••••• | | | | | | , | | |
|--------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|---------|
| Step No. | 31 | 32 | 33 | 34 | 35 | 36 | 37 | 149 | 150 | 151 | 152 |
| Time[ms] | 0.0100 | 10.0000 | 0.0100 | 5.0000 | 0.0100 | 10.0000 | 0.0100 | 0.0100 | 10.0000 | 0.0100 | 10.0000 |
| DCV [V] | 9.8 | 9.8 | 5.8 | 5.8 | 9.8 | 9.8 | 5.6 | 0.0 | 0.0 | 9.8 | 9.8 |
| DCV Behavior | SWEEP | KEEP | SWEEP | KEEP | SWEEP | KEEP | SWEEP | SWEEP | KEEP | SWEEP | KEEP |
| Termination | CONTINUE | END |

In the figure below, the steps time changed so that the overall image is easy to understand.



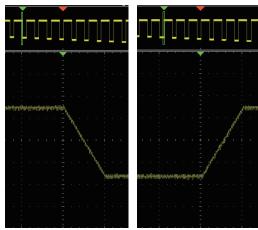

ES France - Département Puissance Energie 127 rue de Buzenval BP 26 - 92380 Garches




Tél. 01 47 95 99 45 Fax. 01 47 01 16 22



e-mail : tem@es-france.com Site Web : www.es-france.com

E-09, E48-08 Reset behavior

The reset behavior of a component in its environment is simulated and tested. Test boundary conditions (e.g., assembly, terminal, system) must be described in detail. During operation, an arbitrary sequence of repeated switching-on/off procedures occurs; this must not lead to an undefined behavior of the component. The reset behavior is represented by a voltage variance and a time variance. Two different test sequences are required to simulate different switch-off times. A component must always undergo both sequences.

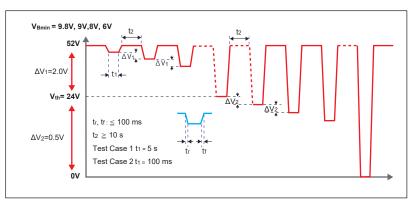

Requirements Number of cycles: Functional status:

Mode: DC-INT 52.0V +

LV 148 1 per operating mode II.c Detection when A exits for the first time.

| ump-To | 0 |
|----------|-----|
| Jump | OFF |
| Jump Cnt | 0 |
| Branch 1 | 0 |
| Branch 1 | OFF |
| Branch 2 | 0 |
| Branch 2 | OFF |
| Code | LL |
| | |

▶ 24.0V

LV 148

ΔV1=2.0V

| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 51 | 52 | 53 | 54 |
|--------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| Time[ms] | 10.0000 | 0.1000 | 5.0000 | 0.1000 | 10.0000 | 0.1000 | 5.0000 | 0.0100 | 10.0000 | 0.1000 | 5.0000 |
| DCV [V] | 52.0 | 50.0 | 50.0 | 52.0 | 52.0 | 48.0 | 48.0 | 52.0 | 52.0 | 24.0 | 24.0 |
| DCV Behavior | CONST | SWEEP | KEEP |
| Termination | CONTINUE |

| | | : | 23.5V ┥ | ΔV1= | 0.5V | | | | → 0.0V | | |
|--------------|----------|----------|----------|----------|----------|----------|----------|--------------|----------|----------|---------|
| Step No. | 55 | 56 | 57 | 56 | 57 | 58 | 59 | 245 | 246 | 247 | 248 |
| Time[ms] | 0.1000 | 10.0000 | 0.1000 | 5.0000 | 0.1000 | 10.0000 | 0.1000 | 0.1000 | 10.0000 | 0.1000 | 10.0000 |
| DCV [V] | 52.0 | 52.0 | 23.5 | 23.5 | 52.0 | 52.0 | 23.0 | 0.0 | 0.0 | 52.0 | 52.0 |
| DCV Behavior | SWEEP | KEEP | SWEEP | KEEP | SWEEP | KEEP | SWEEP | SWEEP | KEEP | SWEEP | KEEP |
| Termination | CONTINUE | CONTINUE | CONTINUE | CONTINUE | END |









E-11 Start impulse

When starting the engine, the battery voltage falls for a short period to a low value, and then again to rise slightly. The start process can happen under different vehicle start situations: To cover both cases at cold start and warm start two different test cases are required. A component has always to go through both test procedures.


Test case 1 : Cold start Normal

At test case 1 cold start (start the engine), there are test impulses for: "normal " for normal cold start and "severe " with a lower battery voltage consider when starting the engine.

At test case 2 warm start (automatic restart after a stop), there are two cycles: Short: 5 seconds break 10 x Long: 20 seconds break 100 cycles


Number of samples: at least 6

Example: Normal

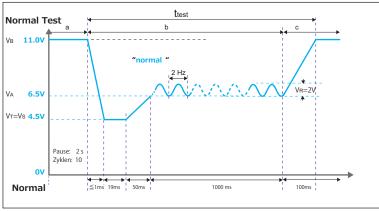

Note: The time axis scale is not the actual ratio.

| Mode: AC/DC-INT | | | | On Phas 270° | | | | | |
|--------------------|----------|----------|----------|-----------------|----------|----------|----------|----------|--|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | |
| Time[ms] | 1.0000 | 1.0000 | 0.0010 | 0.0190 | 0.0500 | 10.0000 | 0.1000 | 1.0000 | |
| ACV [Vrms] | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.7 | 0.0 | 0.0 | |
| ACV Behavior | CONST | CONST | CONST | CONST | CONST | CONST | CONST | CONST | |
| DCV [V] | 11.0 | 11.0 | 4.5 | 4.5 | 6.5 | 7.5 | 11.0 | 11.0 | |
| DCV Behavior | CONST | CONST | SWEEP | CONST | SWEEP | CONST | SWEEP | CONST | |
| Frequency [Hz] | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 | 2.0 | 60.0 | 60.0 | |
| Frequency Behavior | CONT | CONT | CONT | CONT | CONT | CONT | CONT | CONT | |
| Waveform | SIN | SIN | SIN | SIN | SIN | SIN | SIN | SIN | |
| Termination | Continue | Continue | Continue | Continue | Continue | Continue | Continue | Continue | |
| On Phase [Degree] | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 270.0 | 0.0 | 0.0 | |
| On Pase | OFF | OFF | OFF | OFF | OFF | ON | OFF | OFF | |

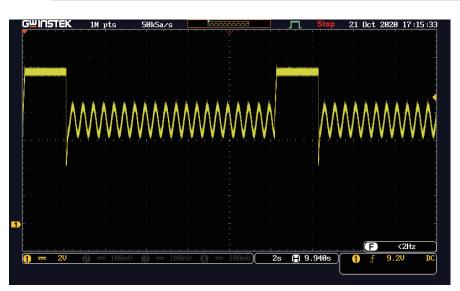










Test case1 : Cold start Severe

At test case 1 cold start (start the engine), there are test impulses for: "normal " for normal cold start and "severe " with a lower battery voltage consider when starting the engine.

At test case 2 warm start (automatic restart after a stop), there are two cycles: Short: 5 seconds break 10 x Long: 20 seconds break 100 cycles


Number of samples: at least 6


Example: Severe

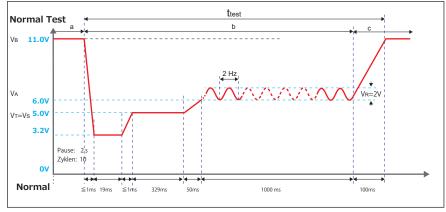

Note: The time axis scale is not the actual ratio.

| Mode: AC/DC-INT | | | | On Phase 270° | | | | | |
|--|----------|----------|----------|------------------|----------|----------|----------|----------|--|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | |
| Time[ms] | 1.0000 | 1.0000 | 0.0010 | 0.0190 | 0.0500 | 10.0000 | 0.1000 | 1.0000 | |
| ACV [Vrms] | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.7 | 0.0 | 0.0 | |
| ACV Behavior | CONST | CONST | CONST | CONST | CONST | CONST | CONST | CONST | |
| DCV [V] | 11.0 | 11.0 | 4.5 | 4.5 | 6.5 | 7.5 | 11.0 | 11.0 | |
| DCV Behavior Frequency [Hz] Frequency Behavior | CONST | CONST | SWEEP | CONST | SWEEP | CONST | SWEEP | CONST | |
| | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 | 2.0 | 60.0 | 60.0 | |
| | CONT | CONT | CONT | CONT | CONT | CONT | CONT | CONT | |
| Waveform | SIN | SIN | SIN | SIN | SIN | SIN | SIN | SIN | |
| Termination | Continue | Continue | Continue | Continue | Continue | Continue | Continue | Continue | |
| On Phase [Degree] | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 270.0 | 0.0 | 0.0 | |
| On Pase | OFF | OFF | OFF | OFF | OFF | ON | OFF | OFF | |

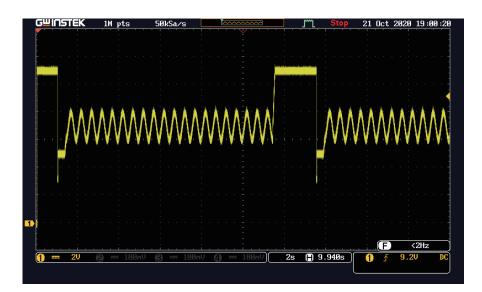

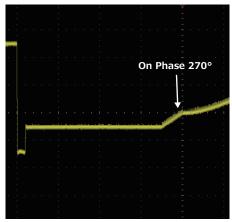









E-11 Start impulse

Test Case 2: Start pulses Hot start

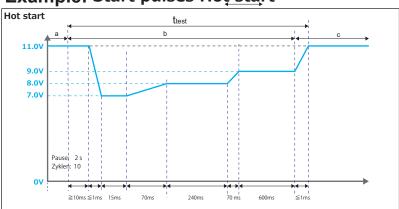

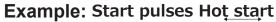

Note: The time axis scale is not the actual ratio.

| t _{test} | | | | | | | | | | |
|--------------------|----------|----------|----------|----------|----------|----------|----------|----------|----------|----------|
| Mode: DC-INT | • | b | | | | | | | | |
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
| Time[ms] | 0.1000 | 0.0100 | 0.0010 | 0.0150 | 0.0700 | 0.2400 | 0.0700 | 0.6000 | 0.0010 | 0.1000 |
| ACV [Vrms] | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 |
| ACV Behavior | CONST |
| DCV [V] | 11.0 | 11.0 | 7.0 | 7.0 | 8.0 | 8.0 | 9.0 | 9.0 | 11.0 | 11.0 |
| DCV Behavior | CONST | CONST | SWEEP | CONST | SWEEP | KEEP | SWEEP | KEEP | SWEEP | KEEP |
| Frequency [Hz] | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 |
| Frequency Behavior | CONT |
| Waveform | SIN |
| Termination | Continue |
| On Phase [Degree] | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 |
| On Pase | OFF |








Tél. 01 47 95 99 45 Fax. <u>01 47 01 16 22</u>



E-12 Voltage curve with electric system control


The behavior of the electric system with voltage controls, e.g., with the use of intelligent generator controls or DC-DC converter controls, is simulated.

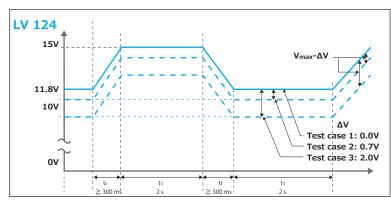


| Operating mode of DUT | Operating mode II c |
|-----------------------|---------------------------|
| operating mode of Dor | operating mode mic |
| Vmin | (11,8 V - ΔV) (0 %, -4 %) |
| Vmax | (15 V - ΔV) (+4 %, 0 %) |
| t1 | 2 s |
| tr | ≥300 ms |
| tf | ≥300 ms |
| Number of cycles | 10 |
| Number of samples | at least 6 |
| | |

| | | | Repeat | | | | | | |
|--------------------|----------|----------|----------|----------|----------|----------|--------|--|--|
| Step No. | 0 | 1 | 2 | 3 | 4 | 5 | 6 | | |
| Time[ms] | 1.0000 | 0.3000 | 0.3000 | 2.0000 | 0.3000 | 2.0000 | 0.1000 | | |
| ACV [Vrms] | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | 0.0 | | |
| ACV Behavior | CONST | CONST | CONST | CONST | CONST | CONST | CONST | | |
| DCV [V] | 11.8 | 11.8 | 15.0 | 15.0 | 11.8 | 11.8 | 11.0 | | |
| DCV Behavior | CONST | KEEP | SWEEP | KEEP | SWEEP | KEEP | SWEEP | | |
| Frequency [Hz] | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 | 60.0 | | |
| Frequency Behavior | CONT | CONT | CONT | CONT | CONT | CONT | CONT | | |
| Waveform | SIN | SIN | SIN | SIN | SIN | SIN | SIN | | |
| Termination | Continue | Continue | Continue | Continue | Continue | Continue | END | | |
| Jump-To | 0 | 0 | 0 | 0 | 0 | 2 | 0 | | |
| Jump | OFF | OFF | OFF | OFF | OFF | ON | OFF | | |
| Jump Cnt | 0 | 0 | 0 | 0 | 0 | 10 | 0 | | |

Test case 1: ΔV=0.0V

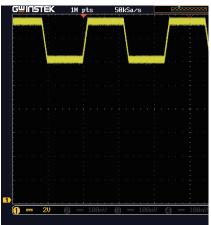

Test case 2: ΔV=0.7V

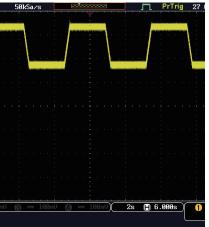

Test case 3: ΔV=2.0V

