Network Construction with One Single Instrument

Must-have item for building a 10 GB networks

CAT6A



Extremely Intuitive


Just connect a cable, and press the TEST button



Wide LCD Screen

Check all parameters such as wiremap, direction and cable length at a glance.



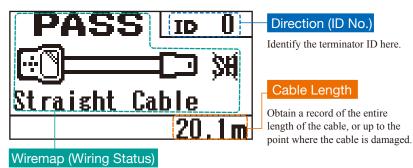

 $Large\ PASS/FAIL\ display,\ cable\ type,\ reason\ for\ cable\ failure\ and\ shield\ condition.$


Wiremap


For wiring confirmation and locating broken wires after installation. Quick PASS/FAIL reading helps you complete your work faster.



Display Examples

Both straight-through and crossover cables (10/100BASE, 1000BASE-T and 1000BASE-TX) can be checked.







Straight Cable

Cross Cable

Fully Compatible to CAT6A LAN Cables

Detect the existence of shields or check for shield integrity.





Super-

sensitive

Detection

Unshielded



Display Examples




Reversed



Pins 3 and 6 have been incorrectly paired with Pins 4 and 5.

Transposed




Pin 1 is open at a distance 7 meters from the LAN cable tester.

Open

FAIL LID --

Pins 1 and 2 are shorted at a distance 10 meters from the LAN cable tester.



A very common mistake twist pairs Pins 3+6, and Pins 4+5, have been incorrectly connected.

Short Split Pair

Caution! ▶ Can you find split pairs?


1 2 ➌ 4 (5) 0





Proper Wiring

LAN cable wires should be connected as shown in the diagram above, such that Pins 3 and 6 are twisted.

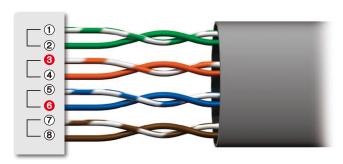



Split Pair

A "Split Pair" is detected when Pins 3 and 6 are not twisted and paired together as shown above.

Direction

Locate up to 21 unique cable destinations.


Have you ever had trouble installing additional cables?



Take advantage of the conveniences offered by the tester's capabilities to check wiring while confirming multiple cable destinations.



You will never need to go back and forth again just to change the terminators.



Up to 21 terminators can be connected (additional terminators sold separately.) Convenient for confirming the connection destinations of multiple cables.

Cable Length

Measure for cable length and detect the location of broken or short-circuited wires.

The NVP*setting is a cable-length compensation function that enhances the accuracy of cable length measurements. Accuracy with NVP activated:

■ ± 4% rdg. ± 1m


(vs.previous HIOKI model: 15% rdg. ±1m)

Increased **Precision**

* NVP (Nominal Velocity of Propagation) is the ratio of the speed of a signal in the cable relative to the speed of light in a vacuum. NVP differs according to the type of cable and the manner in which the wire pairs are twisted, so measurement accuracy can be enhanced by setting the NVP value for the particular type of cable to be measured.



■ Activating the NVP function is as simple as 1-2-3

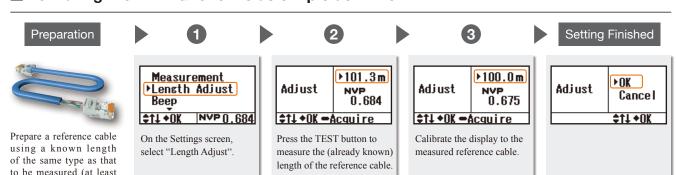

How Can Split Pairs Affect the Network?

- Communication speed can be suppressed 100BASE signals may reach only 10BASE speeds.
- Excessive communication errors data transfer may be intermittent or completely inhibited.
- Cables miswired in this way are more susceptible to electrical noise.

Split pairs appear to be properly connected to the untrained eye, and cannot be detected with continuity testing.

100-meter length recom-

mended).



To properly check LAN cable wiring, a tester capable of detecting split pairs is indispensable.



The HIOKI 3665 can do the job for you properly and accurately by also detecting split pairs.

(
Measurable cables	Twisted-pair cable
	$100~\Omega$ characteristic impedance, shielded and unshielded, CAT 3, 4, 5, 5e, 6 and 6A
Compatible connectors	RJ-45 plugs
Measurement Items	
[Wiremap]	Wiring condition and shielding can be confirmed using the HIOKI TERMINATOR 9690
	Detectable errors: open, short, reversed, transposed, split pairs and other miswiring
[Cable Length]	Measurable lengths: 2 m to 300 m, 6.6 ft to 984 ft
	Measurement accuracy: ±4% rdg. ±1 m, ±4% rdg. ±3.3 ft (condition of regulation: single wire)
	Display resolution: 0.1 m
[Destination]	Up to 21 cables can be identified using the supplied TERMINATOR 9690 and optional Models 9690-01 to 9690-04 to test multiple cables simultaneously
Display	128 × 64 dot matrix LCD (with backlight)
Functions	Auto Backlight: pressing a button turns the backlight on (it turns off automatically after about 20 seconds)
	Beeper: sounds when pressing buttons and when measurement results are displayed
	Energy-Saving Mode: enter into energy-saving mode after measurement (and resume when the TEST button is pressed)
	Auto Power Save: the 3665 turns off automatically about 10 minutes after the last button press
	Battery Check: Battery indicator blinks when voltage falls below 2.4 V
	Unit Switch: Select between meters or feet
Compliance Standards	Safety Standard: EN61010 Pollution Level 2
	EMC Standard: EN61326
Allowable Input	3.3 V peak (between RJ-45 pins)
Operating Temperature & Humidity	0 to 40 °C, 80% RH or less, non-condensating
Storage Temperature & Humidity	−10 to 50 °C, 80% RH or less, non-condensating
Power supply	LR6 (AA) alkaline batteries × 2
Maximum Power Consumption	1.4 VA
Operating Time	Approx. 50 hours (measuring once per minute)
Dimensions and mass	Approx. 85 mm (3.35 in) W × 130 mm (5.12 in) H × 33 mm (1.30 in) D, approx. 160 g (5.6 oz)



Model : LAN CABLE HITESTER 3665

Model No. (Order Code) (Note)

(English model) 3665-20

Accessories: Terminator 9690 ×1, Carrying case ×1, LR6 (AA) alkaline battery ×2, Instruction manual ×1

■ Supplied Accessories

TERMINATOR 9690 CARRYING CASE

(Stores the HiTESTER 3665 and TERMINATORs 9690)







CARRYING CASE

■ Options –

TERMINATOR 9690-01 (IDs 1 to 5) TERMINATOR 9690-02 (IDs 6 to 10) TERMINATOR 9690-03 (IDs 11 to 15) TERMINATOR 9690-04 (IDs 16 to 20) CARRYING CASE 9249 (stores the 3665 and 9690 together)



TERMINATOR 9690-01



CARRYING CASE 9249 (for storing everything together)

Note: Company names and product names appearing in this brochure are trademarks or registered trademarks of various companies.

DISTRIBUTED BY

HIOK HIOKI E.E. CORPORATION

HEADQUARTERS

81 Koizumi. Ueda, Nagano 386-1192 Japan https://www.hioki.com/

