NI-9222 Getting Started



NI-9222 Getting Started ±10 V, 500 kS/s/ch, 16-Bit, Simultaneous Input, 4-Channel C Series Voltage Input Module


Contents

1.	Connector Types	3
2.	NI-9222 Block Diagram	3
3.	NI-9222 Pinout	3
4.	Grounded Connections	4
5.	Floating Connections	4
6.	NI-9222 Connection Guidelines	4
	6.1 Wiring for High-Vibration Applications	5
7.	Cable Requirements for EMC Compliance	5

Connector Types

The NI-9222 has more than one connector type: NI-9222 with screw terminal, NI-9222 with snap in terminal, and NI-9222 with BNC. Unless the connector type is specified, NI-9222 refers to all connector types.

NI-9222 Block Diagram

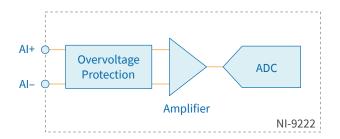

- Input signals on each channel are buffered, conditioned, and then sampled by an ADC.
- Each AI channel provides an independent signal path and ADC, enabling you to sample all channels simultaneously.

NI-9222 Pinout


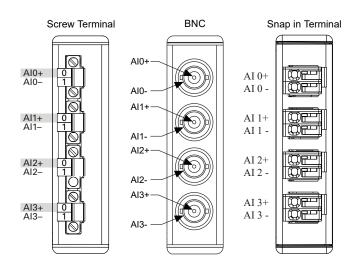


Table 1: Signal Descriptions


Signal	Description
AI+	Positive analog input signal connection
Al-	Negative analog input signal connection

Grounded Connections

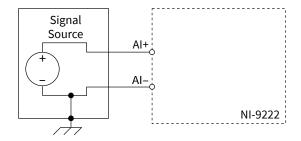

Make sure the voltage on the AI+ and AI- connections are in the channel-to-earth safety voltage range to ensure proper operation.

Floating Connections

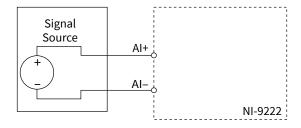

NI-9222 Connection Guidelines

- Make sure that devices you connect to the NI-9222 are compatible with the module specifications.
- You must use 2-wire ferrules to create a secure connection when connecting more than one wire to a single terminal on the NI-9222 with screw terminal and NI-9222 with snap in terminal.

Wiring for High-Vibration Applications

If your application is subject to high vibration, NI recommends that you use the NI 9971 backshell kit to protect connections to the NI-9222 with screw terminals or NI 9990 backshell kit to protect connections to the NI-9222 with snap in terminals.

You must follow these guidelines to meet the shock and vibration performance specifications stated in the device datasheet on ni.com/manuals.

- Panel mount the system.
- Provide strain relief for the module by securing the cabling to a supporting fixture no more than 8 cm (3 in.) away from the opening of the connector backshell.
- Ensure that the supporting fixture for strain relief is stiff and rigidly coupled to the chassis mounting surface.
- Use ferrules to terminate wires to the detachable connector.


Cable Requirements for EMC Compliance

Select and install cables for the NI-9222 with screw terminal and NI-9222 with snap in terminal in accordance with the following requirements:

- Connect the cable shield to the chassis ground (grounding screw of the chassis) using the shortest length of wire possible.
- Use shielded, twisted-pair cables (Belden 9451 or equivalent).



Figure 1: Cable Connections for NI-9222 with screw terminal and NI-9222 with snap in terminal for EMC Compliance

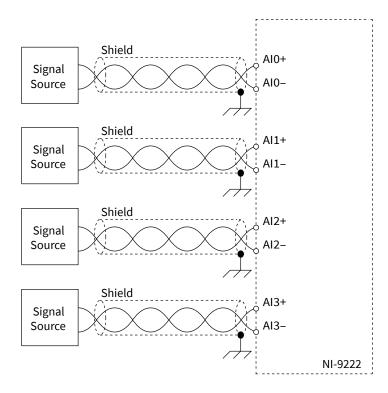

Information is subject to change without notice. Refer to the NI Trademarks and Logo Guidelines at ni.com/trademarks for information on NI trademarks. Other product and company names mentioned herein are trademarks or trade names of their respective companies. For patents covering NI products/technology, refer to the appropriate location: Help»Patents in your software, the patents.txt file on your media, or the National Instruments Patent Notice at ni.com/patents. You can find information about end-user license agreements (EULAs) and third-party legal notices in the readme file for your NI product. Refer to the Export Compliance Information at ni.com/legal/export-compliance for the NI global trade compliance policy and how to obtain relevant HTS codes, ECCNs, and other import/export data. NI MAKES NO EXPRESS OR IMPLIED WARRANTIES AS TO THE ACCURACY OF THE INFORMATION CONTAINED HEREIN AND SHALL NOT BE LIABLE FOR ANY ERRORS. U.S. Government Customers: The data contained in this manual was developed at private