

### CLAMP ON POWER LOGGER PW3365



# Eliminate the risk of short-circuits and electrical accidents







The world's first instrument to offer no-metal-contact power measurement

Free from the risk of short-circuit accidents since no metal comes into contact with energized parts, the Clamp On Power Logger PW3365-20 can measure voltage, current, and power right on the cable, letting you safely test in locations that were dangerous or even impossible in the past.






# Safe, Easy, Voltage Measurement

The PW3365-20's dedicated voltage sensor delivers the world's first no-metal-contact measurement.

#### Free yourself from the risk of short-circuits by measuring right on the cable sheath without ever needing to touch metal to energized parts





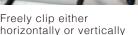





#### Measure in potentially hazardous locations





Locations without energized parts

Measure on the outside of cables





Locations with covered terminals

Measure without removing the covers









Locations with a risk of electric shock

Measure at safer points

#### How is voltage measured without any metallic contact?

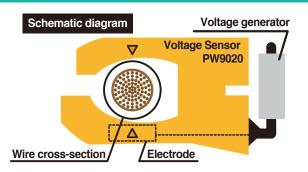

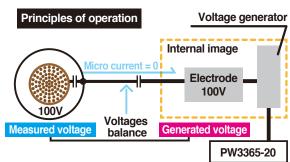

Inside the PW9020 is an electrode (a metal plate). When there is a potential difference between this electrode and the measured line, a minute current flows as a result. By detecting this minute current and generating a voltage such that the current declines to zero, it is possible to accurately measure the voltage without being affected by the outer diameter of the measured cable or its insulation.



Applicable standards

Safety: EN61010, EMC: EN61326

#### **Review Results**

# At the Worksite

# Display measured values as a graph and evaluate results at a glance

Measured values can be displayed as a graph, which is convenient when using the instrument in power management applications. Since you can statistically review not only the measured value at that moment, but also measured values that have been recorded, it's easy to check values on the spot.


#### Parameter List and Waveform Displays

# Select a display with the screen selection button

Review a list of principal test parameters, including voltage, current, power, frequency, and energy


Select the WAVE display to check voltage and current waveforms.



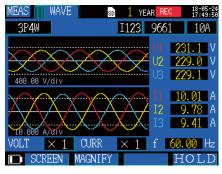

List display screen

Waveform display screen

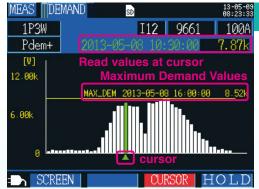

Bar graph of values measured over a period of

24 hours at a 30-minute interval

#### Demand Graph Display

# Display demand value trends

It's easy to check the maximum demand value and the time at which it occurred

Particularly useful in power management applications



You can create a bar graph that makes it obvious whether power is being bought or sold by switching the active power demand value display from consumption to regeneration



#### Trend Graph Display

\* Except for demand

# Choose one measured parameter to create a time-series display as a graph

Monitor power variations to check for connections between equipment operating status and power consumption.

Display the maximum, minimum, and average values at the cursor position

Identify these parameters right on the time-axis graph display



Example
Power trend graph display

MAX 9.3k Maximum
Value

MIN 7.6k Minimum Value

AVG 8.4k Average Value Capture and record all fluctuations

Data interval (1sito 60min)

Maximum data

Average data

Minimum data

Record

Set the power logger to save all parameters to record the maximum, minimum, and average values

during the set recording interval.

(ES) Equipements Scientifiques SA - Département Tests Energie Mesures - 127 rue de Buzenval BP 26 - 92380 Garches Tél. 01 47 95 99 45 - Fax. 01 47 01 16 22 - e-mail: tem@es-france.com - Site Web: www.es-france.com

# Configure Settings with Quick Set

# Graphical, easy-to-understand guidance for connection procedures

Quick Setup guides you through the process of setting up the instrument for measurement, right up to starting measurement, on the screen to simplify set work. Since any mistaken connections will trigger a FAIL message, the feature also helps prevent measurement mistakes. If you receive a FAIL result, the instrument will also indicate the location of the problem.



## Setup Flow (example: 3P4W)


Quick Set START / Choose the wire type

Connect the leads to the PW3365-20 STEP2






#### Connect the voltage sensor

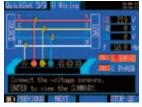



#### STEP4 Connect the clamp sensors

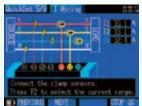



#### STEP5

#### Select the current range

#### STEP6 Check wire connection status





#### If you receive a FAIL result

Highlight the FAIL message with the cursor and press ENTER to view information about where the connection needs to be corrected.

Measurement

## Miswiring Example (Clamp Orientation)

Neither power nor power Correct Orientation factor can be measured accurately with the clamp toward the load side in the wrong orientation.

Point the



The I vector's phase direction is

The I vector's phase direction is pposite the determination area. 123 9661 50A

within the determination area

Power displayed value is too low

P: 17.8kW

MRR PHACE Red means : FAIL WIT PHACE Green means : PASS


#### Safely and Easily

# Measure Harmonic

#### NEW

# Measure harmonics with no-metal-contact voltage measurement technology

This useful feature has come to the PW3365, enabling the instrument to measure voltage and current harmonics in addition to power. Hioki's no-metal-contact voltage measurement technology lets you safely and easily measure THD and the dominant 5th- and 7th-order harmonics.

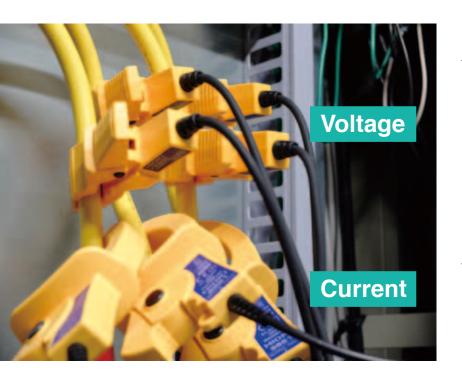

#### Measurement parameters

Harmonic voltage

Harmonic current

Voltage total harmonic distortion

Current total harmonic distortion

#### Screen displays

Voltage and current levels

Graph display

Voltage and current content percentage

List display

#### **Harmonic Display**

#### Display harmonics up to the 13th order

Display RMS and content percentage values for each harmonic order (via value list and graph displays)

The PW3365 can analyze voltage and current harmonic components from the fundamental wave to the 13th order on 50 Hz/60 Hz power lines.





**Harmonic Graph Display** 



Harmonic Value List Display

You can save maximum, average, and minimum values in binary format for each time interval to the instrument's SD card.


The Power Logger Viewer SF1001 is required in order to display data on a computer.





# Time-series display of harmonics


Select the fundamental wave, 3rd order, or 5th order for current harmonics to display a time-series graph.

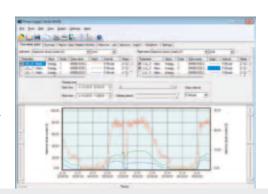

#### What causes harmonics?

Many electric devices incorporate power circuits with capacitor input. Such devices have rectification circuits to convert the AC power supply to DC power, and distortion in the resulting voltage and current waveforms causes harmonics.


# Power circuits that distort waveforms

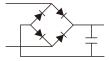

Typical power circuit



Voltage waveform and current waveform

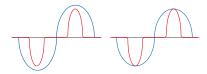


Current flows only near the peak of the voltage waveform, resulting in a voltage drop that flattens the peak portion of the voltage waveform.




#### **Analysis points**

Waveform as measured by an instrument designed for observing harmonics

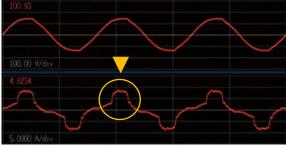


Current flows only near the peak of the voltage waveform

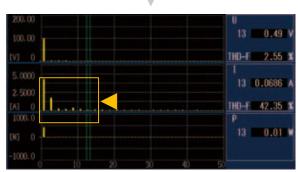

THD and dominant orders

Waveform as measured by the PW3365

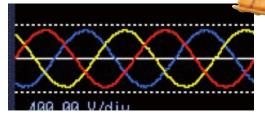



The PW3365 displays content percentages for each harmonic voltage order as well as the voltage total harmonic distortion (THD).



The instrument is especially useful for measuring the dominant 5th and 7th orders.

#### **Convenient Functions**

# For the Worksite

#### More Uses for the PW3365-20

The Hioki PW3365-20 is not just a power logger. Added-value features and functions let you meet many other electrical testing applications.

#### Leakage Current Measurement

#### Requires optional clamp-on leak sensor

#### Measure power + 1-channel of leakage current




do simple checks of intermittent leakage current. Choose from average, maximum and/or minimum value of the measured interval

I3 9675

Leakage current results

By capturing the RMS of the fundamental wave can also identify the leakage current of the 50/ the leakage current of the 50/60Hz component

RMS (A) RMS that includes harmonic components FND (A) RMS of fundamental wave PEAK (A) Peak value (waveform peak)

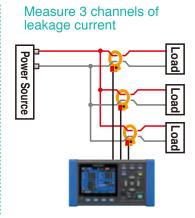


LAN

#### Control and monitor from a remote location

Use a LAN cable to connect the PW3365-20 to a personal computer for real-time remote monitoring and measurement display on a web browser.

Files recorded in the Clamp On Power Logger's internal memory or SD card are accessible via a LAN or USB connection, and are downloadable using the free PW3365-20 Setup and Download Software

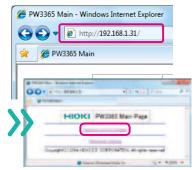


Enter the IP address in the browser.



Display the power logger's screen and make adjustments virtually by clicking the buttons and entering new information.

#### Simultaneous Measurements

Measure three single-phase, 2-wire circuits in the same system at the same time

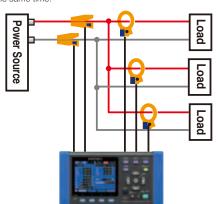

#### Other convenient features



### Small form factor lets you

set the power logger even inside cramped cubicles

#### Key lock function

Lock the buttons to prevent erroneous operation



#### **Battery power**

Power the instrument for about five hours with batteries if the power goes out

#### Display hold

Freeze the displayed value for easier reading



LAN

HUB . . . .

#### Outage recovery

Resume recording automatically following recovery from a power outage

#### Save & Analyze

# Results on a PC

# Easily download and interpret data on a PC

Download the measurement results to a computer via the power logger's LAN or USB interface or its SD card. Once data has been downloaded, it can be graphed easily with free software. For more detailed analysis, Hioki's optional SF1001 application software is recommended.

#### Storage media for data

#### SD card 2GB

Stores up to one year's data that is acquired at one minute intervals. Performance cannot be guaranteed on storage media other than SD cards sold by Hioki.



### Loading data

SD card 2GB

LAN interface



Use the free software from the Hioki website in order to download data to a computer using the instrument's LAN or USB interface

#### **Available Recording Time**

Measurement Interval	Save Time	Measurement Interval	Save Tim
1 seconds	15.6 days	30 seconds	1 year
2 seconds	31.2 days	1 minutes	1 year
5 seconds	77.9 days	2 minutes	1 year
10 seconds	155 days	5 minutes	1 year
15 seconds	233 days	More than 10 minites	1 year

[ Save conditions for above figures ] Measurement target : 3P4W

Storage media : Z4001 2-GB SD card

Saved parameters : All data: average, maximum, and minimum values

Screen copy saving : OFF Waveform save : OFF


In all cases, the maximum single file size for measurement data is about 200 MB. When this is exceeded, a new file is created and saving continues.

#### Freeware (free download from the Hioki website)

#### Software for configuring the PW3365 and downloading data


You can connect a computer to the PW3365 via LAN or USB to configure settings and download recorded data (which has been saved in the instrument's internal memory or on its SD card). You can also transfer settings data.




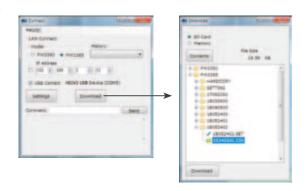

#### Automatic Excel graphing software for the PW3365

Install Hioki's automatic Excel graphing software for the PW3365 to automatically create graphs in Excel from measurement data.

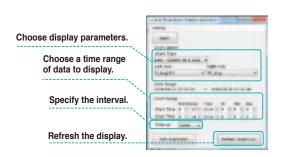

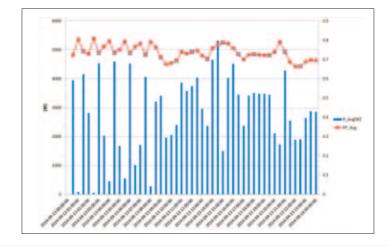

Save and Analyze Mea ment

# Results on a PC


# Use Hioki's Power Logger Viewer to gather, view, and compare data

Assessing the status quo is the first step in saving energy. Ascertain trends by simultaneously measuring the energy needed to maintain environmental conditions and the energy needed for production by using as many individual instruments as possible throughout plants and on individual department floors. Hioki's Power Logger Viewer SF1001 lets you download data saved at sites in the field to instruments' SD cards and internal memory to a computer to display, tabulate, analyze, and incorporate it into printed reports.


Collect data that reflects changes in multiple locations and compare to gain an understanding of the big picture

#### Example data use case 1


Simultaneously measure and record loads using three PW3365s.

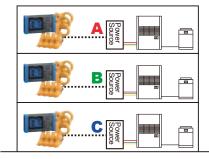

Building A

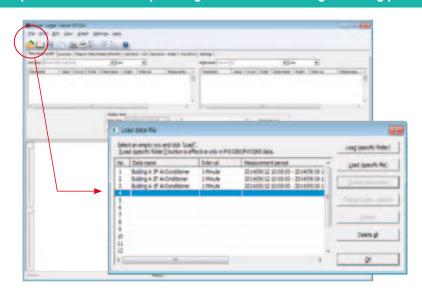

You can load data from multiple instruments.

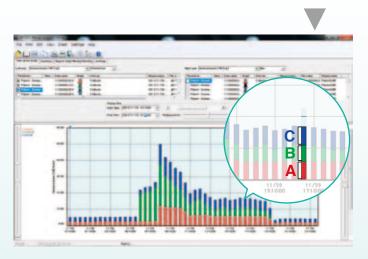

# Group power consumption data for multiple locations together and display on a single graph so that you can readily identify the times and locations that are characterized by high power consumption.

## Display easy-to-understand time-series graphs

Choose a line graph or bar graph depending on your purpose.


#### Consolidate data

Consolidate up to 16 sets of data into a single file so that it can be loaded more quickly.


#### Example data use case 2

Display data for measurements made at different times on a single graph

Functionality for changing the date associated with a set of data lets you change the time of data to facilitate comparison so that you can identify the benefits of energy-saving measures at a glance.

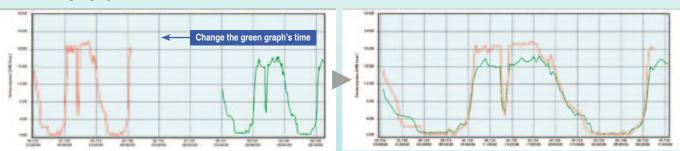

#### Generate daily and weekly reports to review survey results and benefits

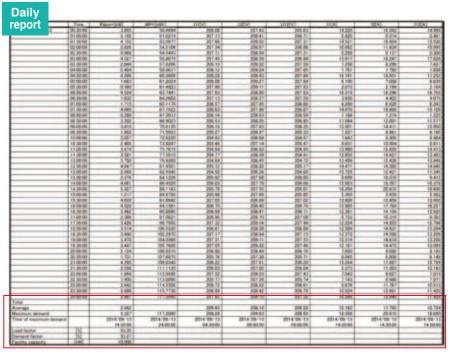

#### **Example data format**

#### Choose from four display formats

Form

Display data for a user-specified interval as a summary form.

Daily report

Tabulate data by demand time and display a form summarizing a one-day period.

Weekly report Tabulate data by day and display a form summarizing a one-week period.

Monthly report


Tabulate data by day and display a form summarizing a one-month period.

# Check average and maximum values as well as the time at which the maximum value occurred

(Maximum values for daily, weekly, and monthly reports indicate maximum values as tabulated by demand time.)

When demand power is selected, the following quantities are calculated:

Load rate and demand rate

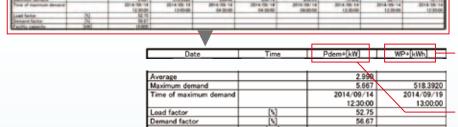

#### WP+ [kWh]: Active energy


Active energy (consumption) from the start of recording

#### Pdem+ [kW]: Active power demand value


Average active power value (consumption) for each interval

#### Display harmonics and waveform data, convert to CSV format, and save screenshots

Configure the PW3365's recording settings to save harmonic data and display harmonics using the SF1001.

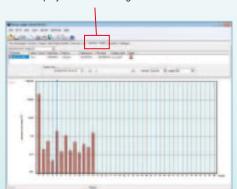

Configure the PW3365's settings to save waveforms and display them using the SF1001.

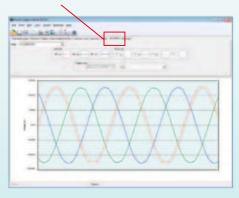

Convert binary data and save as a CSV file.

Weekly

report

Binary format

Harmonic data





Measurem	ent				
Number of inpu	t channels	Voltage: 3 channels / Current: 3 channels			
Measurement ta (50/60Hz)	Single-phase 2-wire (1P2W, 1P2W × 2 circuits, 1P2W × 3 circuits)  Single-phase 3-wire (1P3W, 1P3W+I, 1P3W1U, 1P3W1U+I)  Three-phase 3-wire (3P3W2M, 3P3W2M+I, 3P3W3M/Y-wiring only)  Three-phase 4-wire (3P4W), Current only: 1 to 3 channels		+I) wiring only)		
Simultaneous power/current measurement m	nodes	1P3W+I 3P3W2M	: 1 power circuit and 1 current ch +I : 1 power circuit and 1 current ch		
	Voltage	RMS valu	ie, fundamental wave value, wavefor	m peak (abs	olute value), fundamental wave phase angle, frequency (U1)
	Current	RMS valu	ie, fundamental wave value, wavefor	m peak (abs	olute value), fundamental wave phase angle
Measurement	Power	active ene	ower, reactive power, apparent power ergy (consumption, regeneration, reg ost display (per-kWh price × power c	eneration), re	or, (with lag/lead display) or displacement power factor (with lag/lead display), eactive energy(lag, lead)
items	Demand	reactive po	ower demand value (consumption, re- lower demand value (lag, lead), wer demand quantity (consumption, later demand value)		reactive power demand quantity (lag, lead),
	Harmonics	Harmonic	voltage, harmonic current, voltage to	tal harmonic	distortion (THD-F or THD-R), current total harmonic distortion (THD-F or TDH-R)
Voltage range		Display ra	ange: 5V to 520 V (less than 5 V displ	ays as 0 V) (	harmonic voltage value of 0 indicated for all orders when voltage RMS value is 0)
		Effective	measurement range: 90 V rms to 520	V rms, pea	ık: ±750V peak [OVER] indicates over-range warning
		CLAMP	ON SENSOR 9660	: 5/10/50/1	00 A
		CLAMP	ON SENSOR 9661	: 5/10/50/1	00/500 A
		CLAMP	ON SENSOR 9669	: 100/200/1	lk A
	Load	CLAMP	ON SENSOR 9694	: 500m/1/5	/10/50 A
	current	CLAMP	ON SENSOR 9695-02	: 500m/1/5	/10/50 A
		CLAMP	ON SENSOR 9695-03	: 5/10/50/1	00 A
Current ranges		AC FLEXIB	LE CURRENT SENSOR CT9667-01, -02, -03	: 50/100/50	00 A (500A range)
		AC FLEXIB	LE CURRENT SENSOR CT9667-01, -02, -03	: 500/1k/5l	x A (5000A range)
	Leakage	LEAK CI	LAMP ON SENSOR 9675	: 50m/100r	n/500m/1/5 A
	current		LAMP ON SENSOR 9657-10		m/500m/1/5 A
		Total display range: Within 0.4 to 130% of the range (zero is suppressed for less than 0.4%) (harmonic current value of 0 indicated for all orders when current RMS value is 0)			
Effective measurement range: Within 5 to 110% of the range [OVER] indicates over-range warning		ge [OVER] indicates over-range warning			
			200.00 W to 6.0000 MW  Depends on voltage/current combination and measured line type (see Measurement Range Configuration Tables)		
Power ranges		Total display range: Within 0 to 130% of the range ("0W" display indicates zero rms voltage and/or current)			
		Effective measurement area: Within 5 to 130% of the range			
Measurement a (50/60Hz)	ccuracy	Voltage: ±1.5% rdg. ±0.8 V (combined accuracy with PW3365-20 + PW9020) Current: ±0.3% rdg. ±0.1% f.s. + clamp sensor accuracy Active power: ±2.0% rdg. ±0.3% f.s. + clamp sensor accuracy (power factor = 1)			
Calculations		RMS calculation/ fundamental wave calculation			
VT ratio settings Any 0.01 to 9999.99 Select		Selections	1/60/100/200/300/600/700/1000/2000/2500/5000		
CT ratio settings		Any	0.01 to 9999.99	Selections	1/40/60/80/120/160/200/240/300/400/600/800/1200
Input methods		Voltage: Isolated inputs using Voltage Sensor PW9020 Current: Isolated input using a clamp-on sensor			
Display update	rate	Approx. 0.5 sec (except when accessing SD card or internal memory, or during LAN/USB communication)			
Measurement n	nethod	Digital sampling and zero cross synchronization calculation method Sampling: 10.24 kHz (2048 points) Calculation processing 50 Hz: Continuous, gapless measurement at 10 cycles 60 Hz: Continuous, gapless measurement at 12 cycles			

 $<sup>^{\</sup>ast 1}$  For individual clamp sensors' accuracy and combined accuracy figures, see pages 14 and 15.

Harmonic specifications			
Standard	IEC 61000-4-7:2002 (but without harmonics for intermediate orders)		
Window width	50 Hz: 10 cycles; 60 Hz: 12 cycles (with interpolation)		
Analyzed orders	Up to 13th order		
Analysis parameters	Harmonic levels: Voltage and current harmonic level for each order (With 3P3W2M connection, U12 and I12, which are calculated as part of third channel computations, are not displayed.) Harmonic content percentages: Voltage and current content percentages for each order; total harmonic distortion: voltage and current (THD-F or THD-R)		
Measurement accuracy	Harmonic level Voltage PW3365 alone: ±5% rdg. ±0.2% f.s. Combined accuracy for PW3365 and PW9020: ±30% rdg. ±3% f.s. (input for each order up to 5% of the fundamental wave, THD-F up to 10%) Current ±5% rdg. ±0.2% f.s. + sensor accuracy Total harmonic distortion: Accuracy not defined		

Screen display			
List	Voltage, current, frequency, active/apparent/reactive power power factor, integrated power use, elapsed time		
U/I	RMS value, fundamental wave value, waveform peak, phase angle		
Power	Per-channel and total active power, apparent power, reactive power,power factor		
Integ	Active energy, reactiv energy, recording start time recording stop time, elapsed time, energy cost		
Demand	Active power demand value, reactive power demand value power factor demand value		
Waveform	Displays voltage and current waveform		
Zoom	Enlarged view of 4 user-selected parameters		
Trend	For one selected measurement item (not including harmonics other than demand and THD) displays maximum, average and minimum values		
Harmonics	Displays voltage and current levels and content percentages as a graph or list		

Recording	
Save destination	SD Card, internal memory (capacity: approx. 320 KB)
Save interval time	1/2/5/10/15/30 seconds, 1/2/5/10/15/20/30/60 minutes Available storage time is displayed on the PW3365-20's setting screen
Save items	Measurement save : Average only/all (without harmonics)  Average only/all (with harmonics)  Screen save : Saves the displayed screen as a BMP at a fixed interval*  Waveform save : Stores binary waveform data* <sup>2</sup>
Recording start methods	Interval time, manual, or at specified time, repeat
Recording stop methods	Manual, or at specified time (up to one year), timer

 $<sup>^{*1}</sup>$  The minimum interval time for saving screen copies is 5 min. If the setting is less than 5 min., screen copies will be saved every 5 min.

<sup>\*2</sup> With shortest interval of 1 minute. When set to less than 1 minute, waveforms are saved once every minute

External interfaces		
SD card	Settings data, measurement data, screen data, waveform data	
LAN	10BASE-T/100BASE-TX IEEE802.3 Compliance - HTTP server function, FTP client function	
USB	USB Ver 2.0, Windows 10 (32/64bit)/Windows 8 (32/64bit)/ Windows 7 (32/64bit) / Vista (32bit) /XP - When connected to a computer, the SD Card and internal memory are recognized as removable storage devices.	
LAN/USB	Download settings and data using free application program	

General			
Product guarantee	3 year		
	3.5 inch TFT color LCD (320 × 240 pixel)		
Display	Japanese, English, Chinese, German, Italian, French, Spanish, Turkish Backlight auto-off function (after 2 minutes) When AUTO OFF is active, the Power LED blinks		
Operating environment	Indoors, Pollution degree 2, altitude up to 2000 m (6562-ft.)		
Operating temperature and humidity (no condensation)	-10°C to 50°C (14°F to 122°F), 80% RH or less During battery operation: 0°C to 40°C (32°F to 104°F), 80% RH or less During battery charging: 10°C to 40°C (50°F to 104°F), 80% RH or less		
Storage temperature and humidity (no condensation)	0°C to 60°C (32°F to 140°F), 80% RH or less However, the battery's storage temperature range is -10°C to 30°C (14°F to 86°F)		
Maximum rated voltage between terminals	Voltage input section: 1.7 VAC, 2.4 Vpeak Current input section: 1.7 VAC, 2.4 Vpeak		
Maximum rated voltage to earth	Voltage input section: 600V Measurement Category III 300V Measurement Category IV Current input section: Depends on clamp sensor in use.		
Dielectric strength	7.06 kVrms AC		
Applicable standards	Safety: EN61010, EMC: EN61326		
Power supply	(1) Z1008 AC Adapter : 100 VAC to 240 VAC Maximum rated power : 45VA (including AC adapter) (2) Model 9459 Battery Pack : Ni-MH DC7.2 V 2700 mAh Continuous battery operation time Approx. 5 hr. Maximum rated power : 3VA		
Charge function	Charge time: Max. 6 hr. 10 min. (reference value at 23°C) Charges the battery regardless of whether the instrument is on or off		
Backup battery life	Clock and settings (Lithium battery), Approx. 10 years @23°C (@73.4°F)		
Dimensions	Approx. 180W(7.09") × 100H(3.94") × 48D (1.89") mm (without PW9002)		
חווופוופוטוט	Approx. 180W(7.09") × 100H(3.94") × 68D (2.68") mm (with PW9002)		
Mass	Approx. 540g (19 oz) (without PW9002), Approx. 820g (28.9 oz) (with PW9002)		
Accessories	SAFETY VOLTAGE SENSOR PW9020 (4) AC ADAPTER Z1008 (1) USB cable (1) Instruction manual (1) Measurement guide (1) Red, green, yellow, and white color clips (4 each) Spiral tubes (10)		


#### POWER LOGGER VIEWER SF1001 Specifications

Functions		
Trend graph display function	Display items Voltage, current, active power, reactive power, apparent power, power factor, frequency, integrated active power, integrated reactive power, demand volume, demand value, voltage disequilibrium factor	
, ,	Stacked bar graph display: Up to 16 types of data series	
	Cursor measurements Measurement values can be displayed by the cursor	
	Displayed items are the same as for the trend Graph Display	
Summary dis- play function	Daily, weekly and monthly report displays: Accumulates and displays daily, weekly and monthly reports over specified period.	
	Load factor calculation display: Calculates and displays load factor and demand factor results with daily, weekly and monthly reports	
	Time span aggregation: Aggregates data into up to four specified time spans	
Waveform display	Displays waveform data at specified date and time	
Copy function	Captures any display image to the clipboard	

Preview and print content shown on the trend graph, report, harmonic graph and settings displays.	
Comment entry (Text comments can be entered in any printout)	
Header/Footer settings: Sets the header and footer for each printout	
Printing support Any color or monochrome printing supported by the operating system	
Print (static) contents over a specific time period	
Output contents: Standard or selected output items	
Available output items: Trend graph, summary, daily report, waveform	
Report creation method: Standard print	
Report output settings: Save/load report output settings	

General Specifications		
Supported models	PW3365-20 / PW3360-20 / PW3360-21 LR5000 series; Data previously loaded by the LR5000 Utility (.hrp2 format) using a PC	
Supported computer operating systems	Windows 10 (32/64bit) Windows 8 (32/64bit) Windows 7 SP1 or later (32/64bit)	

#### Current CLAMP

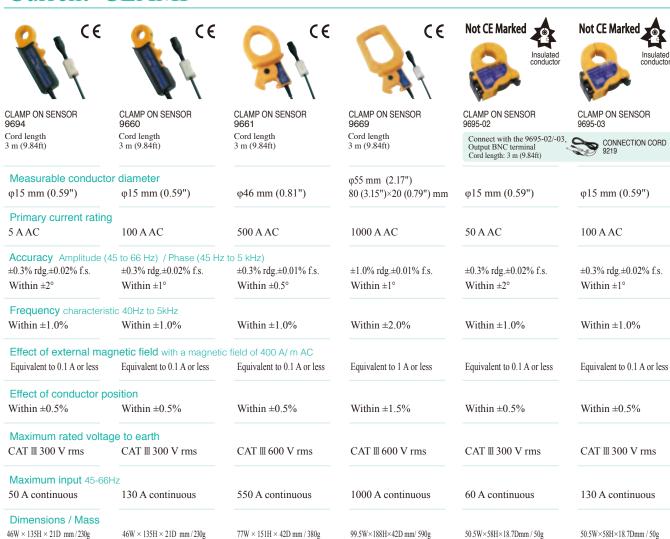

 $(3.03") \times (5.94") \times (1.65") / (13.4 \text{ oz})$ 



 $(1.81") \times (5.31") \times (0.83") / (8.1 \text{ oz})$ 



Cord length: Sensor - circuit: 2 m (6.56ft), Circuit - connector: 1 m (3.28ft)

 $(1.81") \times (5.31") \times (0.83") / (8.1 \text{ oz})$ 

Measurable conductor diameter	CT9667-01 : $\phi 100$ mm, CT9667-02 : $\phi 180$ mm CT9667-03 : $\phi 254$ mm	
Primary current rating	AC500 A/ AC5000 A (Switchable)	
Accuracy 45-66Hz	$\pm 2.0\%$ rdg $\pm 0.3\%$ f.s. / Within $\pm 1^{\circ}$	
Frequency 10-20kHz	Within ± 3dB	
Effect of external magnetic field	1.5% / f.s. or less	
Effect of conductor position	Within ± 3%	
Maximum rated voltage to earth	CAT III 1000 V ms / CAT IV 600 V ms	
Maximum input 45-66Hz	10000 A continuous	
Dimensions / Mass	Circuit box: 35W×120.5H×34D CT9667-01, -02: 280g, CT9667-03: 470g	
Power supply	LR06 alkaline battery × 2 or AC ADAPTER 9445-02/9445-03 (optional)	



(3.92")×(7.40")×(1.65") / (20.8 oz)

(2.28")×(2.28")× (0.74") / (1.8 oz)



Cord length: 3 m (9.84ft)



(2.28")×(2.28")×(0.74") / (1.8 oz)

CLAMP ON LEAK SENSOR 9675 Leakage Current Measurement Only Cord length: 3 m (9.84ft)

cora rengan i a m (sio m)	Cora rengar 15 m (516 m)
φ40 mm	φ30 mm
AC 10 A*	AC 10 A*
±1.0% rdg ±0.05% f.s. / Within ±3°	$\pm 1.0\%$ rdg $\pm 0.05\%$ f.s. / Within $\pm 5^{\circ}$
Within ± 5%	Within ± 5%
7.5 mA max.	7.5 mA max.
Within ±0.1%	Within ±0.1%
Insulated conductor	Insulated conductor
30A continuous	10A continuous
74W× 145H × 42D / 380g	60W×112.5H × 23.6D / 160g
Not used for power measurements *Maximum AC measurement range with PW3365-20 is 5 A	Not used for power measurements *Maximum AC measurement range with PW3365-20 is 5 A
	φ40 mm  AC 10 A*  ±1.0% rdg ±0.05% f.s./Within ±3°  Within ± 5%  7.5 mA max.  Within ±0.1%  Insulated conductor  30A continuous  74W× 145H × 42D / 380g  Not used for power measurements  *Maximum AC measurement range with

#### Measurement Range Configurations

#### CLAMP ON SENSOR 9694 / 9695-02 Current Voltage Connection 500.00 mA 1.0000 A 5.0000 A 10.000 A 50.000 A 1P2W 200.00 W 400.00 W 2.0000 kW 4.0000 kW 20.000 kW 1P3W 1P3W1U 400.0V 400.00 W 800.00 W 4.0000 kW 8.0000 kW 40.000 kW 3P3W2M 3P3W3M 600.00 W | 1.2000 kW | 6.0000 kW | 12.000 kW | 60.000 kW 3P4W

CLAMF	CLAMP ON SENSOR 9660 / 9695-03 / 9661*2					
Voltage	Connection		Current			9661only
voltage	Connection	5.0000 A	10.000 A	50.000 A	100.00 A	500.00 A
	1P2W	2.0000 kW	4.0000 kW	20.000 kW	40.000 kW	200.00 kW
400.0V	1P3W 1P3W1U 3P3W2M 3P3W3M	4.0000 kW	8.0000 kW	40.000 kW	80.000 kW	400.00 kW
	3P4W	6.0000 kW	12.000 kW	60.000 kW	120.00 kW	600.00 kW

CLAMP ON SENSOR 9669				
Valtaria	Connection		Current	
Voltage	Connection	100.00 A	Current 200.00 A 80.000 kW	1.0000 kA
	1P2W	40.000 kW	80.000 kW	400.00 kW
400.0V	1P3W 1P3W1U 3P3W2M 3P3W3M	80.000 kW	160.00 kW	800.00 kW
	3P4W	120.00 kW	240.00 kW	1.2000 MW

AC FLE	AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03 (5kA)				
Voltage	Connection		Current		
voitage	Connection	500.00 A	1.0000 kA	5.0000 kA	
	1P2W	200.00 kW	400.00 kW	2.0000 MW	
400.0V	1P3W 1P3W1U 3P3W2M 3P3W3M	400.00 kW	800.00 kW	4.0000 MW	
	3P4W	600.00 kW	1.2000 MW	6.0000 MW	

AC FLE	AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03 (500A)				
\/altaaa	Connection		Current		
Voltage	CONTRECTION	50.00 A	100.00 A	500.00 A	
	1P2W	20.000 kW	40.000 kW	200.00 kW	
400.0V	1P3W 1P3W1U 3P3W2M 3P3W3M	40.000 kW	80.000 kW	400.00 kW	
	3P4W	60.000 kW	120.00 kW	600.00 kW	

Leak current: CLAMP ON LEAK SENSOR 9657-10, 9675

Range 50.000 mA / 100.00 mA / 500.00 mA / 1.0000 A / 5.0000 A

### Combined Accuracy PW3365-20 + PW9020 + clamp sensors

Range	9694	9695-02
50.000 A	-	±2.3% rdg. ±0.32% f.s.
10.000 A	-	±2.3% rdg. ±0.4% f.s.
5.0000 A	±2.3% rdg. ±0.32% f.s.	±2.3% rdg. ±0.5% f.s.
1.0000 A	±2.3% rdg. ±0.4% f.s.	±2.3% rdg. ±1.3% f.s.
500.00 mA	±2.3% rdg. ±0.5% f.s.	±2.3% rdg. ±2.3% f.s.

Range	9660, 9695-03	9661
500.00 A	-	±2.3% rdg. ±0.31% f.s.
100.00 A	±2.3% rdg. ±0.32% f.s.	±2.3% rdg. ±0.35% f.s.
50.000 A	±2.3% rdg. ±0.34% f.s.	±2.3% rdg. ±0.4% f.s.
10.000 A	±2.3% rdg. ±0.5% f.s.	±2.3% rdg. ±0.8% f.s.
5.0000 A	±2.3% rdg. ±0.7% f.s.	±2.3% rdg. ±1.3% f.s.

Range	9669
1.0000 kA	±3% rdg. ±0.31% f.s.
200.00 A	±3% rdg. ±0.35% f.s.
100.00 A	±3% rdg. ±0.4% f.s.

Range	CT9667-01, -02, -03 5.000kA range	CT9667-01, -02, -03 500A range
5.0000 kA	±4% rdg. ±0.6% f.s.	-
1.0000 kA	±4% rdg. ±1.8% f.s.	-
500.00 A	±4% rdg. ±3.3% f.s.	±4% rdg. ±0.6% f.s.
100.00 A	-	±4% rdg. ±1.8% f.s.
50.000 A	-	±4% rdg. ±3.3% f.s.

Conditions of guaranteed accuracy	After 30 minute warm-up, with 50/60 Hz sine wave input voltage to earth 400V or less
Temperature and humidity for guaranteed accuracy	23°C ±5°C (73 ± 9°F), 80%RH or less (applies to all specifications unless otherwise noted)
Display area of guaranteed accuracy	Effective measurement range
Real-time clock accuracy	Within ±0.3 sec/day (with power on, within specified operating temperature and humidity ranges)
Temperature characteristic	Within ±0.1% f.s./ °C (except 23 ±5°C)
Effect of external magnetic field	Within ±1.5% f.s. (in a magnetic field of 400 A/m rms AC, 50/60 Hz)
Effect of radiated, radio-frequency, electromagnetic field	Within ±5% f.s. for voltage and active power at 10 V/m

Apparent power	±1 dgt. for the calculation obtained from each measurement value
Ponetive newer	Fundamental waveform calculations ±2.0% rdg. ±3.0% f.s. + clamp-on sensor accuracy (w/power factor = 1)
Reactive power	Rms calculations From each measurement applied to calculation ±1 dgt.
Energy	Active and reactive power measurement accuracies ±1 dgt.
Power factor	From each measurement applied to calculation ±1 dgt.
Frequency	±0.5% rdg. (with 90 to 520 V sine wave input)
Demand value	Active and reactive power measurement accuracies ±1 dgt.
Demand quantity	Active and reactive power measurement accuracies ±1 dgt.

 $<sup>^{\</sup>rm *I}$  For the 9694 sensor, the range of guaranteed accuracy is from 500 mA to 5 A, and for the 9695-02, from 500 mA to 50 A.

#### Current Display and Effective Measurement Ranges

#### typical

		Total display range	Effective meas	urement range	Total display range	Effective peak
	Range	1 , 0		<u> </u>	1 , 0	LifeClive peak
		Minimum	Minimum	Maximum	Maximum	Range
Voltage	400 V Range	5.0 V	90.0 V	520.0 V	520.0 V	±750 Vpeak
	5 A Range	0.0200 A	0.2500 A	5.5000 A	6.5000 A	±20 Apeak
	10 A Range	0.040 A	0.500 A	11.000 A	13.000 A	±40 Apeak
Current	50 A Range	0.200 A	2.500 A	55.000 A	65.000 A	±200 Apeak
	100 A Range	0.40 A	5.00 A	110.00 A	130.00 A	±400 Apeak
	500 A Range	2.00 A	25.00 A	550.00 A	650.00 A	±1000 Apeak

 $<sup>^{*2}</sup>$  For the 9660 and 9695-03 sensors, the range of guaranteed accuracy is from 5 A to 100 A and for the 9661, from 5 A to 500 A.



Model: CLAMP ON POWER LOGGER PW3365


Model No. (Order Code) (Note)

PW3365-20 (English model, main unit only)

#### Accessories

• SAFETY VOLTAGE SENSOR PW9020	×4	
AC ADAPTER Z1008	×1	1
<ul> <li>USB cable (0.9 m, 2.95 ft length)</li> </ul>	×1	-
Instruction manual	×1	
Measurement guide	×1	1
<ul> <li>Color clips (red, green, yellow, white)</li> </ul>	4 each	
Spiral tubes	×10	

saving measurement data (options, sold separately).

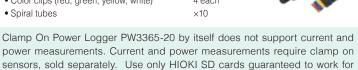

#### **Options**


CLAMP ON SENSOR (for load current measurement)			
	CLAMP ON SENSOR	9694	(AC 5 A)
	CLAMP ON SENSOR	9660	(AC 100 A)
	CLAMP ON SENSOR	9661	(AC 500 A)
	CLAMP ON SENSOR	9669	(AC 1000 A)
	AC FLEXIBLE CURRENT SENSOR	CT9667-01	(AC 500 A/ 5000 A)
	AC FLEXIBLE CURRENT SENSOR	CT9667-02	(AC 500 A/ 5000 A)
	AC FLEXIBLE CURRENT SENSOR	CT9667-03	(AC 500 A/ 5000 A)
	CLAMP ON SENSOR (Not CE marked) *	9695-02	(AC 50 A)
	CLAMP ON SENSOR (Not CE marked) *	9695-03	(AC 100 A)
	CONNECTION CORD	9219	(for connection to 9695-02, 9695-03)
* When purchasing the 9695-02 and 9695-03, we recommend also purchasing			

When purchasing the 9695-02 and 9695-03, we recommend also purchasing the separately sold 9219 Connection Cord.

#### CLAMP ON LEAK SENSOR (for leakage current measurement)

CLAMP ON LEAK SENSOR 9657-10 CLAMP ON LEAK SENSOR 9675

#### CLAMP ON ADAPTER 9290-10

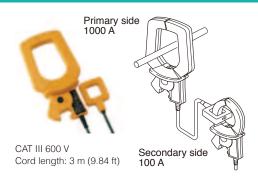

#### Measurable conductor diameter

φ55 mm (2.17 in)

Bus bar: 80 mm (3.46in) 5 20 mm (0.79 in)

CT ratio : 10:1

MAX. 1500 A AC (continuous: 1000 A)

#### POWER LOGGER VIEWER SF1001



#### Supported computer operating systems

Trend graph display function Summary display function Waveform display, Print function Report printing

#### BATTERY SET PW9002



Battery Case and Battery Pack Set

#### **BATTERY PACK 9459**

For purchase as replacement battery pack

#### SAFETY VOLTAGE SENSOR PW9020



PW3365-20 is bundled with 4 sensors Additional single sensors also available Cord length: 3 m (9.84 ft)

# CARRYING CASE C1005/C1008



C1005 Dimension: 390 W (15.4") 275 H (10.8") (Approx) 110 D (4.3") mm



C1008 390 W (154") 275 H (10.8") 150 D (5.9") mm

#### **AC ADAPTER Z1008**

#### SD MEMORY CARD 8GB Z4003





Straight Ethernet cable, supplied with straight to cross conversion adapter, 5 m (16.41 ft) length

Includes standard For separate purchase

Stores up to one year's data when acquired at one minute intervals. Performance cannot be guaranteed on storage media other than Hioki-specified SD card options.

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies. DISTRIBUTED BY

HIOKI E.E. CORPORATION

**HEADQUARTERS** 81 Koizumi Ueda, Nagano 386-1192 Japan www.hioki.com

#### HIOKI USA CORPORATION

TEL +1-609-409-9109 FAX +1-609-409-9108 bioki@biokiusa.com / www.biokiusa.com

## HIOKI (Shanghai) SALES & TRADING CO., LTD. TEL +86-21-6391-0090/0092 FAX +86-21-6391-0360

info@hioki.com.cn / www.hioki.cn

HIOKI SINGAPORE PTE.LTD. TEL +65-6634-7677 FAX +65-6634-7477 info-sg@hioki.com.sg / www.hioki.com.sg

#### HIOKI KOREA CO., LTD.

TEL +82-2-2183-8847 FAX +82-2-2183-3360 info-kr@hioki.co.jp / www.hiokikorea.com

#### HIOKI EUROPE GmbH

TEL +49-6173-31856-0 FAX +49-6173-31856-25

(ES) Equipements Scientifiques SA - Département Tests Energie Mesures - 127 rue de Buzenval BP 26 - 92380 Garches Tél. 01 47 95 99 45 - Fax. 01 47 01 16 22 - e-mail: tem@es-france.com - Site Web: www.es-france.com

#### LAN CABLE 9642

